
Auger Connector (P.N. 50479) Installation

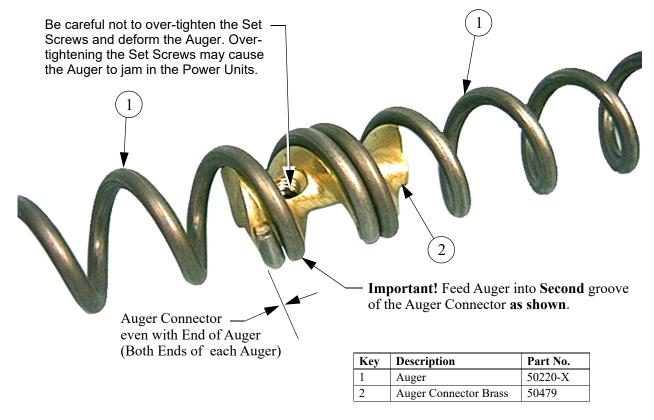

Round Music Wire Auger

Installation Instructions

- 1. Before stretching, allow the Auger to relax to its free length.
- 2. The amount of stretch required is 2" per 50' (50 mm per 15.2 m) of Actual Auger length. For Example: If the system has an Actual length of 300' (91.4 m) of Auger, the required Auger stretch is 12" (305 mm)
- 3. Cut the Auger and file the end smooth so that there are **no** sharp edges.
- 4. Screw the Auger Connector into one end of the Auger. Feed the Auger into second groove of the Auger Connector **as shown in Figure below**.
- 5. Untwist the other end of the Auger 1-1/2 turns so that when it is threaded into the other end of the Auger it will return to the relaxed state. Auger ends must be overlapped—**Not Butted**, when threaded into the track of Connector.
- 6. Stretch the Auger and twist the Auger ends together. Both ends of the Auger should be even with the end of the Connector, as shown below.
- 7. Tighten each Set Screw until it touches the Auger. Then tighten 1/2 turn. If Auger can be unscrewed by hand then tighten an additional 1/4 turn. DO NOT TIGHTEN MORE THAN 3/4 TURN.
- 8. File both ends of the Auger so that they are the same diameter as the rest of the Auger.



Revisions to this Manual



MADE TO WORK. BUILT TO LAST.®

Page No.

2

Description of Change Added (50479) and "Music" to description Added back page **ECO** 33351

For additional parts and information, contact your nearest Chore-Time distributor or representative. Find your nearest distributor at: www.choretime.com/contacts

> Chore-Time Group, A division of CTB, Inc. PO Box 2000 Milford, Indiana 46542-2000 USA Phone (574) 658-4101 Fax (877) 730-8825 Email: choretime@choretime.com Internet: www.choretime.com