

EGG COUNTER OPERATION & WIRING

WIRING

Use <u>water-tight</u> connectors on the Counter Junction Box and Counter Box Assembly. The reliability of the counters depends on a dry, clean environment inside the boxes. NOTE: The warranty is voided if water-tight connectors are not used.

A 20 gauge, 7-conductor wire, for 3-Hi Collectors, or a 20 guage, 9-conductor wire, for 4-Hi Collectors, that meets local and national electric codes is recommended to connect the Counter Junction Box to the Counter Box Assembly.

CAUTION When fastening the wire to the building or equipment do not:

- --kink the wire
- --place it against sharp objects
- --short the wire by installing metal straps or staples so that they cut the insulation
- --route the wires anywhere the birds can reach them


See the wiring diagram on page 2 or on page 3 to wire the counters.


OPERATION

The counter may be reset using the red button on the front of each counter. DO NOT RESET THE COUNTER WHILE THE COLLECTOR IS OPERATING.

Use only Dura-cell ("D" size) batteries for replacement of the power supply. Replace the batteries in the position indicated by the decal.

The system operates on a 9 volt D.C. supply.

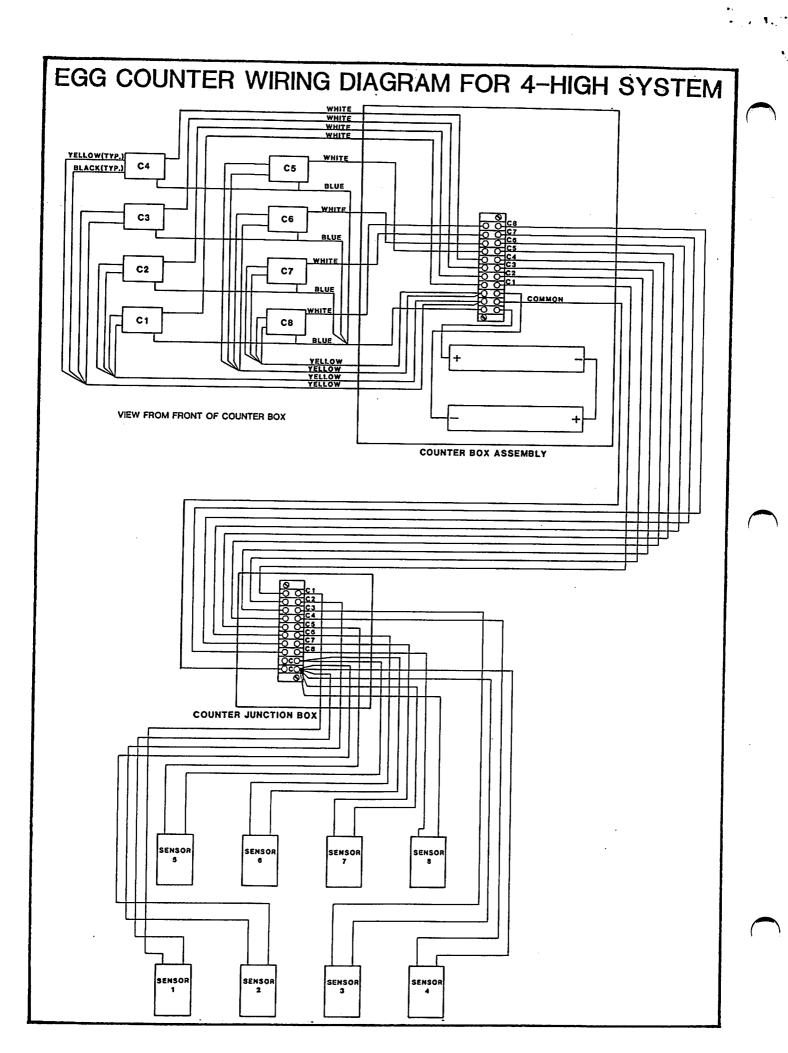

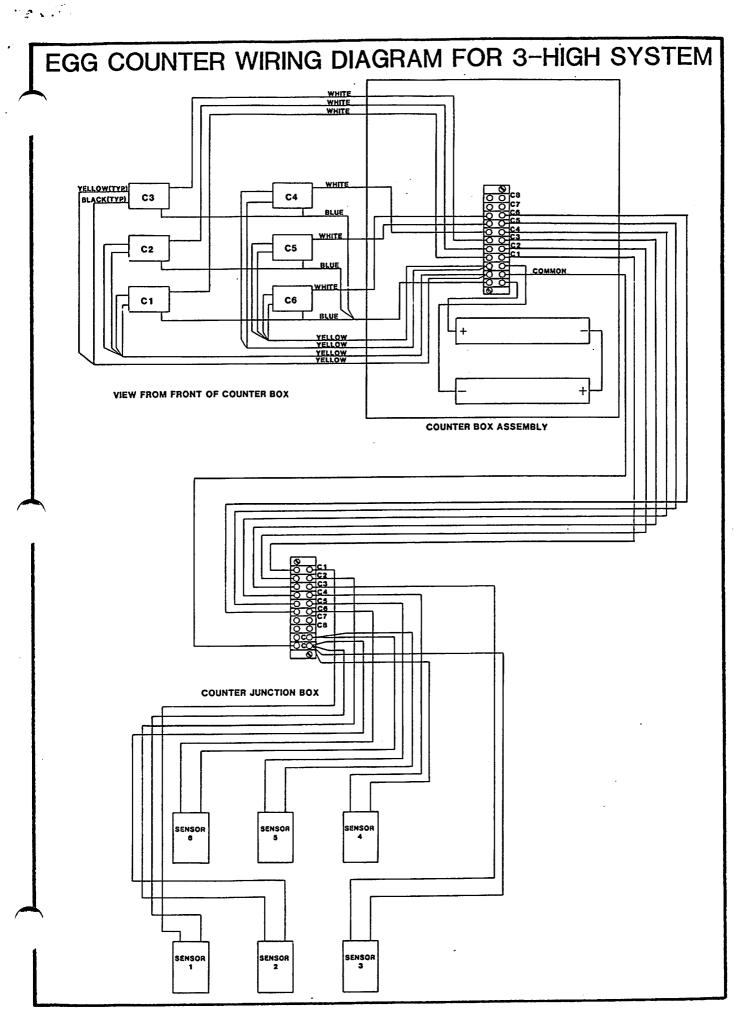



Printed in U.S.A.