




ULTRAFLO® Breeder Feeder Boot Component Installation

Install the ULTRAFLO Boot Components as shown in the diagram below. Refer to the ULTRAFLO® Breeder Feeder Installation Manual (MF827) for system installation information.

NOTE: SHOWN STANDING INSIDE THE LOOP.

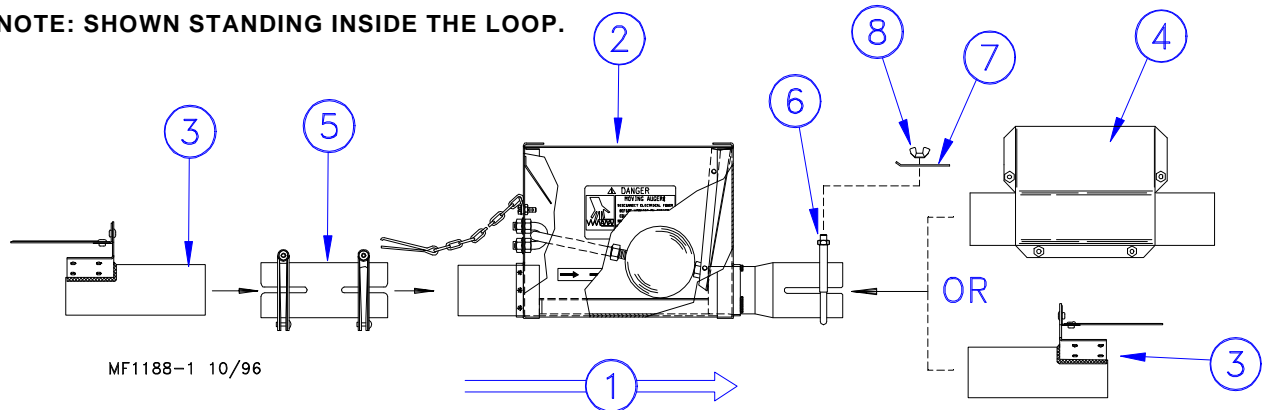

MF1188-1 10/96

Item	Description
------	-------------

- | | |
|---|---|
| 1 | Direction of Auger Travel |
| 2 | ULTRAFLO Boot Assembly (Part No. 35580) |
| 3 | End Cap |

Item	Description
------	-------------

- | | |
|---|--------------------|
| 5 | Tube Connector Kit |
| 6 | Clamp |
| 7 | Clean-Out Lock |
| 8 | 5/16-18 Wing Nut |


MF1188A
October 1996



ULTRAFLO® Breeder Feeder Boot Component Installation

Install the ULTRAFLO Boot Components as shown in the diagram below. Refer to the ULTRAFLO® Breeder Feeder Installation Manual (MF827) for system installation information.

NOTE: SHOWN STANDING INSIDE THE LOOP.

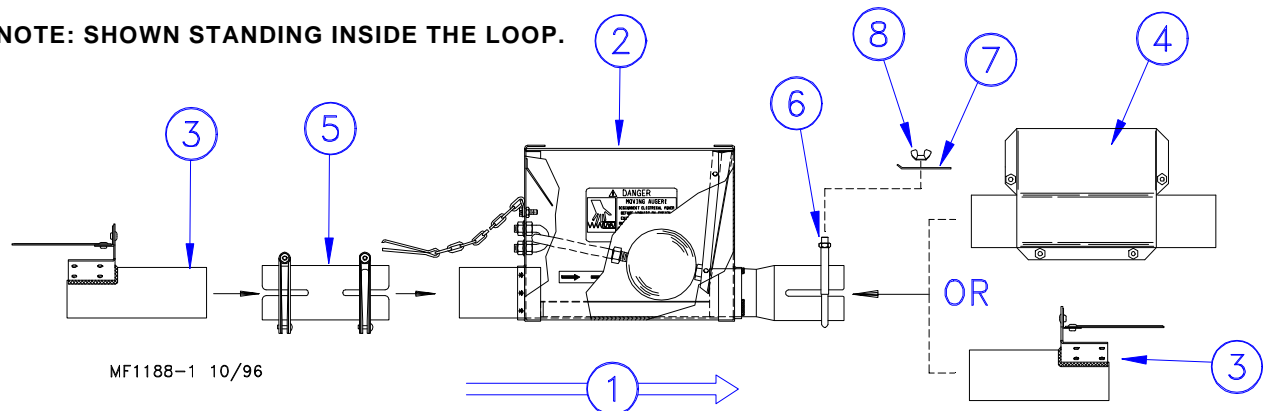

MF1188-1 10/96

Item	Description
------	-------------

- | | |
|---|---|
| 1 | Direction of Auger Travel |
| 2 | ULTRAFLO Boot Assembly (Part No. 35580) |
| 3 | End Cap |

Item	Description
------	-------------

- | | |
|---|--------------------|
| 5 | Tube Connector Kit |
| 6 | Clamp |
| 7 | Clean-Out Lock |
| 8 | 5/16-18 Wing Nut |

MF1188A
October 1996