


Floor Feeder  
Repair Parts Manual  
Volume I  
(March 1990)

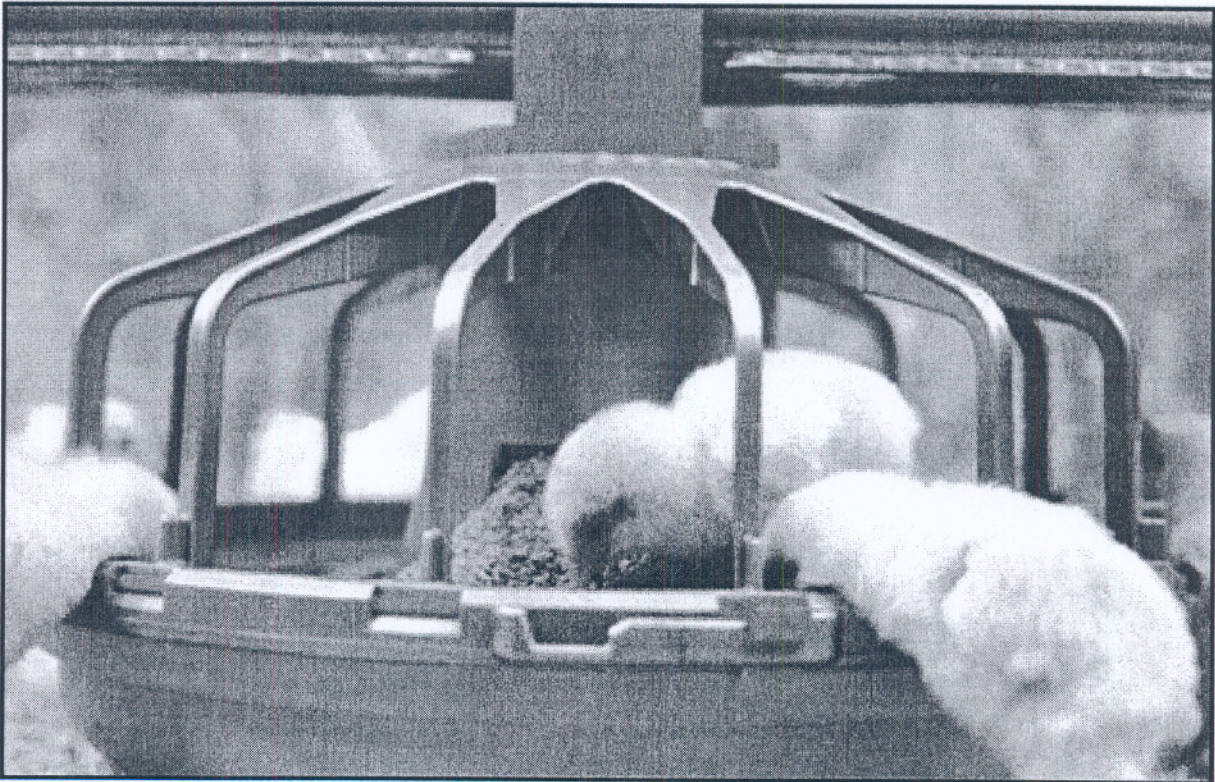



# Purpose of the Repair Parts Manual

The purpose of the Repair Parts Manuals is to provide the CHORE-TIME Distributors & Dealers a listing of current and discontinued parts for their reference in identifying and/or ordering parts.

Note: The Floor Feeder Repair Parts Manual has been divided into two separate volumes; Volume I & Volume II.

**Volume I** includes Floor Feeder products up to March 1990.

**Volume II** includes Floor Feeder products that have been current anytime from March 1990 to September 1996.

Products that were current before and after March 1990 appear in both volumes.

Additional copies of this book may be ordered through the CHORE-TIME Customer Service Department. Refer to this manual by name, volume, and part number (MF1299) when ordering.

When ordering parts from this manual, please note the following:

1. Parts numbers that have a line through them (i.e. 3185) have been discontinued and are no longer available.
2. All parts should be ordered by part number and description as listed in the parts list.
3. All parts are billed when shipped. If a returned part is defective and within warranty, credit will be allowed against billing.
4. Check shipment for damages and shortages. All claims for damages or shortages resulting from shipping must be filed with the carrier.

## Table of Contents

Floor Feeder End Control Units - - - - -	3 - 16
Floor Feeder Intermediate Control Units - - - - -	17 - 24
Floor Feeder Power Units - - - - -	25 - 29
Floor Feeder Boots and Hoppers - - - - -	30 - 35
Floor Feeder Line Components - - - - -	36 - 42
Winches and Suspension Components - - - - -	43 - 46
Floor Feeder Miscellaneous Components - - - - -	47 - 51
Floor Feeder Controls and Switches - - - - -	52 - 65
Floor Feeder Scale System and Components - - - - -	66 - 71
ULTRAFLO Breeder Feeder - - - - -	72 - 78