



## Auger & Anchor Bearing Connection Installation


Thread the Auger (6820) onto the Anchor & Bearing assembly (39372) up to the washer.

Tighten the set screws until they touch the auger, then tighten a maximum of 1/2 turn.

Item	Description
------	-------------

- |   |                           |
|---|---------------------------|
| 1 | Thread auger through pins |
| 2 | Auger touching washer     |
| 3 | Set Screws                |

Note: Do not overtighten  
the set screw.

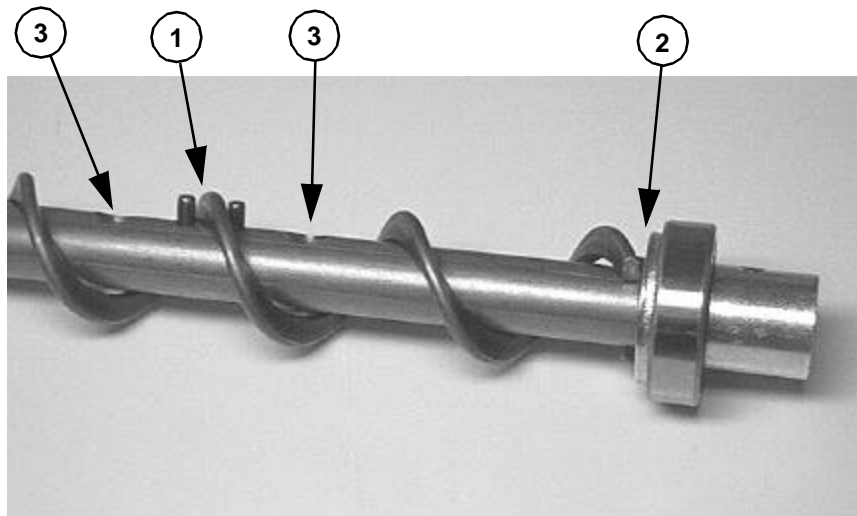

Chore-Time Equipment, A division of CTB, Inc.  
P.O. Box 2000 Milford, Indiana 46542-2000  
Phone: 219-658-4101

**MF1509A**  
May 1997



## Auger & Anchor Bearing Connection Installation


Thread the Auger (6820) onto the Anchor & Bearing assembly (39372) up to the washer.

Tighten the set screws until they touch the auger, then tighten a maximum of 1/2 turn.

Item	Description
------	-------------

- |   |                           |
|---|---------------------------|
| 1 | Thread auger through pins |
| 2 | Auger touching washer     |
| 3 | Set Screws                |

Note: Do not overtighten  
the set screw.

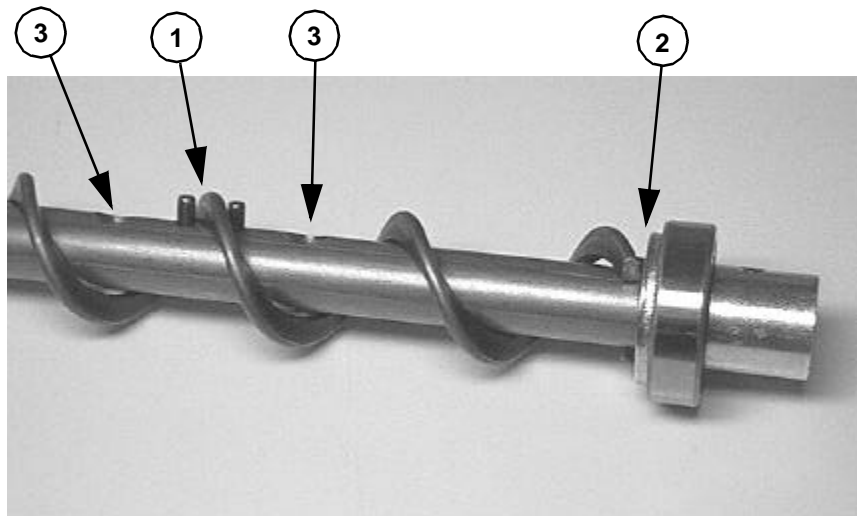

Chore-Time Equipment, A division of CTB, Inc.  
P.O. Box 2000 Milford, Indiana 46542-2000  
Phone: 219-658-4101

**MF1509A**  
May 1997