


Friction Pad Installation


1. On the tube locate an area 180 degrees from the chick hole.
2. Remove the oil from the tube in this area.
3. Install the friction pad in this area 180 degrees from the chick hole.
4. Slide the outlet assembly over the pad.

Make sure to center the hole in the tube over the hole in the outlet.

5. Use the hardware supplied to secure the outlet.

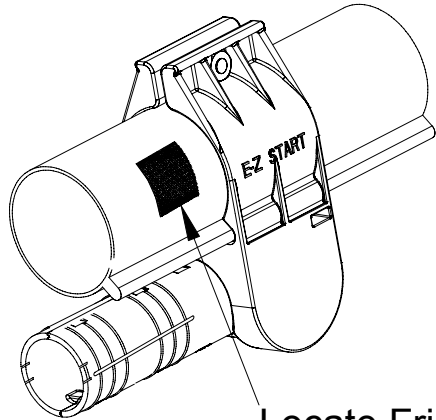

Locate Friction Pad
180 Degrees From Chick Hole

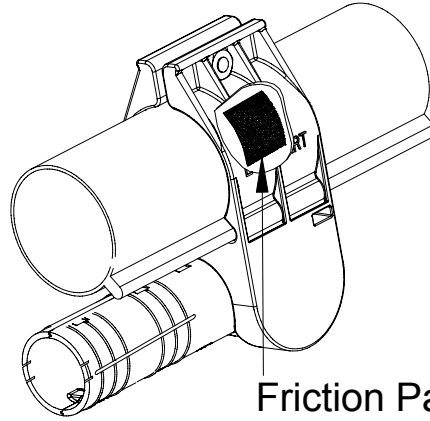

Friction Pad
Under The Outlet Assembly


April 2004
MF1829A

Friction Pad Installation


1. On the tube locate an area 180 degrees from the chick hole.
2. Remove the oil from the tube in this area.
3. Install the friction pad in this area 180 degrees from the chick hole.
4. Slide the outlet assembly over the pad.

Make sure to center the hole in the tube over the hole in the outlet.

5. Use the hardware supplied to secure the outlet..

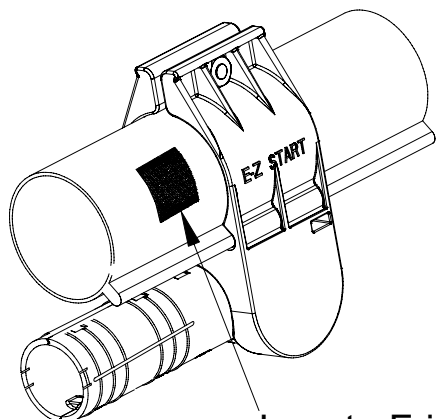

Locate Friction Pad
180 Degrees From Chick Hole

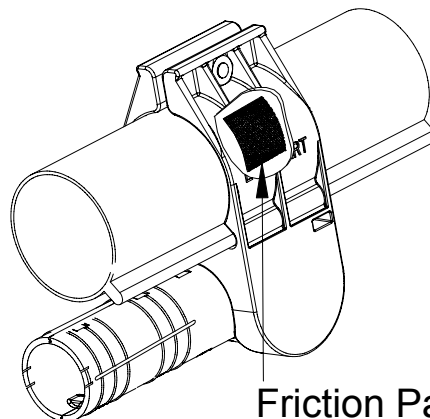

Friction Pad
Under The Outlet Assembly

April 2004
MF1829A