Operational Quick Reference Sheet for the

Model 200 Digital WEIGH-MATIC Indicator

Turning the Control ON & OFF

The Digital Weigh-Matic Indicator becomes activated when 12 volt power is supplied.

A brief message will be displayed ("HELLO"). The scale then selects the GROSS weighing mode.

GROSS mode displays the weight change since the unit was last ZERO/BAL-ANCED.

Pressing the ON key during normal system operation starts the self test.




Using the HELP Key

Pressing HELP while displaying weight will display information about the last key pressed.



Balancing the Scale

Press the NET/GROSS key and within three seconds, press the BAL/ZERO key.

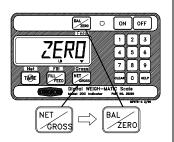

Tare Added Containers, etc.

Press TARE key to tare off any added weights, such as containers, carts, etc.



Selecting the NET or GROSS mode


Press the NET/GROSS key to toggle between NET and GROSS modes. Press the NET/GROSS key twice to get out of FILL/FEED mode.



Entering a Preset Weight


Use the numeric keypad to enter the desired preset weight value.

Press either NET/GROSS or FILL/FEED to enter the preset value and select the "display mode".

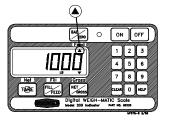

Clear the Preset or Preset Alarm


Press the CLEAR key.

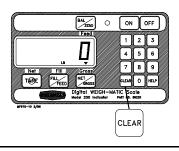

April 1996 MF977C2

Display Feed Remaining

Press the FILL/FEED key to display the amount of feed to be loaded or unloaded.

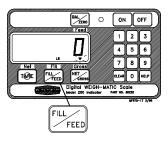

Display Total Feed Loaded

Press the NET/GROSS key to display total amount of feed loaded.



Changing the Display Language

The Model 200 Digital Weigh-Matic Indicators include a multilingual feature built in.

Five languages are available. They include the following; English, Dutch, French, German, and Spanish.

Follow the steps, below, to change the language to be displayed by your Indicator.

1. Press and hold the **NET/GROSS** key, then press the **ON** key.

Display: {Langag}

2. Press the **NET/GROSS** key to toggle through the languages available.

Display: $\{ENGLSH\}$ = English $\{NEDERL\}$ = Dutch $\{FRANCS\}$ = French $\{DEUTSH\}$ = German $\{ESPANL\}$ = Spanish

- 3. When the desired language is displayed, press the **ON** key.
- 4. Press and hold the TARE key, then press the ON key to exit the program.

The display will be in the language selected.