36" and 48" Cone Cover Manual



- 1. Starting at the top of the Cone place the edge of the Cone Cover over the lip of the cone.
- 2. Follow through until Cone Cover is in place.





The CHORE-TIME logo should be in an upright readable position. As shown.

NOTE: Be sure to remove Cone Cover when the fan is in use.

Chore-Time Equipment a Division of CTB, Inc. P.O. Box 2000 · Milford, Indiana 46542-2000 · U.S.A. Phone (219) 658-4101 · E-Mail: ctb@ctbinc.com

MV1410A September 1999



36" and 48" Cone Cover Manual

Used to cover the cone for 36" or 48" Cone Fans.

- 1. Starting at the top of the Cone place the edge of the Cone Cover over the lip of the cone.
- 2. Follow through until Cone Cover is in place.





The CHORE-TIME logo should be in an upright readable position. As shown.

NOTE: Be sure to remove Cone Cover when the fan is in use.

Chore-Time Equipment a Division of CTB, Inc. P.O. Box 2000 · Milford, Indiana 46542-2000 · U.S.A. Phone (219) 658-4101 · E-Mail: ctb@ctbinc.com

36" and 48" Cone Cover Manual



- 1. Starting at the top of the Cone place the edge of the Cone Cover over the lip of the cone.
- 2. Follow through until Cone Cover is in place.





The CHORE-TIME logo should be in an upright readable position. As shown.

NOTE: Be sure to remove Cone Cover when the fan is in use.

Chore-Time Equipment a Division of CTB, Inc. P.O. Box 2000 · Milford, Indiana 46542-2000 · U.S.A. Phone (219) 658-4101 · E-Mail: ctb@ctbinc.com

MV1410A September 1999



36" and 48" Cone Cover Manual

Used to cover the cone for 36" or 48" Cone Fans.

- 1. Starting at the top of the Cone place the edge of the Cone Cover over the lip of the cone.
- 2. Follow through until Cone Cover is in place.





The CHORE-TIME logo should be in an upright readable position. As shown.

NOTE: Be sure to remove Cone Cover when the fan is in use.

Chore-Time Equipment a Division of CTB, Inc. P.O. Box 2000 · Milford, Indiana 46542-2000 · U.S.A. Phone (219) 658-4101 · E-Mail: ctb@ctbinc.com