


Tunnel DoorInstallation Instruction Manual

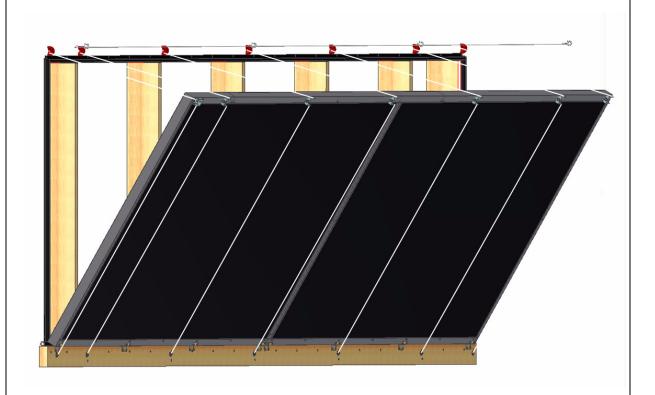

March 2009 MV2327A

Chore-Time Warranty Tunnel Door

Chore-Time Warranty

Chore-Time Equipment ("Chore-Time") warrants each new Chore-Time product manufactured by it to be free from defects in material or workmanship for one year from and after the date of initial installation by or for the original purchaser. If such a defect is found by the Manufacturer to exist within the one-year period, the Manufacturer will, at its option, (a) repair or replace such product free of charge, F.O.B. the factory of manufacture, or (b) refund to the original purchaser the original purchase price, in lieu of such repair or replacement. Labor costs associated with the replacement or repair of the product are not covered by the Manufacturer.

Conditions and Limitations

- 1. The product must be installed by and operated in accordance with the instructions published by the **Manufacturer or Warranty will be void**.
- 2. Warranty is void if **all components** of the system are not original equipment supplied by the **Manufacturer**.
- 3. This product must be purchased from and installed by an authorized distributor or certified representative thereof or the Warranty will be void.
- 4. Malfunctions or failure resulting from misuse, abuse, negligence, alteration, accident, or lack of proper maintenance shall not be considered defects under the Warranty.
- 5. This Warranty applies only to systems for the care of poultry and livestock. Other applications in industry or commerce are not covered by this Warranty.

The **Manufacturer** shall not be liable for any **Consequential or Special Damage** which any purchaser may suffer or claim to suffer as a result of any defect in the product. "**Consequential**" or "**Special Damages**" as used herein include, but are not limited to, lost or damaged products or goods, costs of transportation, lost sales, lost orders, lost income, increased overhead, labor and incidental costs and operational inefficiencies.

THIS WARRANTY CONSTITUTES THE MANUFACTURER'S ENTIRE AND SOLE WARRANTY AND THIS MANUFACTURER EXPRESSLY DISCLAIMS ANY AND ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, EXPRESS AND IMPLIED WARRANTIES AS TO MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSES SOLD AND DESCRIPTION OR OUALITY OF THE PRODUCT FURNISHED HEREUNDER.

Chore-Time Distributors are not authorized to modify or extend the terms and conditions of this Warranty in any manner or to offer or grant any other warranties for Chore-Time products in addition to those terms expressly stated above. An officer of CTB, Inc. must authorize any exceptions to this Warranty in writing. The Manufacturer reserves the right to change models and specifications at any time without notice or obligation to improve previous models.

Effective: March 2009

CTB Inc.
A Division of CTB, Inc.
P.O. Box 2000 • Milford, Indiana 46542-2000 • U.S.A.
Phone (574) 658-4101 • Fax (877) 730-8825
Email: ctb@ctbinc.com • Internet: http://www.ctbinc.com

Thank You

The employees of CTB Inc. would like to thank your for your recent Chore-Time purchase. If a problem should arise, your Chore-Time distributor can supply the necessary information to help you.

Contents

Topic Pa	age	User
Chore-Time Warranty	2	C,D
General. Support Information.		I,C
Safety Information		I,C
Tools Needed	4	I
Installation Planning		I
Installation. Top and Bottom Chalklines and 2 x 4 Door Support. Black P-Seal Installation Cable Suspension (Cable Version Only) Rope Screw Hook (Rope Version Only) Door Installation Adding Door Sections Installation of Split Bolts for Rope Attachments (Rope Version only) Cable Tensioner and Cable Installation (Cable Version Only) Installing Remaining Door Sections Last Door Section (Continued) Door Suspension Installation Installing Counter Weight Winch Installation Rope Attachment Cable Attachment Final Door Adjustment.	6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21	I
Itemized Parts	22	I,C
Part Numbers	23	I,C
Itemized Parts (Individual Doors)	24	I,C

General Tunnel Door

General

Support Information

The Chore-Time Tunnel Door is to be used to control the airflow in a Tunnel Ventilated poultry house. Using this equipment for any other purpose or in a way not within the operating recommendations specified in this manual will void the warranty and may cause personal injury.

This manual is designed to provide comprehensive planning, installation, safety, operation, and parts listing information. The Table of Contents provides a convenient overview of the information in this manual. The Table of Contents also specifies which pages contain information for the sales personnel, installer, and consumer (end user).

Safety Information

Caution, Warning and Danger Decals have been placed on the equipment to warn of potentially dangerous situations. Care should be taken to keep this information intact and easy to read at all times. Replace missing or damaged safety decals immediately.

Using the equipment for purposes other than specified in this manual may cause personal injury and/or damage to the equipment.

DANGER: Electrical Hazard

Disconnect electrical power before inspecting or servicing equipment Ground all electrical equipment for safety. All electrical wiring must be done by a qualified electrician in accordance with local and national electric codes. Ground all non-current carrying metal parts to guard against electrical shock. With the exception of motor overload protection, electrical disconnects and over current protection are not supplied with the equipment.



Tools Needed

Tape Measurer

Chalkline

Electric Drill

- -Square Driver Bit
- -3/8" Hex Socket
- Screwhook Driver Bit
- -1/2" Drill Bit (For Doors with Rope Suspension)

Hammer

Knife


Tin Snips


Installation Planning

Framed Opening


Winch Capacity- approximately 20 lbs/ft of Door length

Wall should be flat within 1/8" per 4' to ensure a good seal around the Doors

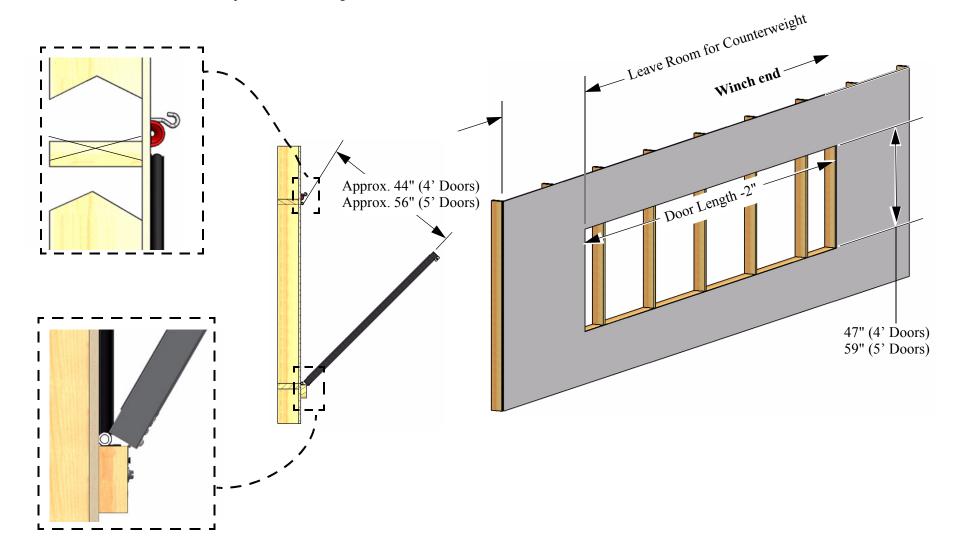


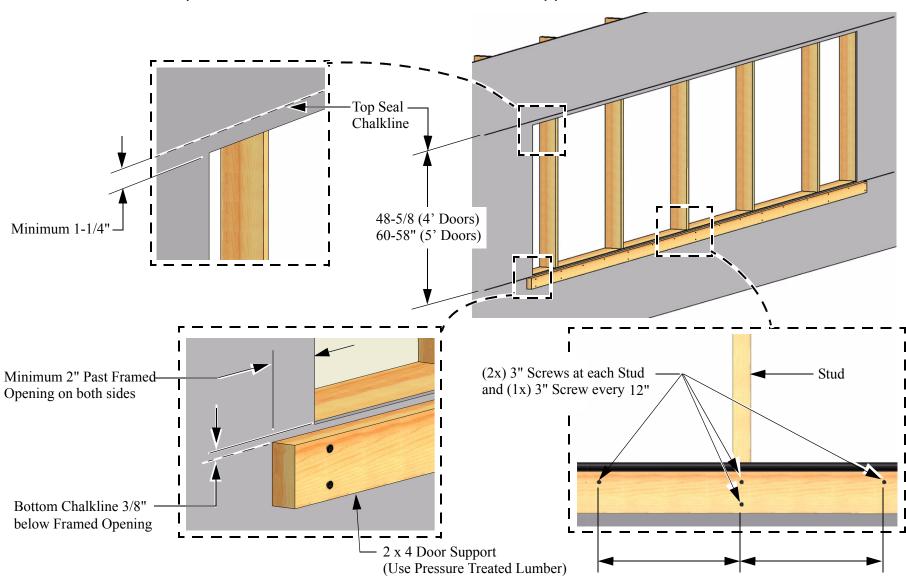


Black P-Seal Installation

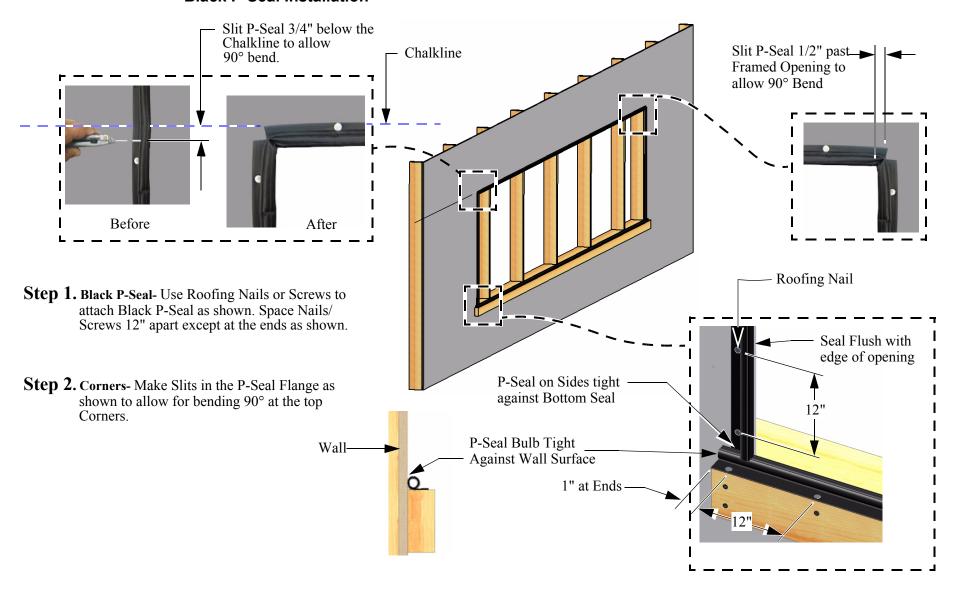



Tunnel Doors may be installed with either Rope or Cable Suspension Cable Suspension (Cable Version Only)

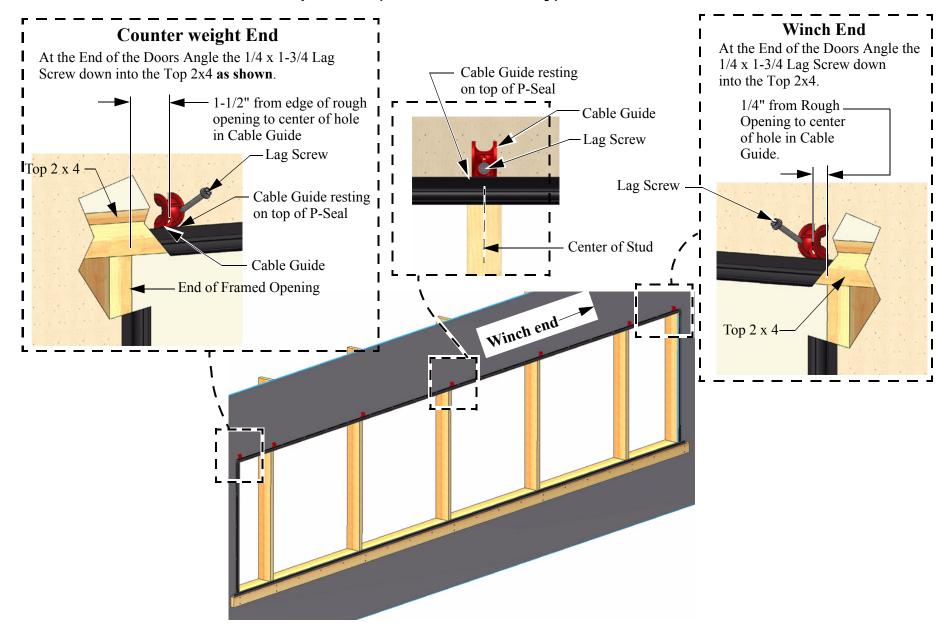


Rope Screw Hook (Rope Version Only)

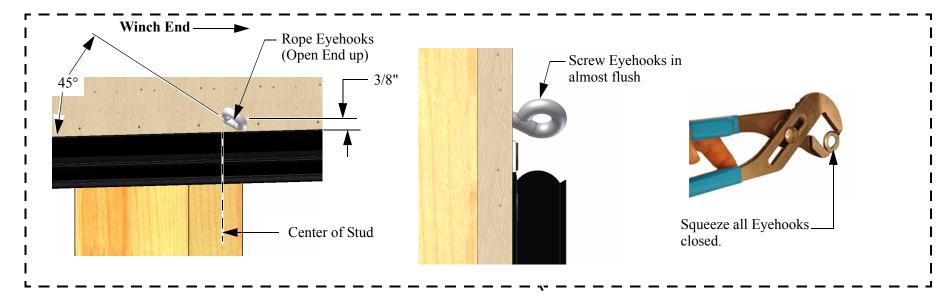


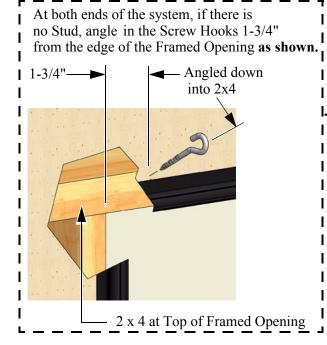


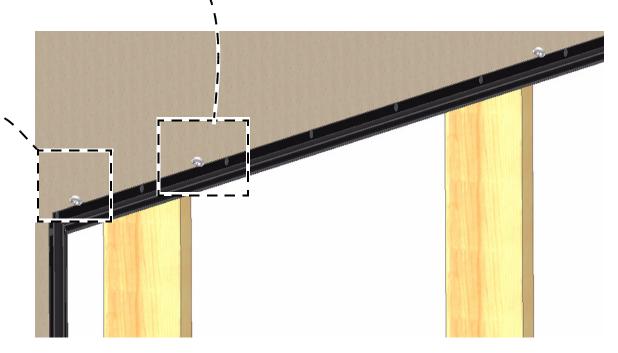


Door Installation

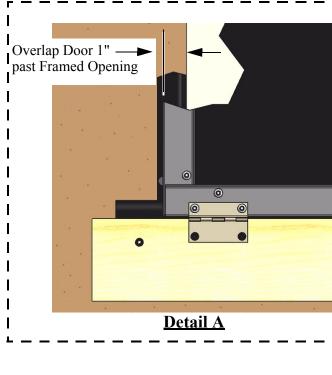


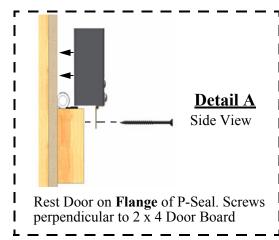

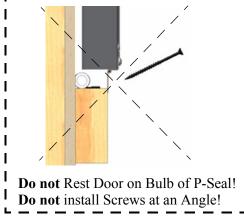


Cut a C-Channel in half and fasten it to the 1st Door with 1/2" Screws as shown.

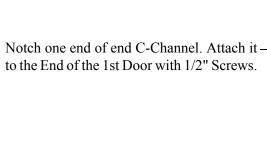


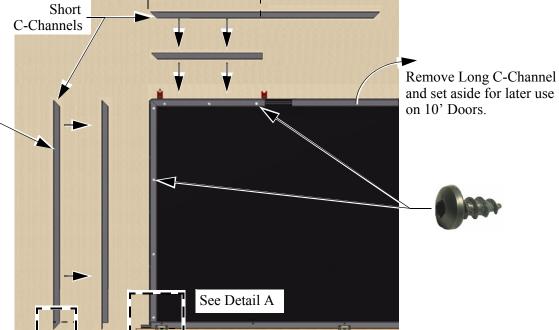



Tunnel Door Installation

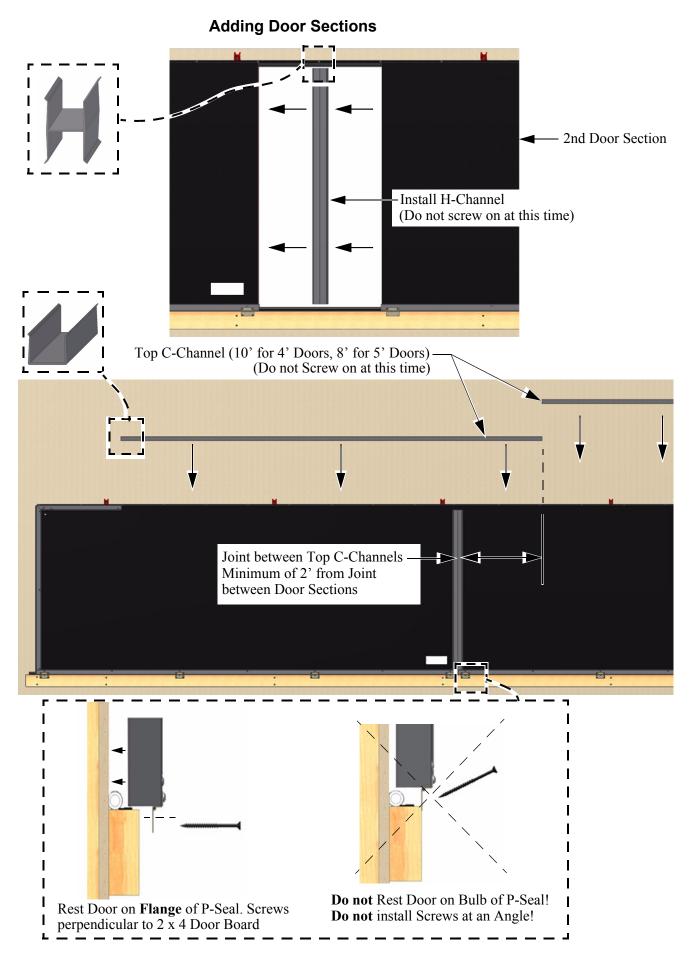




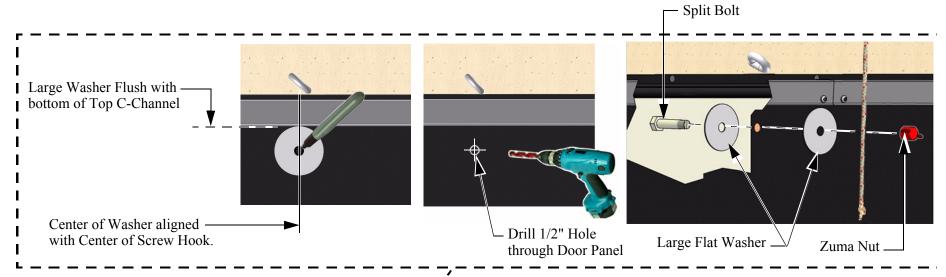

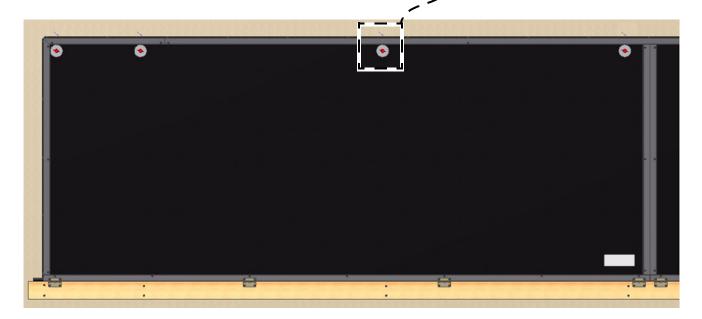


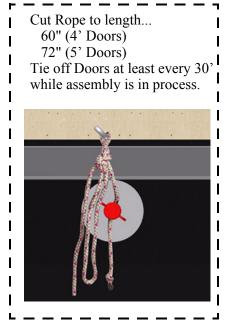



Cable Tensioner and Cable Installation (Cable Version Only)

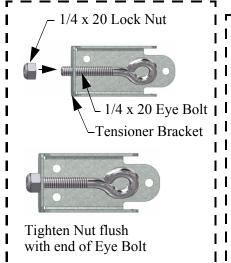


 Step 1

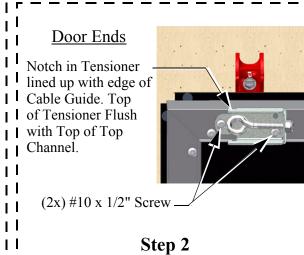

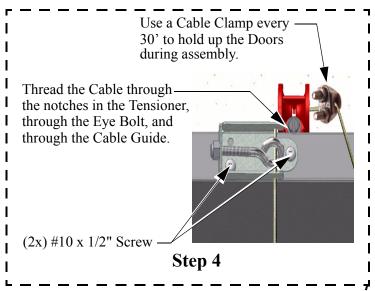

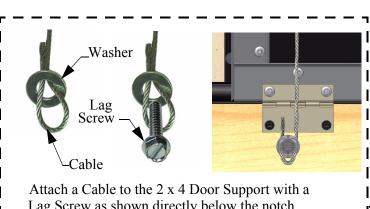




4' Doors = 9' Cable

5' Doors = 10' Cable

Step 3

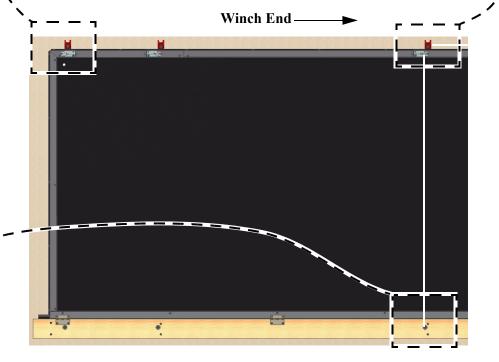

Installing Remaining Door Sections


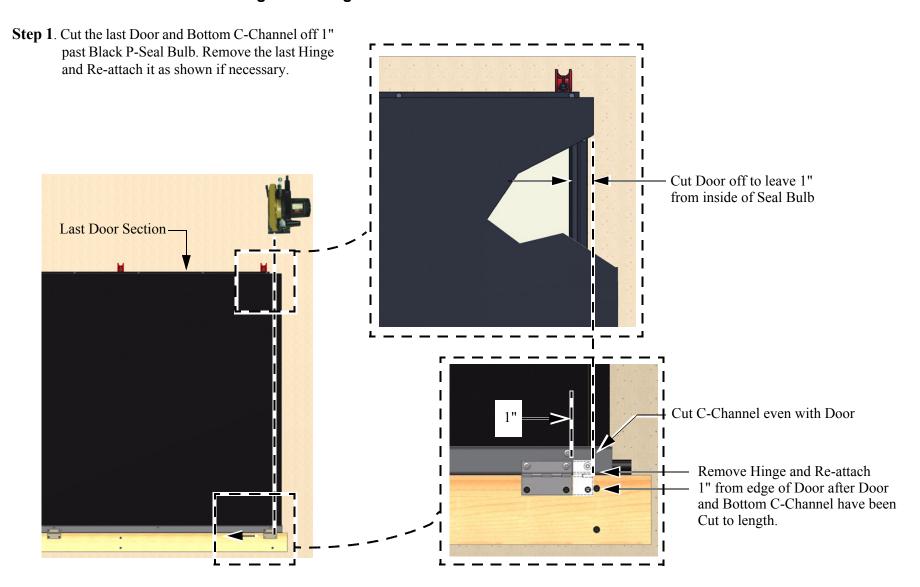



Figure 10. Installing last Door Section


Last Door Section (Continued)


- Step 2. Attach all of the Top C-Channels and H-Channels with 1/2" Screws as shown.
- **Step 3**. Miter and Attach the last Top C-Channel with 1/2" Screws.

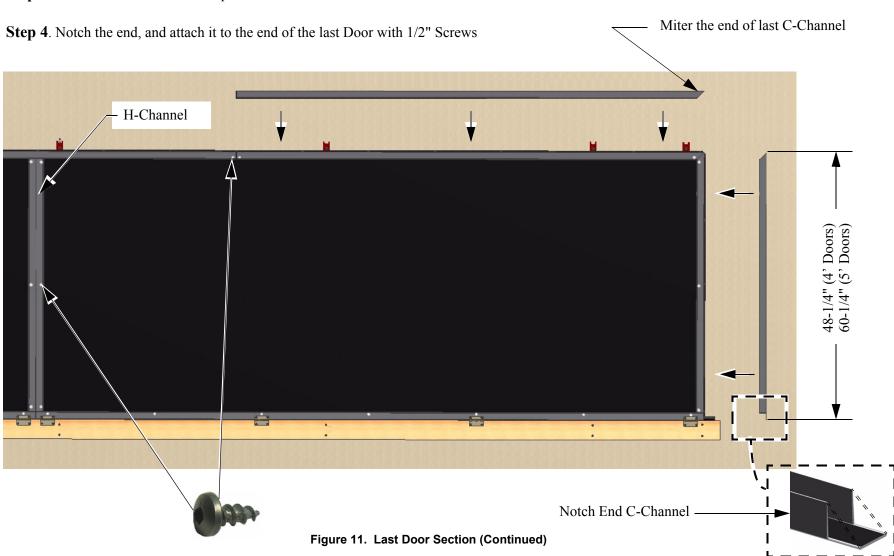

Winch Installation

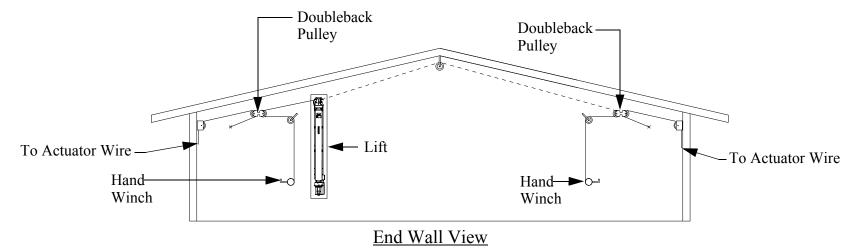


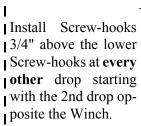


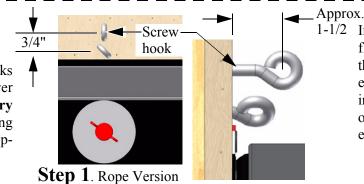


Door Suspension Installation

1-1/2 Install Screw-hooks flush with the top of the Cable Guides at every other drop starting with the 2nd drop opposite the Winch end.

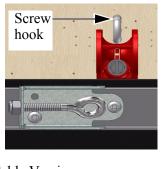

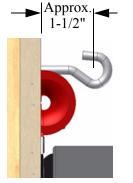



Step 1. Cable Version

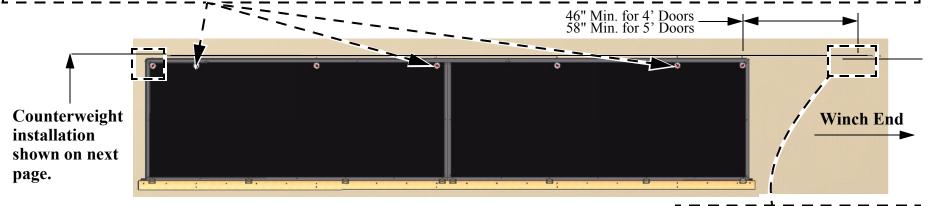

 String Actuator Wire through the Eyehooks from one end of the System to the other. At the I Winch End extend the Wire past the edge of the Door



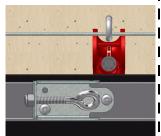



Bend the Actuator Wire I

1/2", 90° at both ends

Rope Version.

Cable Version

hooks closed.


Attach Main Cable to the Actuator Wire I with Three Cable Clamps alternated 180° as shown

Step 2.


Step 3.

Step 4.

Installing Counter Weight

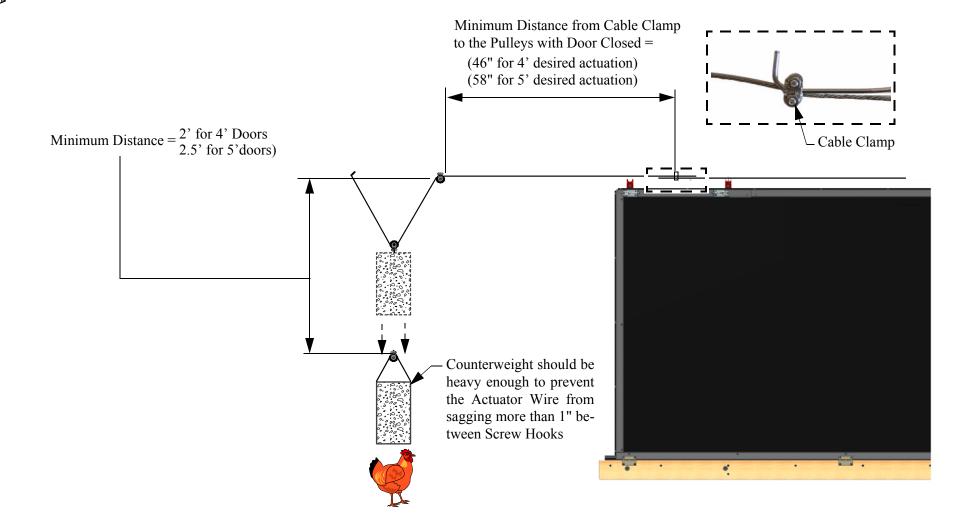

Rope Attachment

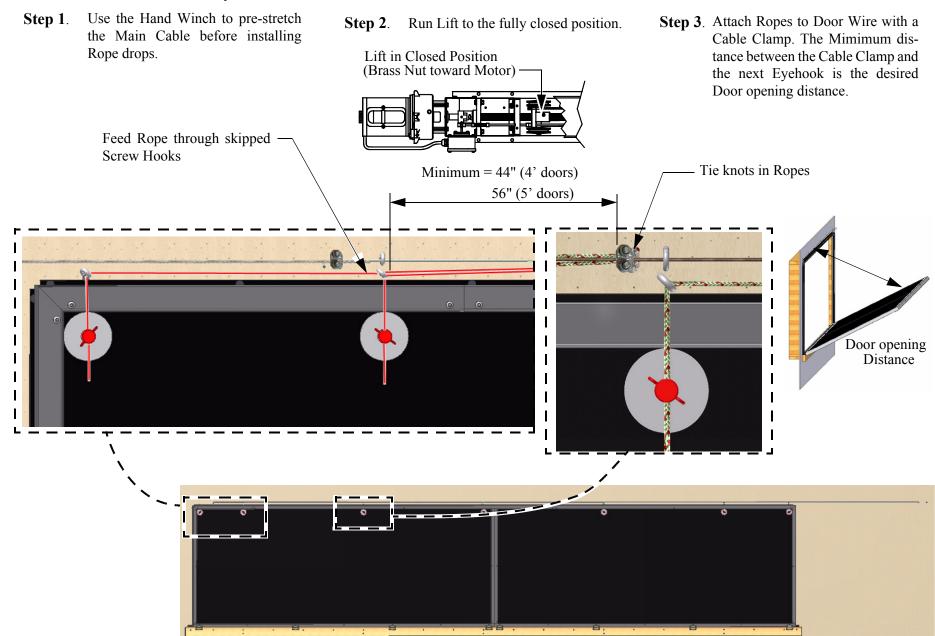


Tunnel Door


Cable Attachment

Step 1. Use the Hand Winch to pre-stretch the Main Cable before installing Cable drops.

 Step 1. Run Lift to the fully closed position.





Step 3. Attach Cables to Door Wire with a Cable Clamp. The Minimum distance between the Cable Clamp and the next Eyehook is the desired Door opening distance.

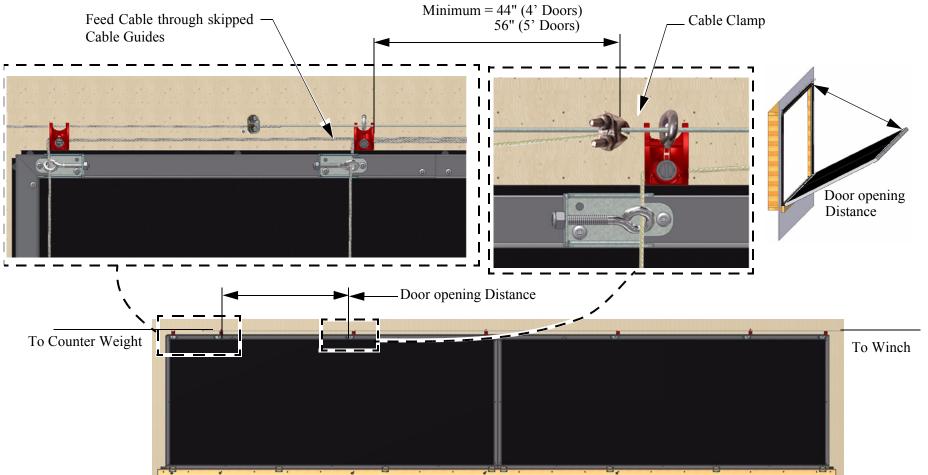

Installation

Final Door Adjustment

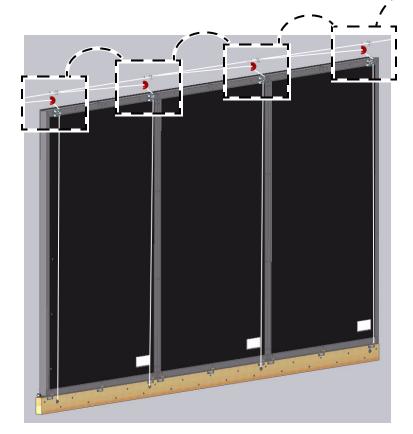


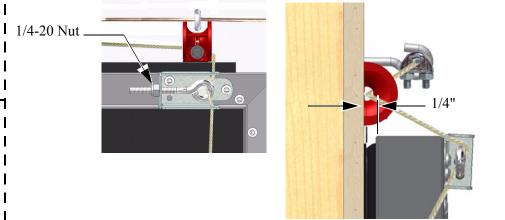

Adjust Cable Tension at each Drop-

Tighten the 1/4-20 nut on the Cable Tensioner at each drop until the gap between the Door and the P-Seal is 1/4"

Cable Version

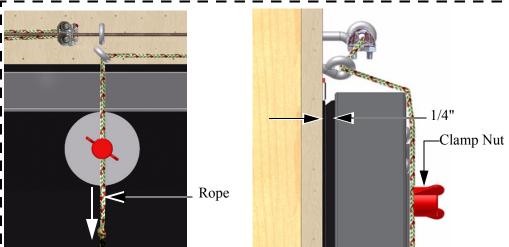

Adjust Rope Tension at each Drop- Loosen the Clamp Nut and pull down on the Rope at each drop until there is a 1/4" Gap betwen the Door and the P-Seal.

Rope Version

Tunnel Door

Itemized Parts

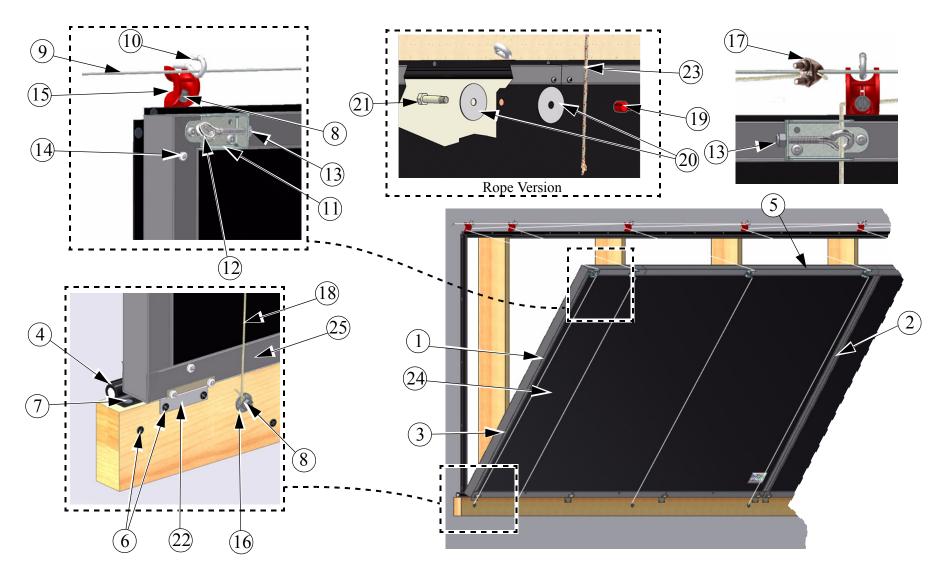


Figure 45. Part Numbers

Part Numbers

		Models		
		4' Door	5' Door	
Item	Description	Part No.	Part No.	
1	48" Tall x 120" Blk Tunnel Door Section	51345 ⁵		
	60" Tall x 48" Blk Tunnel Door Section		51528 ⁶	
2	45.63" Blk. H-Channel (Sq. ends)	51153-7		
	57.63" Blk. H-Channel (Sq. ends)		51153-8	
3	48.32" Blk C-Channel 45° Ends	51152-1		
	60.32" Blk C-Channel 45° Ends		51152-2	
4	3/4" Bulb Seal (Blk. with Flange)	51488	51488	
5	96.55 C-Channel (Blk. w/ Sq. Ends)		51152-9	
6	#9-9x3Quadrex Drive Wood Screw	50241 ²	50241 ²	
7	2D x 1 11 Guage Roofing Nail	50239 ²	50239 ²	
8	1/4 x #10 x 1.75 Lag Screw	51039	51039	
9	Actuator Wire (500')	48530A ³	48530A	
10	Screw Hook	1214	1214	
11	Cable Tensioner Bracket	51489	51489	
12	1/4 x 20x 1.625 Eyebolt	1928	1928	
13	1/4-20 Hx Lock Nut (Nyl. Insert)	8159	8159	
14	#10 x 1/2" Sq. Drive Panhead Screw	52102 ²	52102 ²	
15	Cable Guide	51173 ²	51173 ²	
16	.406 x .812 x .065 Washer	4967	4967	
17	.125 Cable Clamp	14898	14898	
18	3/32-7x19 Aircraft Cable	28394	28394	
19	Split Bolt Cap	40788	40788	
20	Large Washer for Split Bolt	50234	50234	
21	Split Bolt	50236	50236	
22	1.5 x 2.5 SS Hinge	51917	51917	
23	Rope	5-371734	5-37173 ⁴	
	Available Replacement Panels			
24	1.5 x 48 x 120 Blk FRP Panel	51344		
	1.5 x 48 x 60 Blk FRP Panel		51344-6	
25	48.55 C-Channel (Blk. w/ Sq. Ends)		51152-7	
	120.55 C-Channel (Blk. w/ Sq. Ends)	51152-10		

¹ Seal must be ordered in increments of 200'

² Must be ordered in increments of 100 pieces


³ Actuator wire must be ordered in increments of 500' coils under part number 48530

⁴ Rope must be ordered in increments of 1000' 5-37173-1000

⁵ Section includes 51344 Panel with 51152-10 Top and Bottom C-Channels and 51917 Hinges assembled

⁶ Section includes 51344-6 Panel with 51152-7 Bottom C-Channel and 51917 Hinges assembled

Itemized Parts (Individual Doors)

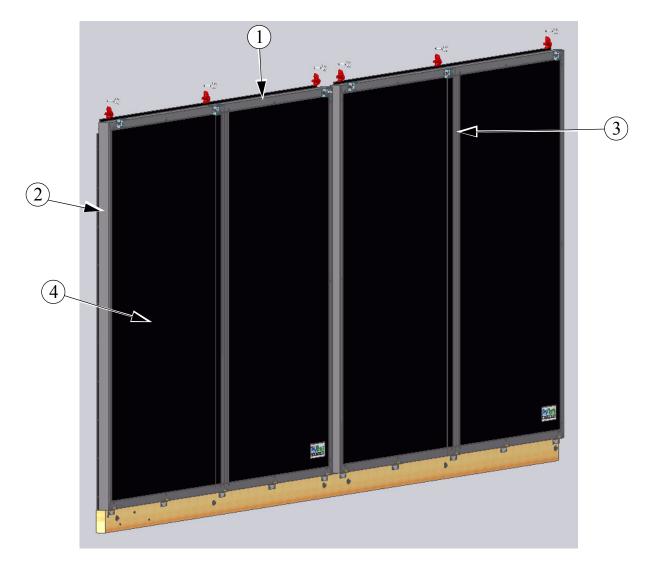

		Size, Assembly Part No. and Component Part Numbers					
		4' x 48"	4' x 93"	4' x 115"	5' x 48"	5' x 93"	5' x 115" Door
Item	Description	51664	51665	51666	51868	51869	51870
1	Top and Bottom C-Channel (45° ends)	51152-1	51152-3	51152-5	51152-1	51152-3	51152-5
2	Side C-Channel (45° ends)	51152-1	51152-1	51152-1	51152-2	51152-2	51152-2
3	H-Channel					51153-8	51153-8
	Available Replacement Panel Sizes	Part No.					
4	Panel, 1.5" x 48" x 60" Black FRP	51344-6					
	Panel, 1.5" x 48" x 96" Black FRP	51344-8					
	Panel, 1.5" x 48" x 120" Black FRP	51344					

This page left blank Intentionally......



Note: The original, authoritative version of this manual is the [English] version produced by CTB, Inc. or any of its subsidiaries or divisions, (hereafter collectively referred to as "CTB"). Subsequent changes to any manual made by any third party have not been reviewed nor authenticated by CTB. Such changes may include, but are not limited to, translation into languages other than [English], and additions to or deletions from the original content. CTB disclaims responsibility for any and all damages, injuries, warranty claims and/or any other claims associated with such changes, inasmuch as such changes result in content that is different from the authoritative CTB-published [English] version of the manual. For current product installation and operation information, please contact the customer service and/or technical service departments of the appropriate CTB subsidiary or division. Should you observe any questionable content in any manual, please notify CTB immediately in writing to: CTB Legal Department, P.O. Box 2000, Milford, IN 46542-2000 USA.

Revisions to this Manual

Page No. Description of Change

Various New Manual

Contact your nearby Chore-Time distributor or representative for additional parts and information.

CTB Inc.
P.O. Box 2000 • Milford, Indiana 46542-2000 • U.S.A.
Phone (574) 658-4101 • Fax (877) 730-8825
E-Mail: ctb@ctbinc.com • Internet: http://www.ctbinc.com

Printed in the U.S.A.