

Limited Warranty

Chore-Time Group, a division of CTB, Inc. ("Chore-Time") warrants new CHORE-TIME equipment manufactured by Chore-Time to be free from defects in material or workmanship under normal usage and conditions, for One (1) year from the date of installation by the original purchaser ("Warranty"). If such a defect is determined by Chore-Time to exist within the applicable period, Chore-Time will, at its option, (a) repair the Product or Component Part free of charge, F.O.B. the factory of manufacture or (b) replace the Product or Component Part free of charge, F.O.B. the factory of manufacture or (b) replace the Product or Component Part free of charge, F.O.B. the factory of manufacture. This Warranty is not transferable, and applies only to the original purchaser of the Product.

CONDITIONS AND LIMITATIONS

THIS WARRANTY CONSTITUTES CHORE-TIME'S ENTIRE AND SOLE WARRANTY AND CHORE-TIME EXPRESSLY DISCLAIMS ANY AND ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, EXPRESS AND IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES AS TO MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES. CHORE-TIME shall not be liable for any direct, indirect, incidental, consequential or special damages which any purchaser may suffer or claim to suffer as a result of any defect in the Product. Consequential or Special Damages as used herein include, but are not limited to, lost or damaged products or goods, costs of transportation, lost sales, lost orders, lost income, increased overhead, labor and incidental costs, and operational inefficiencies. Some jurisdictions prohibit limitations on implied warranties and/or the exclusion or limitation of such damages, so these limitations and exclusions may not apply to you. This warranty gives the original purchaser specific legal rights. You may also have other rights based upon your specific jurisdiction.

Compliance with federal, state and local rules which apply to the location, installation and use of the Product are the responsibility of the original purchaser, and CHORE-TIME shall not be liable for any damages which may result from non-compliance with such rules.

The following circumstances shall render this Warranty void:

- · Modifications made to the Product not specifically delineated in the Product manual.
- · Product not installed and/or operated in accordance with the instructions published by the CHORE-TIME.
- · All components of the Product are not original equipment supplied by CHORE-TIME.
- · Product was not purchased from and/or installed by a CHORE-TIME authorized distributor or certified representative.
- · Product experienced malfunction or failure resulting from misuse, abuse, mismanagement, negligence, alteration, accident, or lack of proper maintenance, or from lightning strikes, electrical power surges or interruption of electricity.
- Product experienced corrosion, material deterioration and/or equipment malfunction caused by or consistent with the application of chemicals, minerals, sediments or other foreign elements.
- Product was used for any purpose other than for the care of poultry and livestock.

The Warranty and Extended Warranty may only be modified in writing by an officer of CHORE-TIME. CHORE-TIME shall have no obligation or responsibility for any representations or warranties made by or on behalf of any distributor, dealer, agent or certified representative.

Effective: April, 2014

Contents

Торіс	Page
Limited Warranty	2
General	
Safety Information	
Tools Needed	4
Installation Planning	
Installation. Top and Bottom Chalklines and 2 x 4 Door Support. Seal Installation	6
Rope Guides.	8 9 10
Adding Door Sections Installation of Split Bolts for Rope/Cable Attachments. Cable Tensioner and Cable Installation (Cable Version Only) Installing Remaining Door Sections	12 13
Last Door Section (Continued) Winch Installation Door Suspension Installation	15 16
Installing Counter Weight / Extension Spring Rope Attachment	18 19
Final Door Adjustment	
4' and 5' Tall Door Sections	22
Part Numbers for 4' and 5' Tall Door Sections	23
Part Numbers for Individual Door Assemblies	24

General

Support Information

The Chore-Time Tunnel Door is to be used to control the airflow in a Tunnel Ventilated poultry house. Using this equipment for any other purpose or in a way not within the operating recommendations specified in this manual will void the warranty and may cause personal injury.

This manual is designed to provide comprehensive planning, installation, safety, operation, and parts listing information. The Table of Contents provides a convenient overview of the information in this manual. The Table of Contents also specifies which pages contain information for the sales personnel, installer, and consumer (end user).

Safety Information

Caution, Warning and Danger Decals have been placed on the equipment to warn of potentially dangerous situations. Care should be taken to keep this information intact and easy to read at all times. Replace missing or damaged safety decals immediately.

Using the equipment for purposes other than specified in this manual may cause personal injury and/or damage to the equipment.

DANGER: Electrical Hazard

Disconnect electrical power before inspecting or servicing equipment Ground all electrical equipment for safety. All electrical wiring must be done by a qualified electrician in accordance with local and national electric codes. Ground all noncurrent carrying metal parts to guard against electrical shock. With the exception of motor overload protection, electrical disconnects and over current protection are not supplied with the equipment.



Tools Needed

Tape Measurer Chalkline Electric Drill -Square Driver Bit -3/8" Hex Socket - Screwhook Driver Bit -1/2" [1.3cm] Drill Bit (For Doors with Rope Suspension) Hammer Knife Tin Snips


Installation Planning

Framed Opening

MV2327F

Winch Capacity- approximately 15 lbs/ft [6.8 Kg/30.5cm] of Door length Wall should be flat within 1/8" per 4' [3.2mm per 1.219m] to ensure a good seal around the Doors


Note: Tunnel Doors should be shaded from direct sun light to avoid damage!

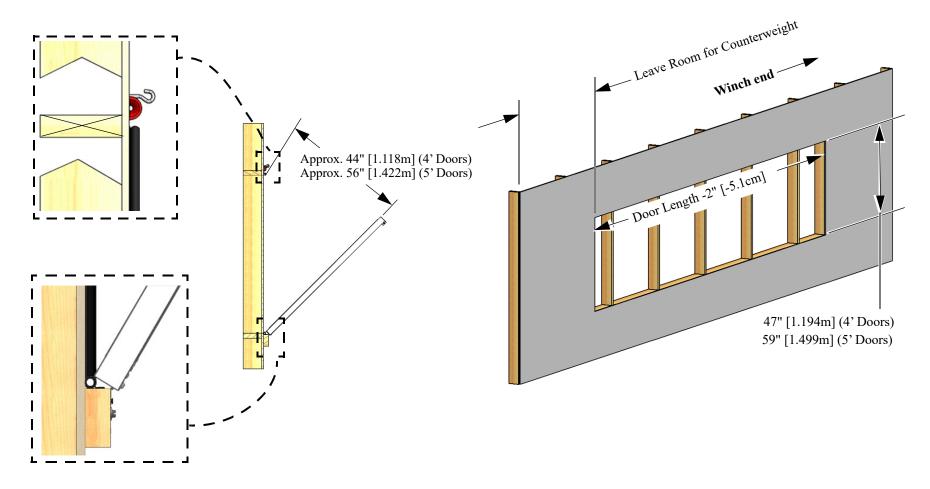

Installation


MV2327F


Top and Bottom Chalklines and 2 x 4 Door Support

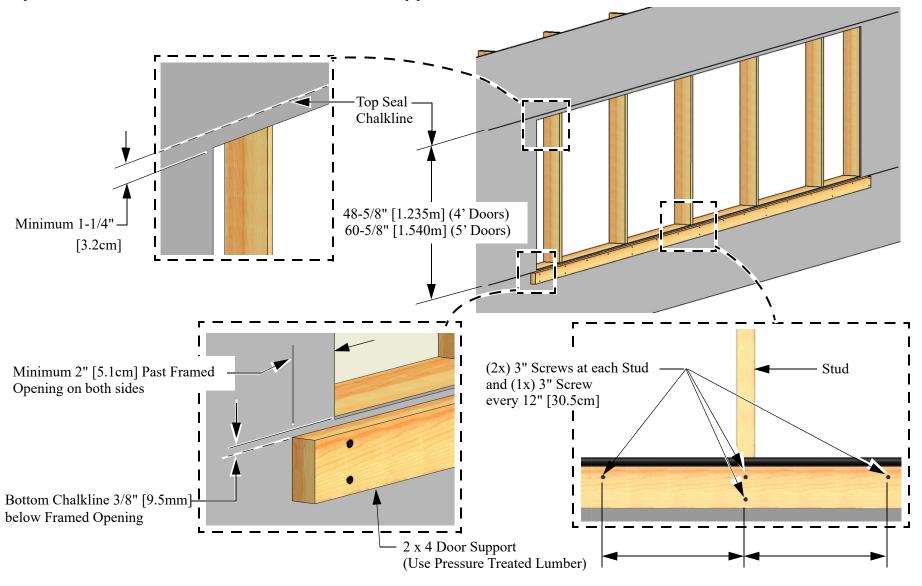

Seal Installation

- Step 1. Black Seal- Attach Black Seal across the bottom of the Framed opening with Roofing Nails. Space Nails 12" [30.5cm] apart, except 1" [2.5cm] at the ends (See below).
- **Step 2.** Attach one continuous piece of Black Seal to the Sides and Top of the opening. Start attaching seal at a bottom corner of the framed opening with Nails 12" [30.5cm] apart and 1" [2.5cm] at the end. Make a Slit and a Notch in the Seal to allow for bending 90° at the 1st Corner (as shown below).

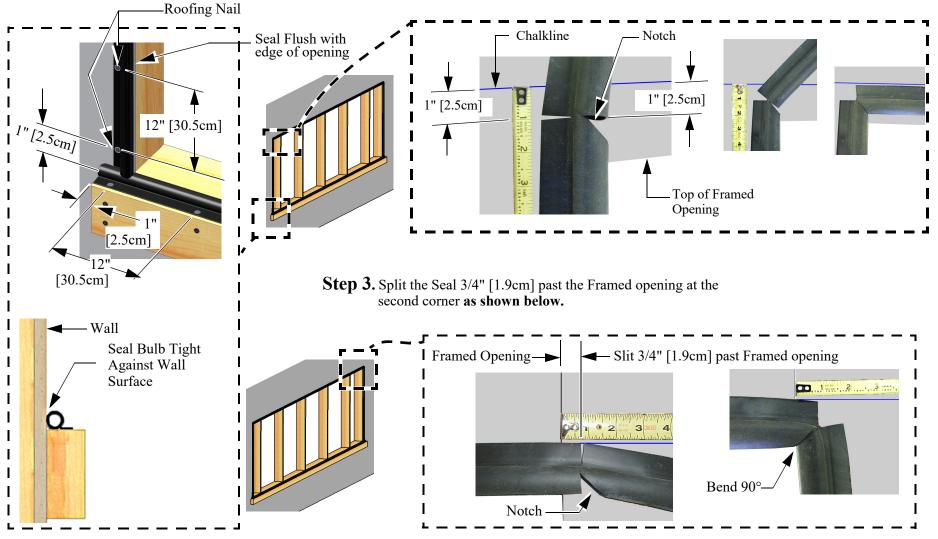

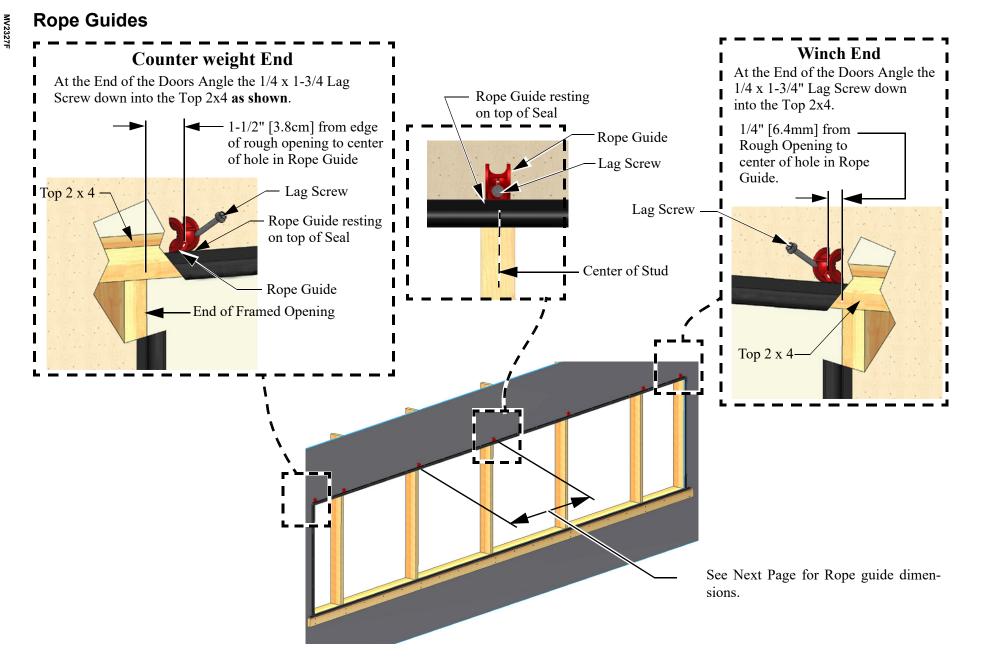


ω

Installation

Rope Guide Spacing

1.Use a minimum of 4 Rope Guides for the 1st and last 10' Door sections. 2.Use a minimum of 3 Rope Guides for all other Door sections.

3.See Maximum spacing between Rope Guides at H-Channels as shown.

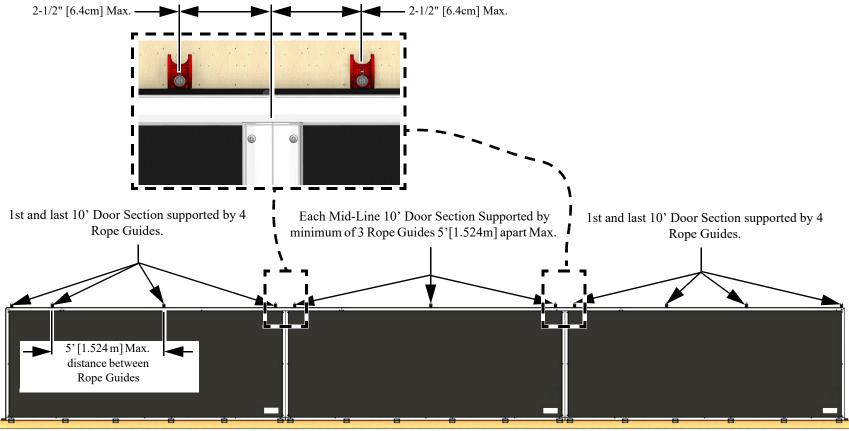

1st Door Section (Counter weight End)


Standard Door Section (Mid-Line)

Last Door Section (Winch End)


Door Installation (5' x 10' Unassembled) Skip to next page for assembled Doors

Install 6 Hinges per Door as shown below. Once hinges are installed, continue to next page to see how to install C-Channels.


Important! Do not over tighten Screws when fastening Hinges. Torque only to 15 In./lbs. [1.69 Nm].

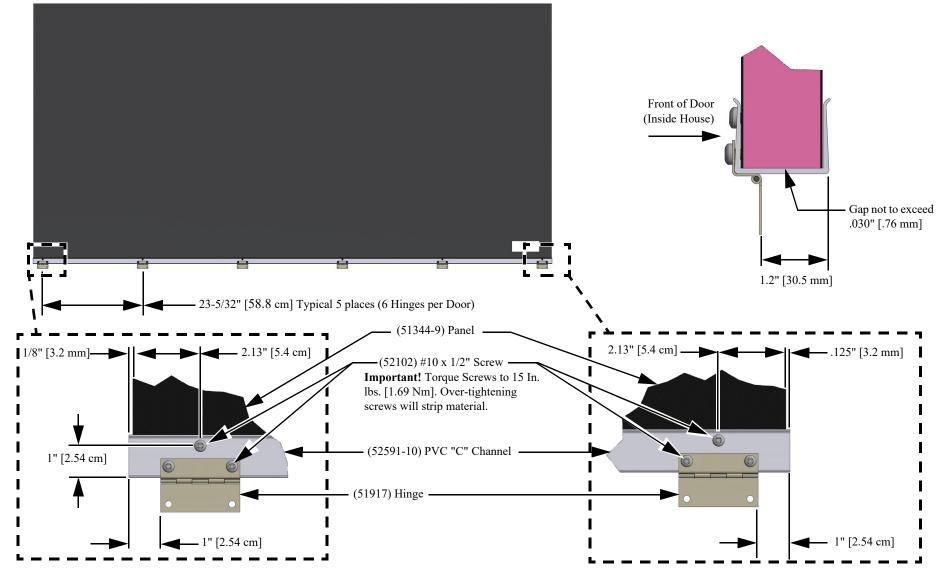



Installation

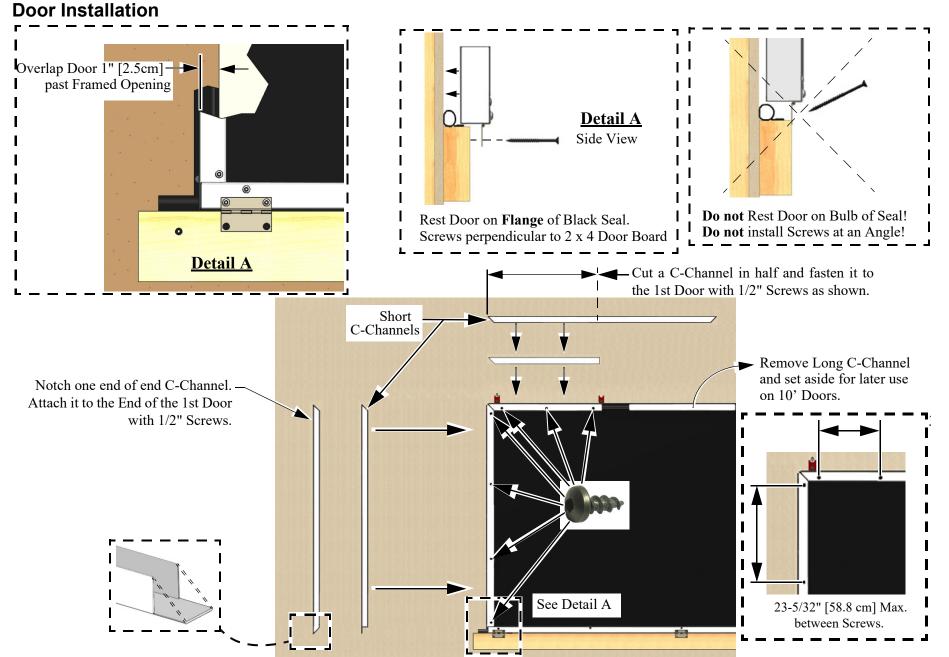

Installation

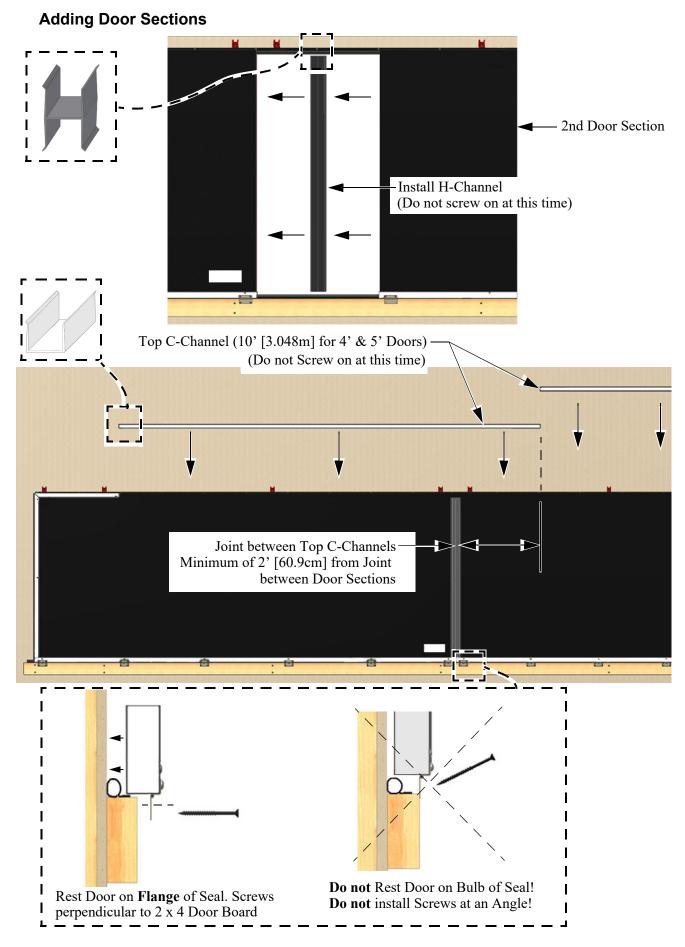


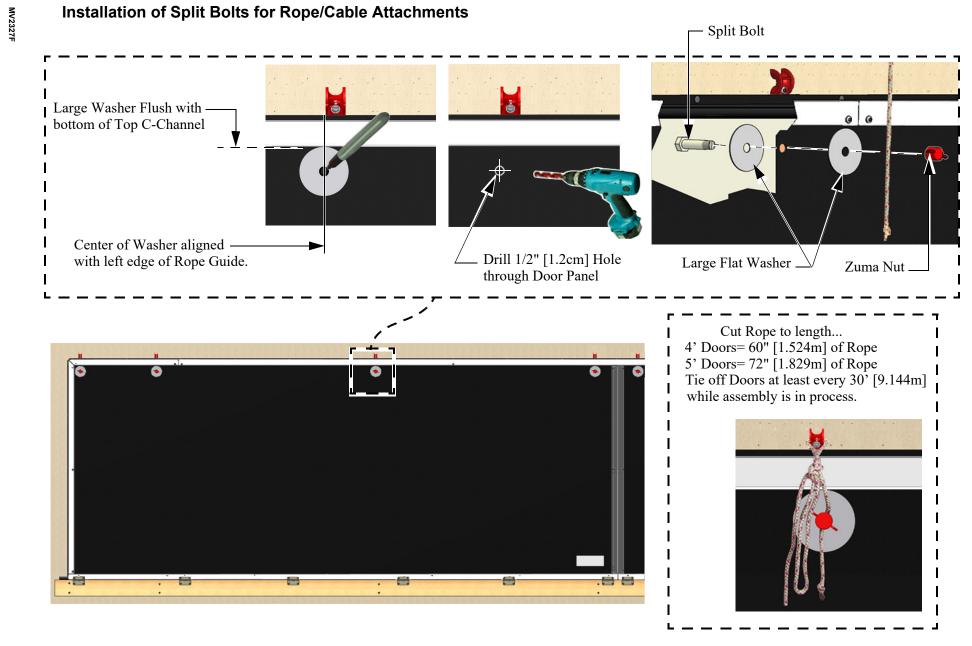

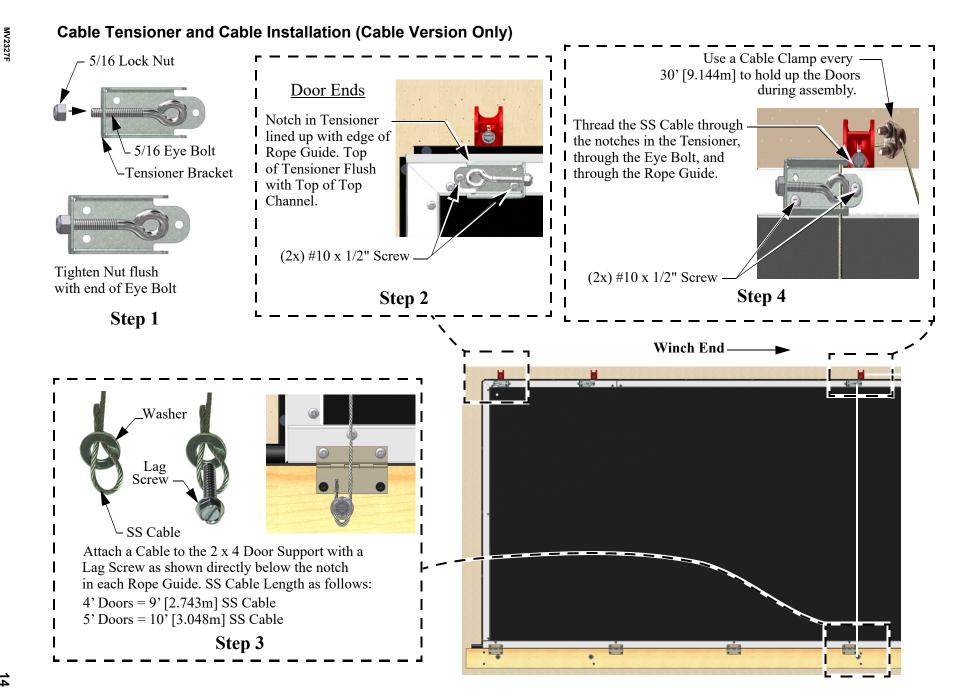


Installing Remaining Door Sections

Step 1. Cut the last Door and Bottom C-Channel off 1" [2.5cm] past the Black Seal Bulb. Remove the last Hinge and Re-attach it as shown if necessary.

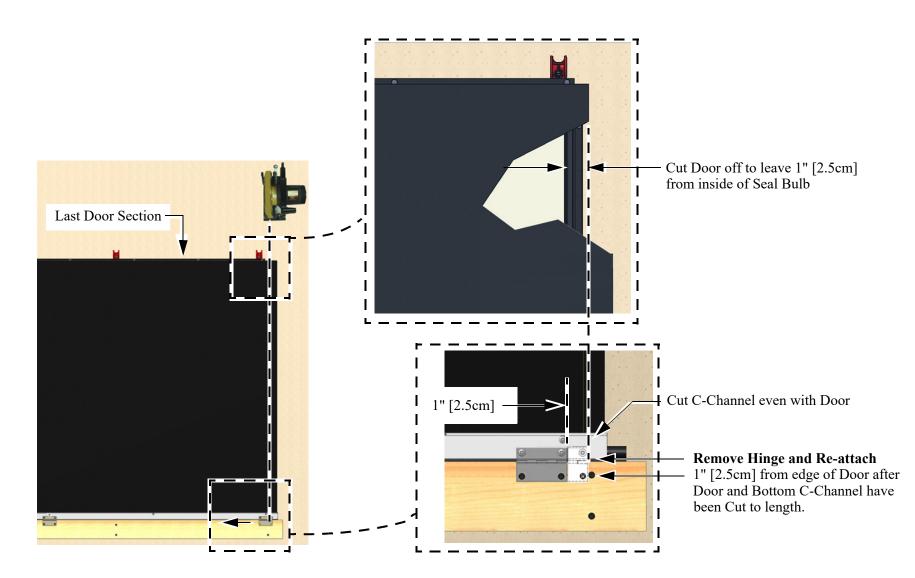


Last Door Section (Continued)


Step 2. Attach all of the Top C-Channels and H-Channels with (52102) 1/2" Screws as shown. Maximum distance between Screws is 23-5/32" [58.8 cm].

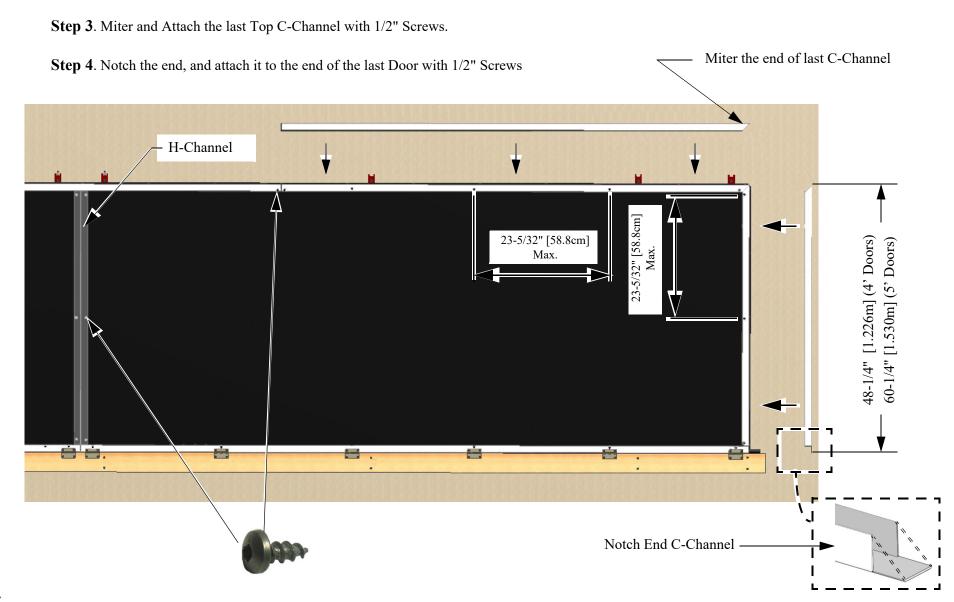


Winch Installation




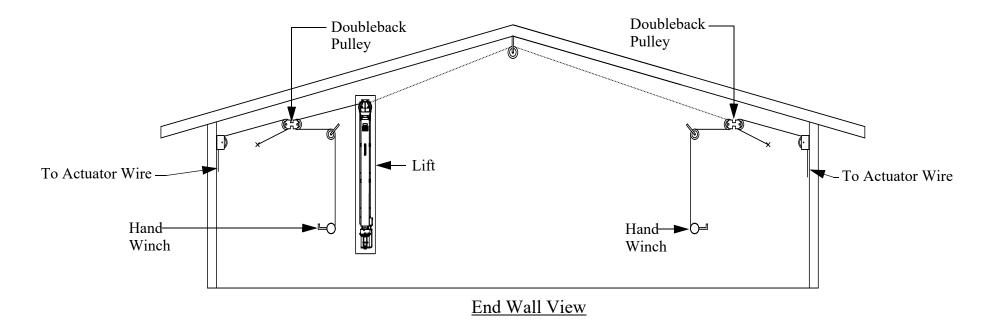

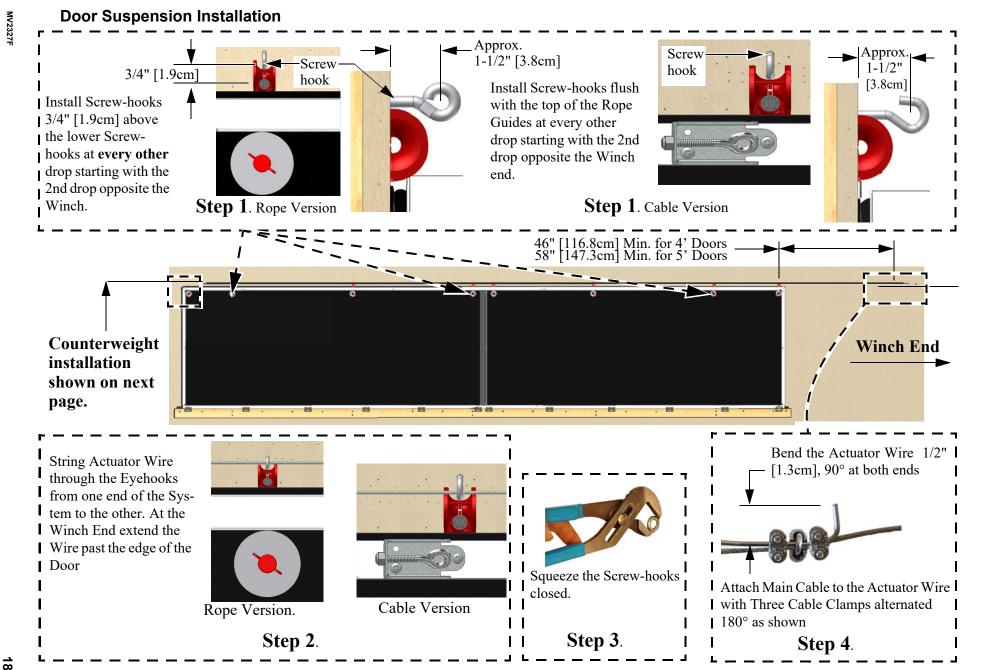

Installing Counter Weight / Extension Spring Counter Weight Installation

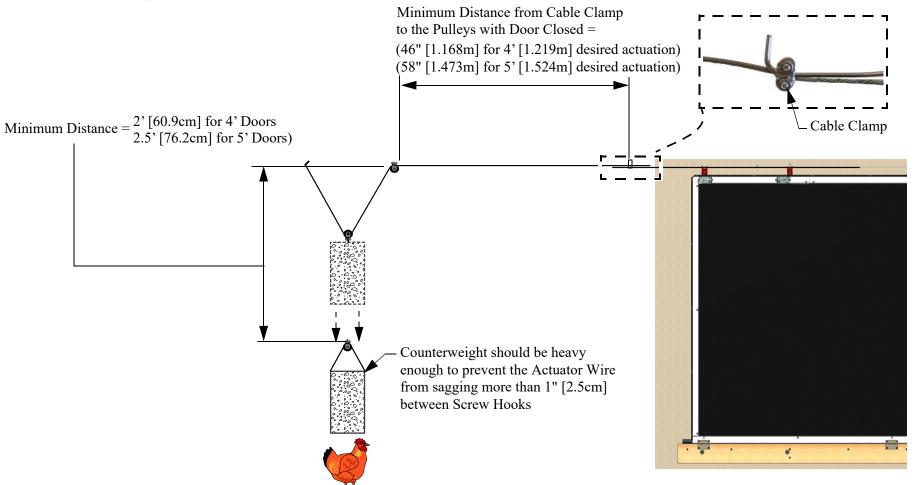

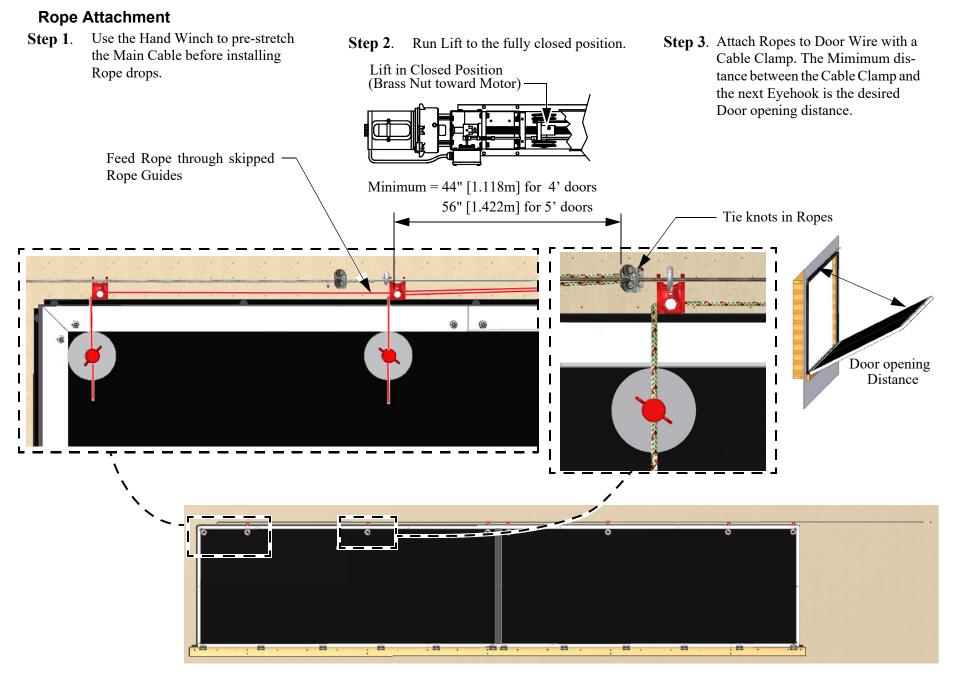

20

Installation


Step 3. Attach Cables to Door Wire with a Cable Step 1. Use the Hand Winch to pre-stretch Step 2. Run Lift to the fully closed position. Clamp. The Minimum distance between the Main Cable before installing Ca-Lift in Closed Position the Cable Clamp and the next Eyehook is ble drops. (Brass Nut toward Motor) the desired Door opening distance. Minimum = 44" [1.118m] for 4' doors Feed Cable through skipped -Cable Clamp 56" [1.422m] for 5' doors **Rope Guides** 11 1 0 Door opening Distance -Door opening Distance To Counter Weight To Winch ,88 1 a 🗖

Tunnel Door (Black)

Cable Attachment


2

Final Door Adjustment

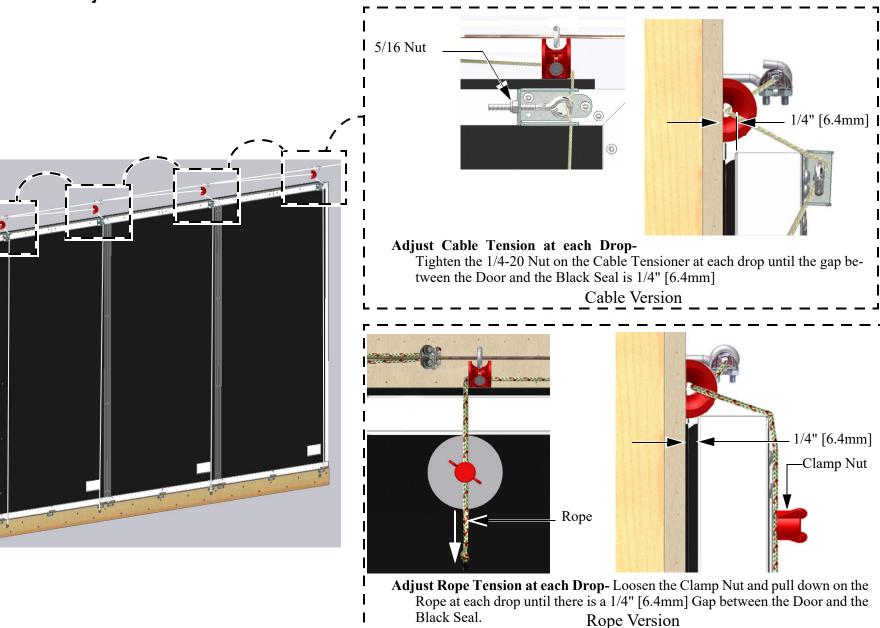

This page left blank intentionally....

4' and 5' Tall Door Sections

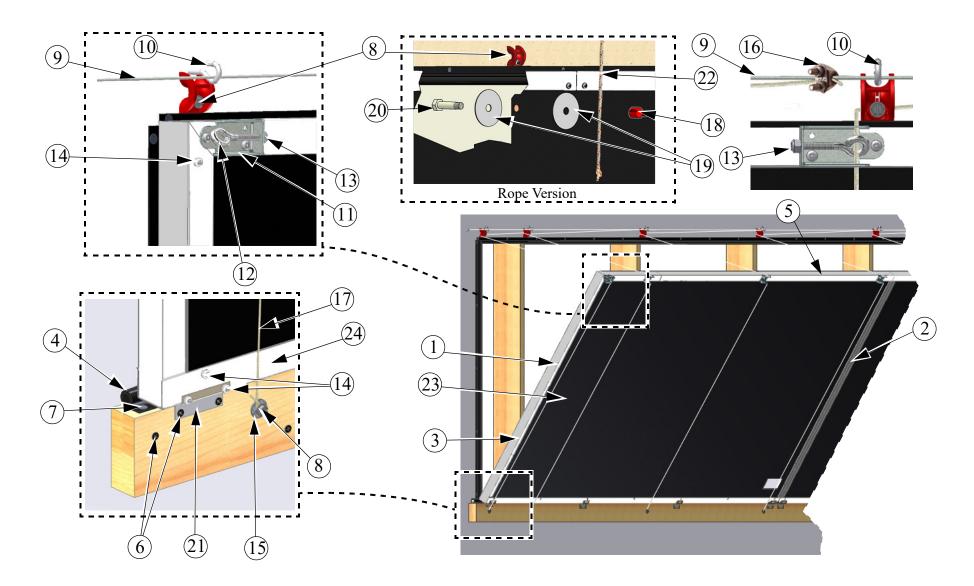

24

Part Numbers for 4' and 5' Tall Door Sections


		Models		
		4' Door	5' Door	
Item	Description	Part No.	Part No.	
1	48" Tall x 120" Blk Tunnel Door Section	51345 ⁵		
	60' Tall x 120" Black Tunnel Door Section		56493 ⁹	
2	45.63" Blk. H-Channel (Sq. ends)	51153-7		
	57.63" Blk. H-Channel (Sq. ends)		51153-8	
3	48.32" Wht. C-Channel 45° Ends ⁷	52591-1		
	60.32" Wht. C-Channel 45° Ends ⁷		52591-2	
4	1" Black Bulb Seal	52589-200 ¹	52589-2001	
5	96.55 C-Channel (White with Square Ends) ⁷		52591-9	
	120.55" C-Channel (White w/square Ends)		52591-10	
6	#9-9x3 Quadrex Drive Wood Screw	50241 ²	50241 ²	
7	2D x 1 11 Gauge Roofing Nail	50239 ²	50239 ²	
8	Rope Guide w/ Galv. Lag Screw	51960-100 ⁸	51960-100 ⁸	
9	Actuator Wire (500')	46059-500 ³	46059-500 ³	
10	Screw Hook	1214	1214	
11	Cable Tensioner Bracket	51489	51489	
12	5/16 x 3.25" Eyebolt	30663	30663	
13	.31x 18 (Nyl. Insert) Nut	ST99074	ST99074	

		Models		
		4' Door	5' Door	
Item	Description	Part No.	Part No.	
14	#10 x 1/2" Sq. Drive Panhead Screw	52102 ²	52102 ²	
15	.406 x .812 x .065 Washer	4967	4967	
16	.125 Cable Clamp	14898	14898	
17	3/32-7x19 Aircraft Cable	28394	28394	
18	Split Bolt Cap	40788	40788	
19	Large Washer for Split Bolt	50234	50234	
20	Split Bolt	50236	50236	
21	1.5 x 2.5 SS Hinge	51917	51917	
22	Rope	5-37173 ⁴	5-371734	
	Available Replaceme	nt Panels		
23	1.5 x 48 x 120 Blk. FRP Panel	51344		
	1.5 x 60 x 120 Blk. FRP Panel		51344-9	
24	48.55 C-Channel (White. w/ Sq. Ends)		52591-7	
	120.55 C-Channel (White. w/ Sq. Ends)	52591-10		
¹ Packa	aged in boxes of 200'			
	be ordered in increments of 100 pieces			
	9-500 is a 500' roll.			
	must be ordered in increments of 1000' 5-3	37173-1000		
⁵ Secti Hin	on includes 51344 Panel with 52591-10 Top ges assembled.	o and Bottom C-Ch	annels and 51917	
⁶ Secti asse	on includes 51344-6 Panel with 52591-7 Bo embled.	ottom C-Channel an	d 51917 Hinges	
⁷ Was I Part	Black C-Channel from 1-25-08 to 9-2-09. R t No. 51152-10.	eplacement Black	10' C-Channel	
8 12:+ :+	cludes (51173) Rone Guides and (51039) 1	// 10 x 1 L ag Screw	vs (Otv 100 each	

- ⁸ Kit includes (51173) Rope Guides and (51039) 1/4-10 x 1 Lag Screws (Qty 100 each).
 ⁹ Includes 51344-9 Panel with 52591-10 Top and Bottom C-Channels and 51917 Hinges assembled.

This page left blank intentionally....

Part Numbers for Individual Door Assemblies

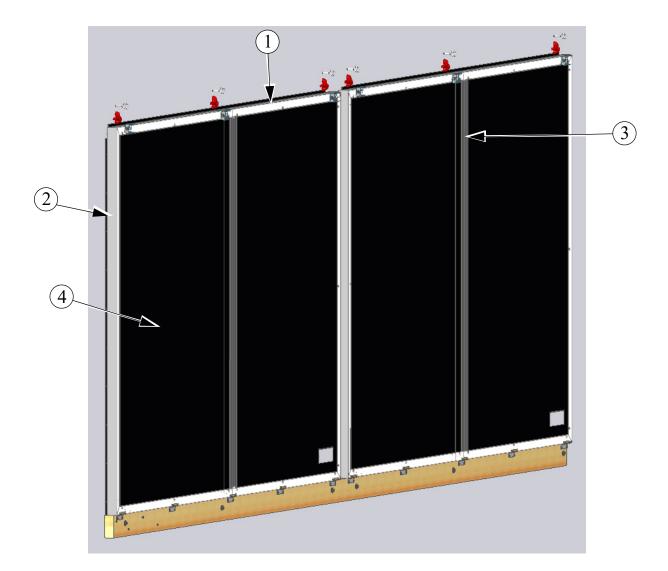

		Size, Assembly Part No. and Component Part Numbers				
		4' x 48"	4' x 93"	4' x 115"	5' x 93"	5' x 115" Door
Item	Description	51664	51665	51666	51869	51870
1	White Top and Bottom C-Channel (45° ends) ¹	52591-1	52591-3	52591-5	52591-3	52591-5
2	White Side C-Channel (45° ends) ¹	52591-1	52591-1	52591-1	52591-2	52591-2
3	H-Channel				51153-8	51153-8
	Available Replacement Panel Sizes	Part No.				
4	Panel, 1.5" x 48" x 96" Black FRP	51344-8				
	Panel, 1.5" x 48" x 120" Black FRP	51344				
	Panel, 1.5" x 60" x 120" Black FRP	51344-9				
¹ Was Black C-Channel from 1-25-08 to 9-2-09. Replacement Black 10' C-Channel Part No. 51152-10.						



Note: The original, authoritative version of this manual is the [English] version produced by CTB, Inc. or any of its subsidiaries or divisions, (hereafter collectively referred to as "CTB"). Subsequent changes to any manual made by any third party have not been reviewed nor authenticated by CTB. Such changes may include, but are not limited to, translation into languages other than [English], and additions to or deletions from the original content. CTB disclaims responsibility for any and all damages, injuries, warranty claims and/or any other claims associated with such changes, inasmuch as such changes result in content that is different from the authoritative CTB-published [English] version of the manual. For current product installation and operation information, please contact the customer service and/or technical service departments of the appropriate CTB subsidiary or division. Should you observe any questionable content in any manual, please notify CTB immediately in writing to: CTB Legal Department, P.O. Box 2000, Milford, IN 46542-2000 USA.

Revisions to this Manual

Page No.	Description of Change	ECO
Various	Added Hinges Pictorially 6 per door	
9	Added Door Hinge Spacing	
10	Added Unassembled Door assembly instructions	
11,16	Added maximum dimension between Screws	
24	Added 56493, 51960-100, 51344-9	35178

For additional parts and information, contact your nearest Chore-Time distributor or representative. Find your nearest distributor at: www.choretime.com/contacts

CTB, Inc. PO Box 2000 Milford, Indiana 46542-2000 USA Phone (574) 658-4101 Fax (877) 730-8825 Email: choretime@choretime.com Internet: www.choretime.com