


## **Strap Winch Installation and Operators Instruction Manual**

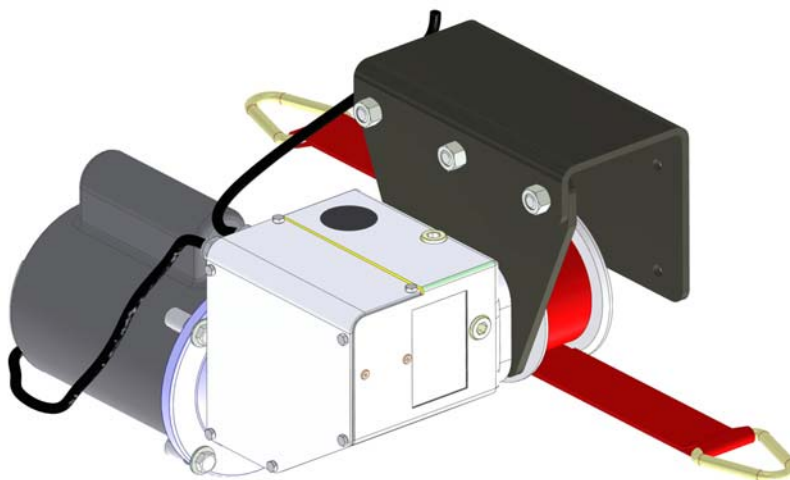

**Contact your nearby Chore-Time distributor or representative for additional parts and information.**

Chore-Time Group  
A division of CTB, Inc.  
PO Box 2000  
Milford, Indiana 46542-2000 USA  
Phone (574) 658-4101 Fax (877) 730-8825  
E-mail: [poultry@choretime.com](mailto:poultry@choretime.com)  
Internet: [www.choretimepoultry.com](http://www.choretimepoultry.com)

## Chore-Time Warranty

### LIMITED WARRANTY

Chore-Time Group, a division of CTB, Inc. ("Chore-Time") warrants the new CHORE-TIME Strap Winch manufactured by Chore-Time to be free from defects in material or workmanship under normal usage and conditions, for One (1) year from the date of installation by the original purchaser ("Warranty"). Chore-Time provides for an extension of the aforementioned Warranty period ("Extended Warranty Period") with respect to certain Product parts. If such a defect is determined by Chore-Time to exist within the applicable period, Chore-Time will, at its option, (a) repair the Product or Component Part free of charge, F.O.B. the factory of manufacture or (b) replace the Product or Component Part free of charge, F.O.B. the factory of manufacture. This Warranty is not transferable, and applies only to the original purchaser of the Product.

### CONDITIONS AND LIMITATIONS

THIS WARRANTY CONSTITUTES CHORE-TIME'S ENTIRE AND SOLE WARRANTY AND CHORE-TIME EXPRESSLY DISCLAIMS ANY AND ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, EXPRESS AND IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES AS TO MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES. CHORE-TIME shall not be liable for any direct, indirect, incidental, consequential or special damages which any purchaser may suffer or claim to suffer as a result of any defect in the Product. Consequential or Special Damages as used herein include, but are not limited to, lost or damaged products or goods, costs of transportation, lost sales, lost orders, lost income, increased overhead, labor and incidental costs, and operational inefficiencies. *Some jurisdictions prohibit limitations on implied warranties and/or the exclusion or limitation of such damages, so these limitations and exclusions may not apply to you. This warranty gives the original purchaser specific legal rights. You may also have other rights based upon your specific jurisdiction.*

Compliance with federal, state and local rules which apply to the location, installation and use of the Product are the responsibility of the original purchaser, and CHORE-TIME shall not be liable for any damages which may result from non-compliance with such rules.

The following circumstances shall render this Warranty void:

- Modifications made to the Product not specifically delineated in the Product manual.
- Product not installed and/or operated in accordance with the instructions published by the CHORE-TIME.
- All components of the Product are not original equipment supplied by CHORE-TIME.
- Product was not purchased from and/or installed by a CHORE-TIME authorized distributor or certified representative.
- Product experienced malfunction or failure resulting from misuse, abuse, mismanagement, negligence, alteration, accident, or lack of proper maintenance, or from lightning strikes, electrical power surges or interruption of electricity.
- Product experienced corrosion, material deterioration and/or equipment malfunction caused by or consistent with the application of chemicals, minerals, sediments or other foreign elements.
- Product was used for any purpose other than for the care of poultry and livestock.
- 

The Warranty and Extended Warranty may only be modified in writing by an officer of CHORE-TIME. CHORE-TIME shall have no obligation or responsibility for any representations or warranties made by or on behalf of any distributor, dealer, agent or certified representative.

Effective: April 2014

# Contents

Topic	Page
<b>Chore-Time Warranty</b> .....	<b>2</b>
<b>Safety and General Information</b> .....	<b>4</b>
Follow Safety Instructions .....	4
Decal Descriptions .....	4
DANGER: Moving Parts .....	4
DANGER: Electrical Hazard .....	4
<b>General Information</b> .....	<b>5</b>
<b>Specifications</b> .....	<b>5</b>
<b>Assembly</b> .....	<b>6</b>
Attaching the Winch Mounting Bracket .....	6
Motor Installation .....	6
Wiring Motor to the Winch Unit .....	7
<b>Installation</b> .....	<b>8</b>
Mounting Bracket Installation .....	8
Wall Mount Bracket Installation .....	8
Ceiling Mount Bracket Installation .....	9
Attaching Winch to Mounting Bracket .....	10
Wall Mount .....	10
Ceiling Mount .....	10
<b>Wiring</b> .....	<b>11</b>
Wiring to Power .....	11
Wiring 2 Strap Winches in Parallel (To prevent backfeed between Strap Winches) .....	12
<b>Setup</b> .....	<b>13</b>
Winch Board Switches and LED's .....	13
Local Operation .....	13
Setting Travel Limits .....	14
"Out" Limit .....	14
"IN" limit .....	14
<b>Maintenance</b> .....	<b>15</b>
Strap Replacement .....	15
Oil Recommendation .....	15
<b>Parts Listing</b> .....	<b>16</b>
<b>Kits</b> .....	<b>17</b>

## Safety and General Information

**Caution, Warning and Danger Decals** have been placed on the equipment to warn of potentially dangerous situations. Care should be taken to keep this information intact and easy to read at all times. Replace missing or damaged safety decals immediately.

### Safety–Alert Symbol



**This is a safety–alert symbol.** When you see this symbol on your equipment, be alert to the potential for personal injury. This equipment is designed to be installed and operated as safely as possible...however, hazards do exist.

### Understanding Signal Words

**Signal words** are used in conjunction with the safety–alert symbol to identify the severity of the warning.



**DANGER** indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.



**WARNING** indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.



**CAUTION** indicates a hazardous situation which, if not avoided, **MAY** result in minor or moderate injury.

### Follow Safety Instructions

Carefully read all safety messages in this manual and on your equipment safety signs. Follow recommended precautions and safe operating practices.


Keep safety signs in good condition. Replace missing or damaged safety signs.

### Decal Descriptions

#### **DANGER: Moving Parts**

Disconnect electrical power before working on system, equipment may start automatically. Otherwise personal injury will result.

Severe personal injury will result if the equipment is operated without covers properly installed.

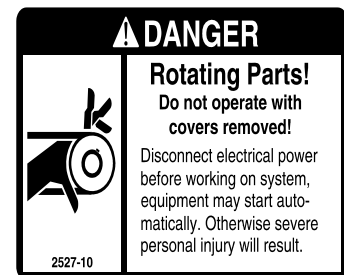

#### **DANGER: Electrical Hazard**


Disconnect electrical power before inspecting or servicing equipment unless maintenance instructions specifically state otherwise.

Ground all electrical equipment for safety.

All electrical wiring must be done by a qualified electrician in accordance with local and national electric codes.

Ground all non-current carrying metal parts to guard against electrical shock.

Electrical disconnects and over current protection are not supplied with the equipment.

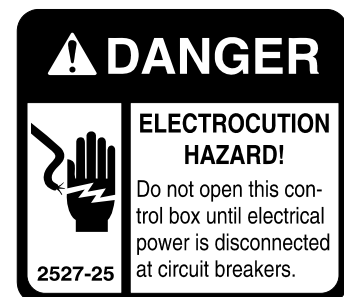

## General Information

The Chore-Time Ventilation Strap Winch is designed to raise and lower, and/or actuate Ventilation Equipment in a Poultry House . Using the equipment for purposes other than specified in this manual may cause personal injury and/or damage to the equipment.

## Specifications

**Strap Winch Travel Speed-** The Strap Winch travels between 8"-12-1/2" [20.3cm-31.8cm] per minute.

**Winch Capacity-** The Strap Winch has a working load capacity of 2000 lbs. [907.2 kg] working load.


**Pull Direction-** The Strap Winch is designed to be centered within the winching load and pull both directions to lift and lower from center.

**Pull Distance-** The Strap Winch is capable of pulling 6' [1.83m] in both directions.

# Assembly

## Attaching the Winch Mounting Bracket

### Wall Mount Application (54421-1 Kit)

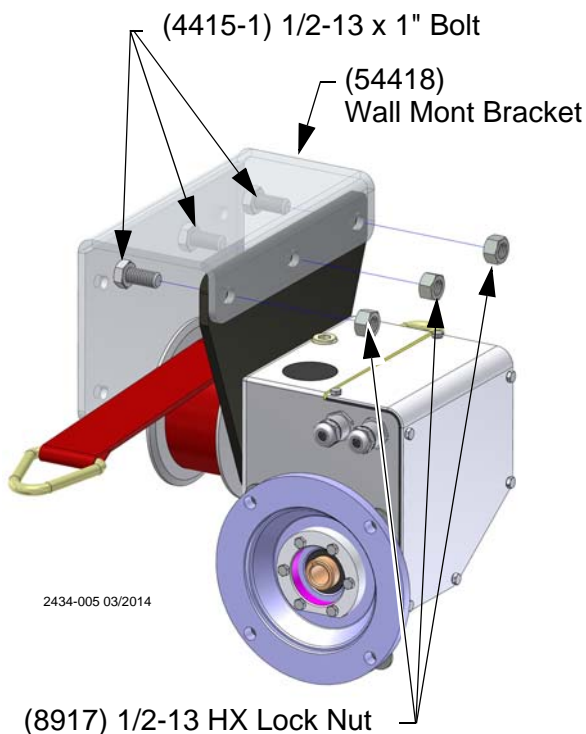

### Ceiling Mount Application (54421-2 Kit)

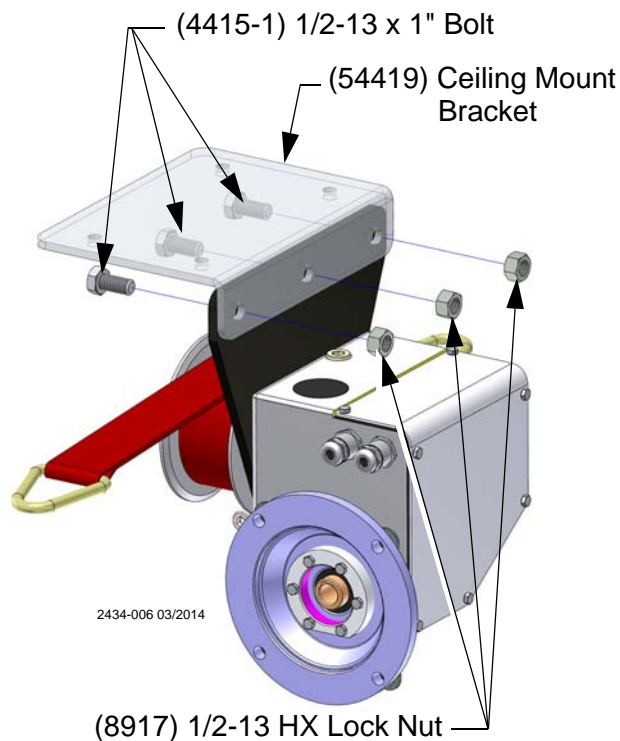


Figure 1. Winch Mounting Bracket

## Motor Installation



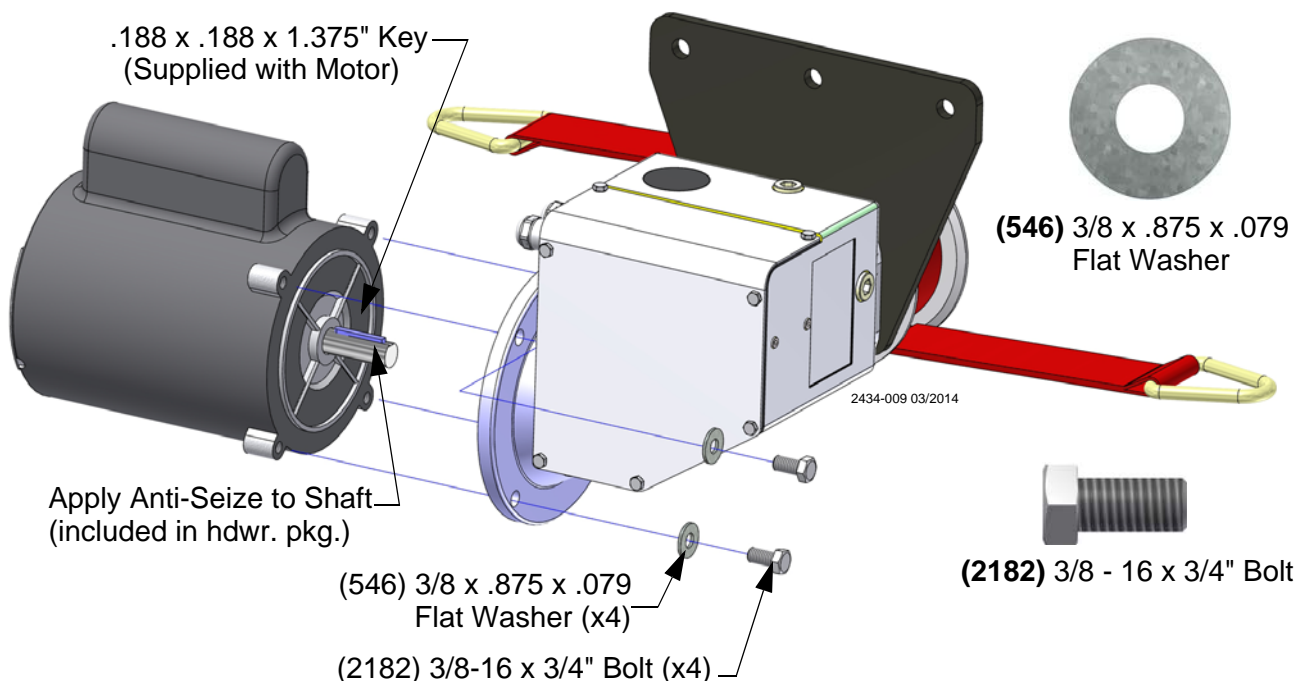


Figure 2. Motor Installation

## Wiring Motor to the Winch Unit

Wire the Motor to the Winch Unit using the Cord Assembly (4999-119) included as shown below.

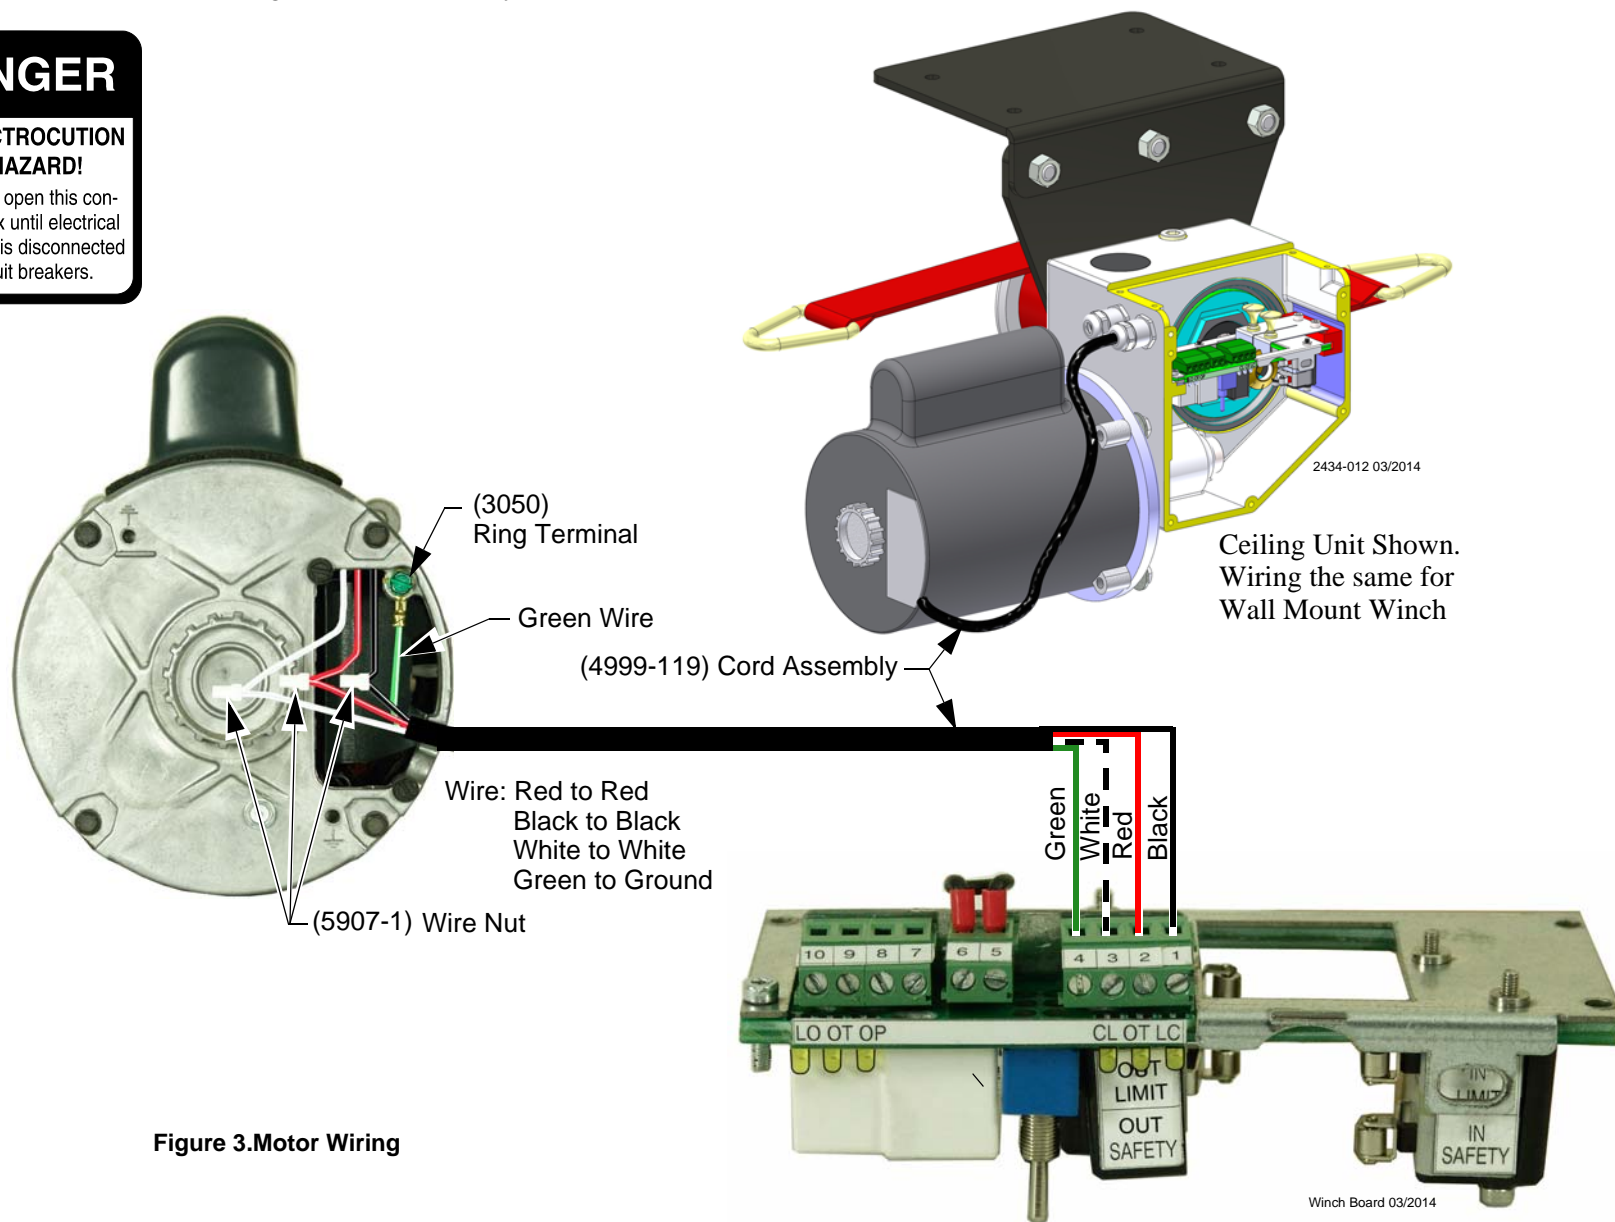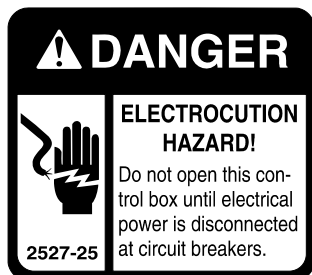

# Installation

## Mounting Bracket Installation

### Wall Mount Bracket Installation

Chore-Time Recommends mounting the Strap Winch to a Board that spans at least three Wall Studs. At least two of the Lag Screws (54428) used to attach the Winch should be secured to a Wall Stud. See **Figure 4.** for attaching the Wall Mount Bracket.

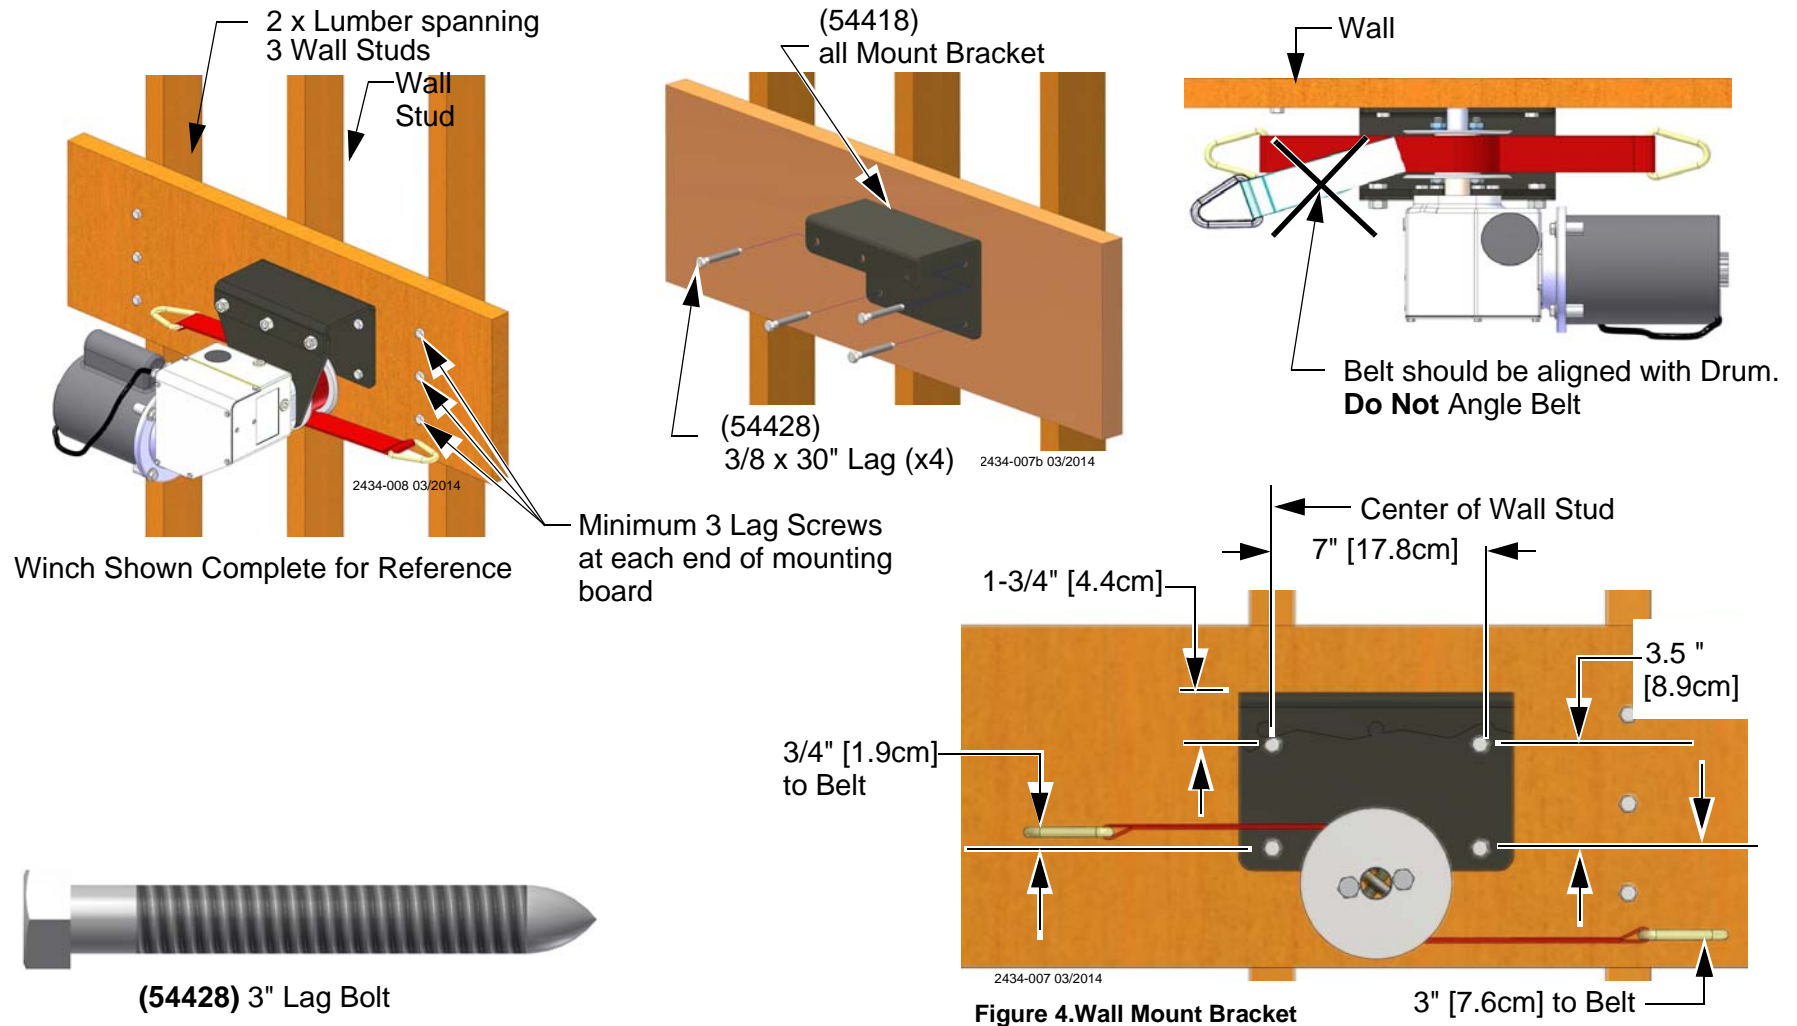


Figure 4. Wall Mount Bracket



## Ceiling Mount Bracket Installation

Chore-Time Recommends mounting the Strap Winch to a Board that spans at least three Rafters (Wood Rafters) or two Rafters (Metal Studs). At least two of the Lag Screws (54428) used to attach the Winch should be secured to a Rafter. **See Figure 5.** below for attaching the Wall Mount Bracket.

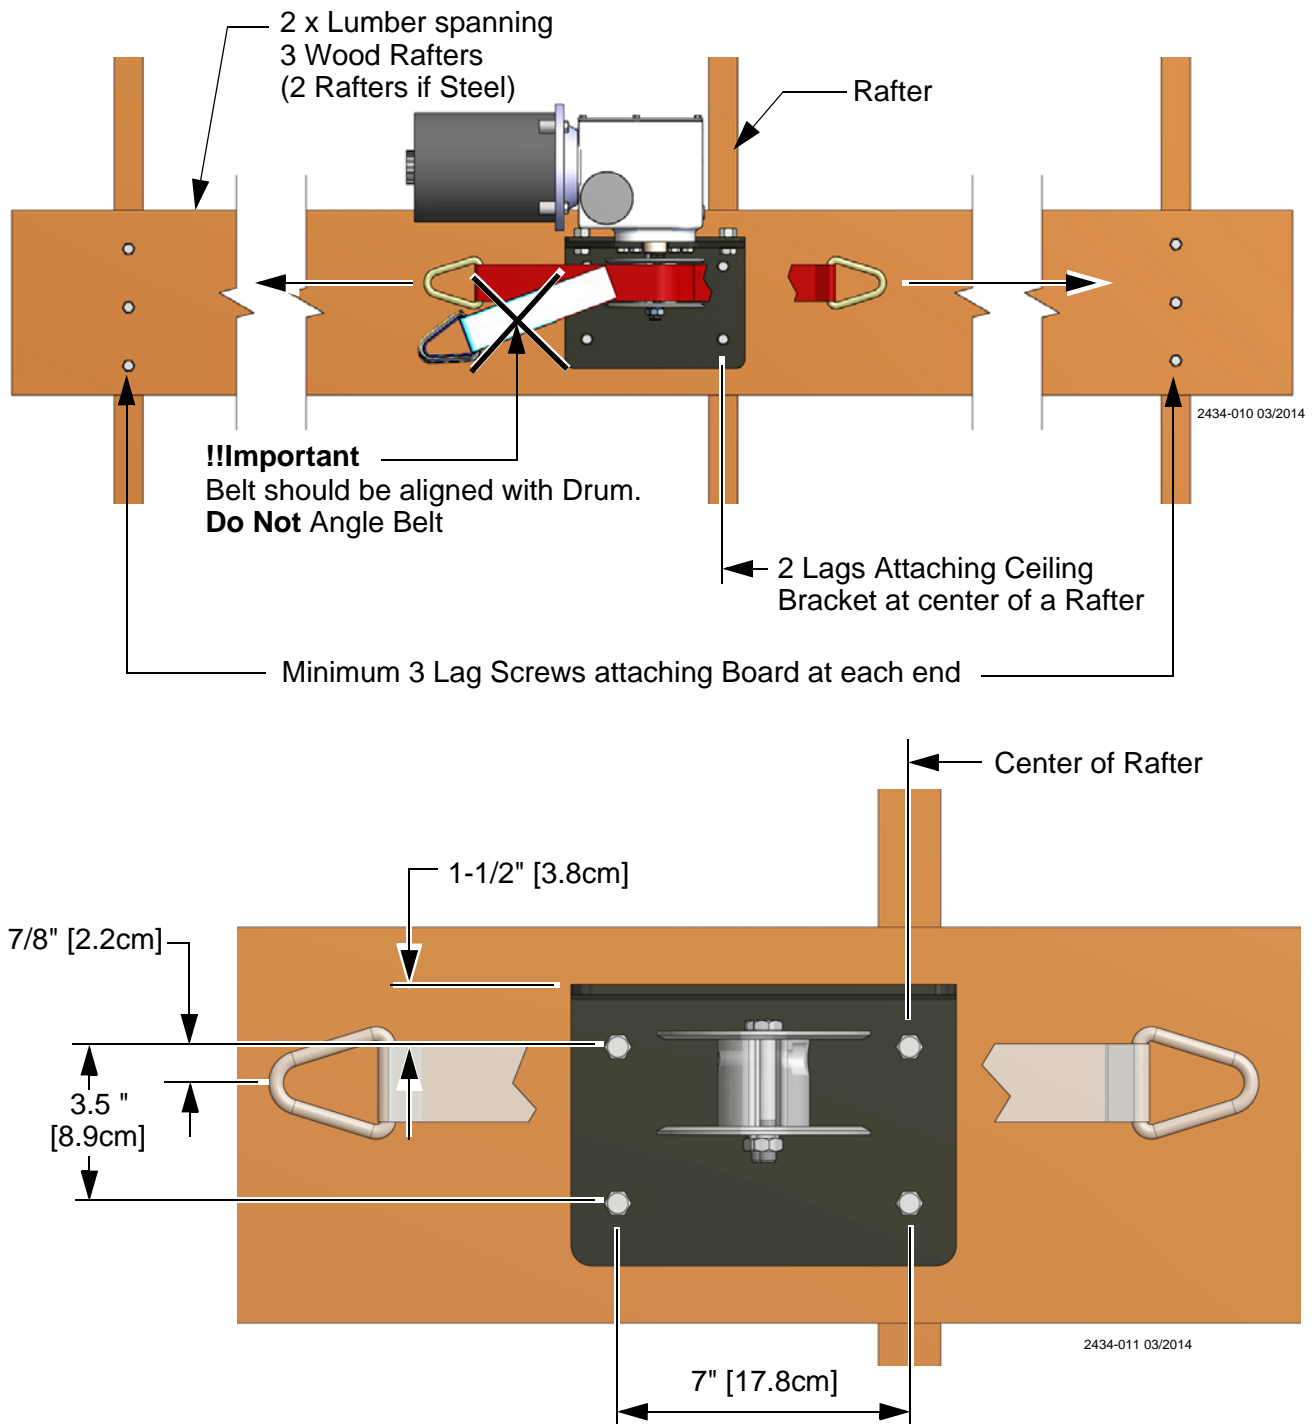


Figure 5.Ceiling Mounting Bracket

## Attaching Winch to Mounting Bracket

### Wall Mount

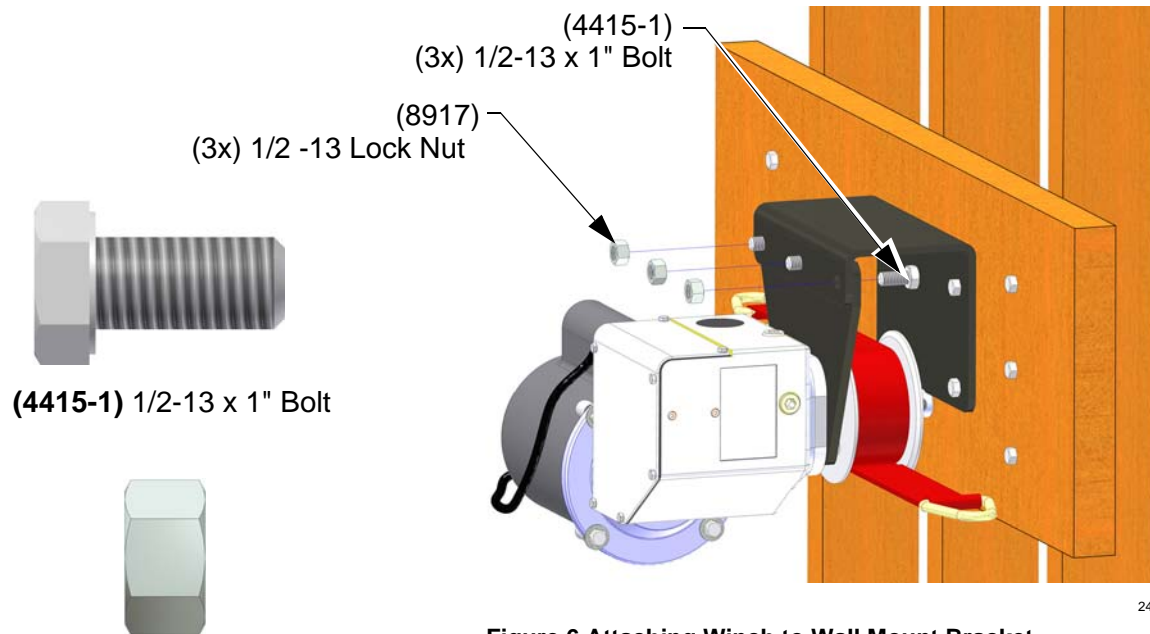


Figure 6. Attaching Winch to Wall Mount Bracket

### Ceiling Mount

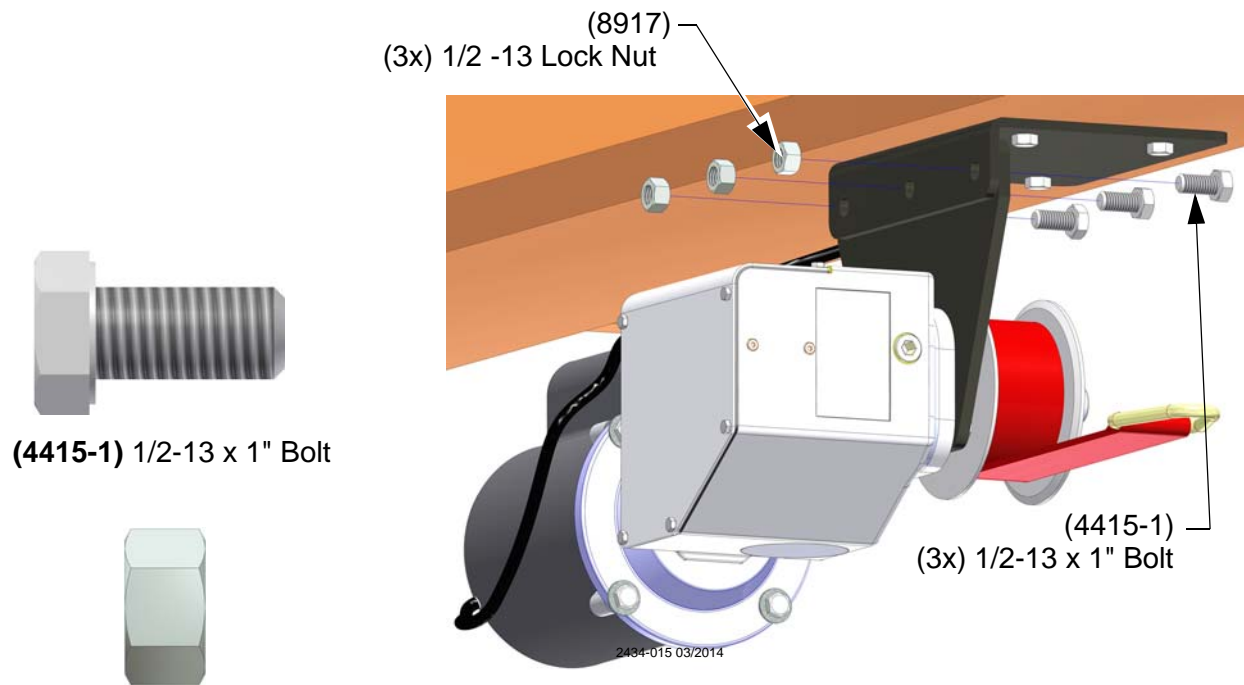


Figure 7. Attaching Winch to Ceiling Mount Bracket

## Wiring

### Wiring to Power

See “Wiring Motor to the Winch Unit” on page 7 for Motor Wiring..

- 1.If Wired as shown the "OUT" command signal will cause the strap to extend. An "IN" signal will retract the strap. (Red wire #7 terminal, and Black wire #8 terminal)
- 2.If you want the "OUT" command signal to retract the strap, reverse the red and black wires. (Red wire #8 terminal, and Black wire #7 terminal)



Form a Drip Loop in Cord to avoid water entering Winch

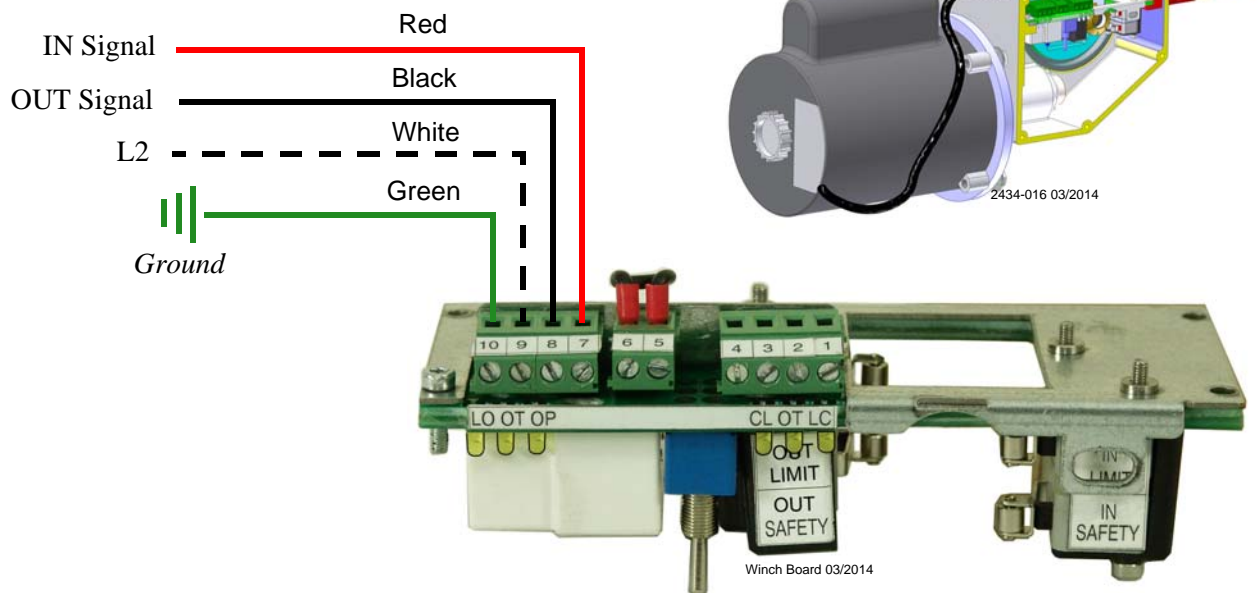


Figure 8. Attaching Winch to Wall Mount Bracket

## Wiring 2 Strap Winches in Parallel (To prevent backfeed between Strap Winches)

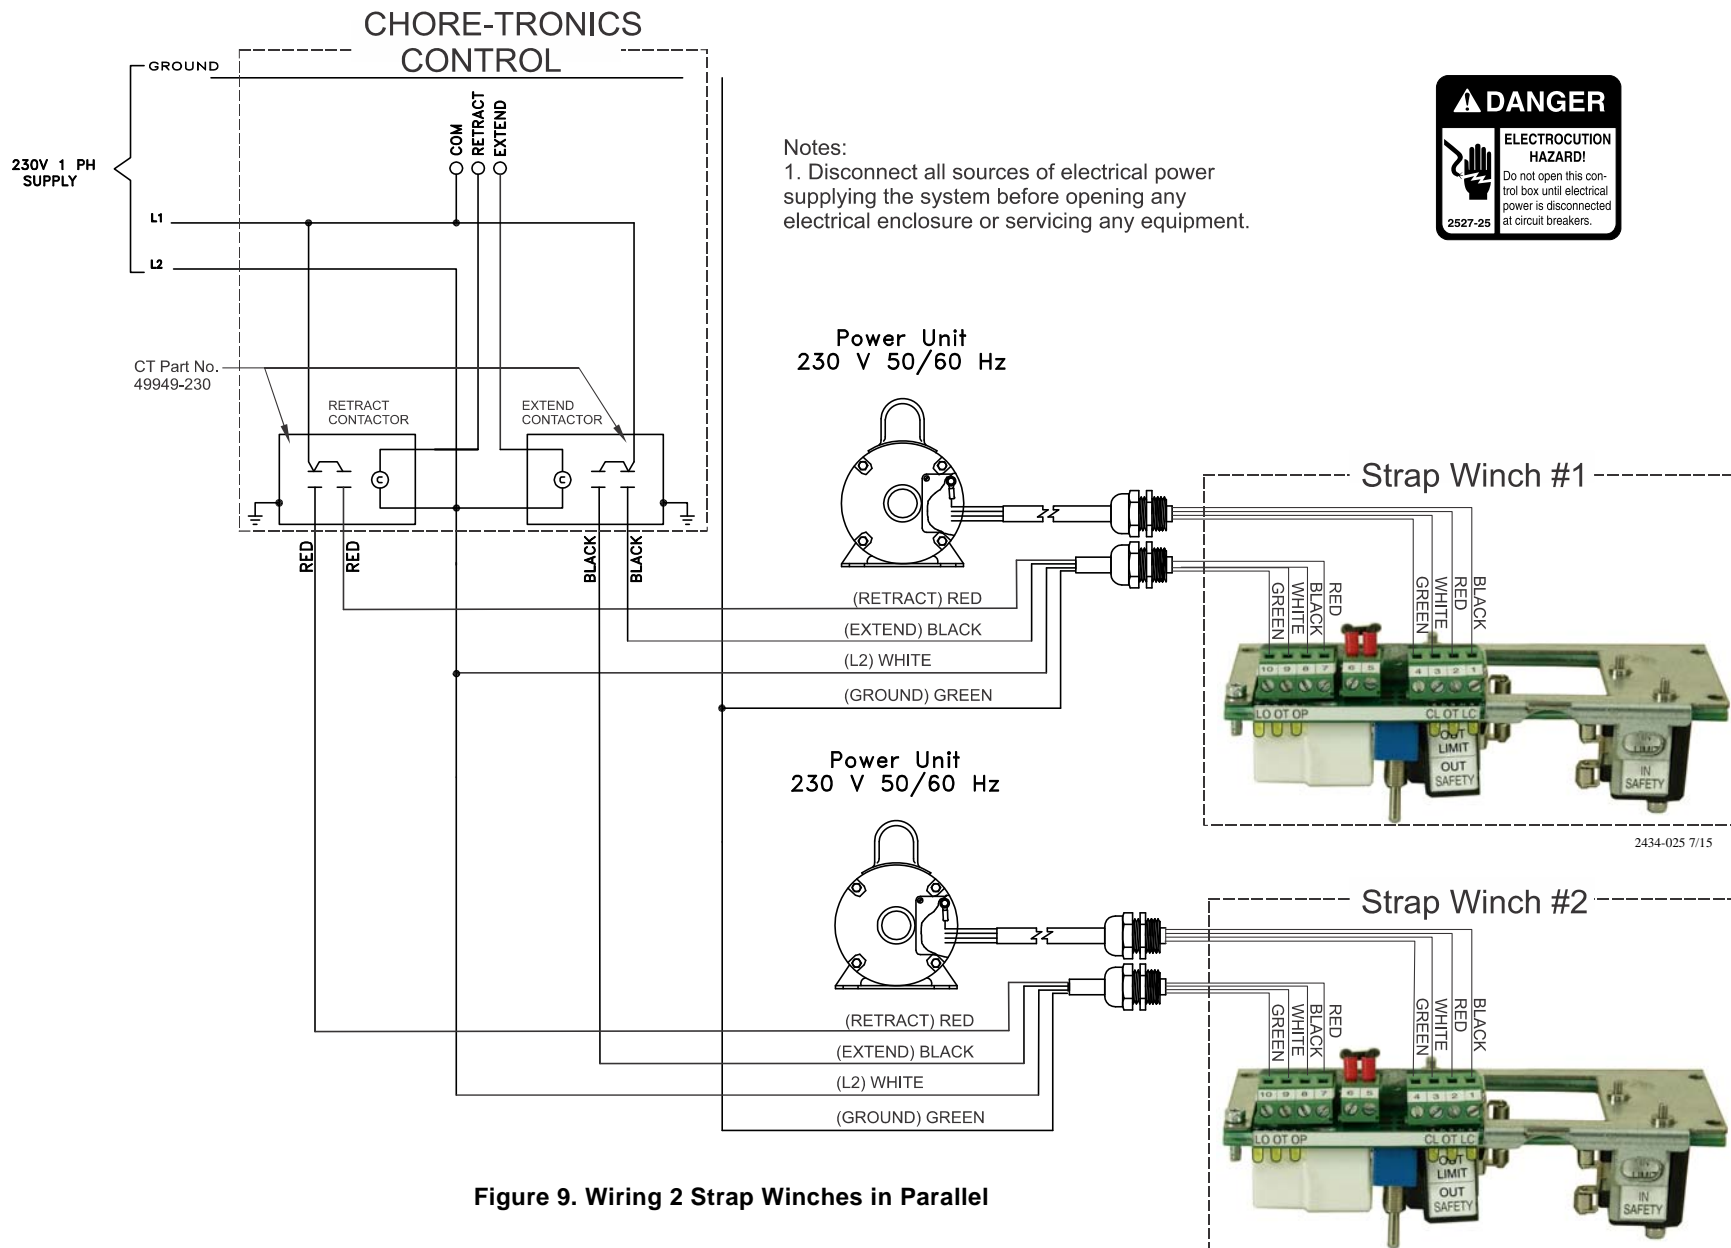


Figure 9. Wiring 2 Strap Winches in Parallel

## Setup

### Winch Board Switches and LED's

#### Local Operation

##### Strap "Out" rotation

1. Switch to the "Local" position.
2. For Strap "OUT" rotation press switch OUT/OFF/IN Switch to the "OUT" position.
3. For stopping rotation press the "OUT" Limit Switch.
4. If the "OUT" Safety Switch is activated, the Winch will stop all operation.

##### Strap "IN" rotation

1. For Strap "IN" rotation, press the IN/OFF/OUT switch to the "IN" position.
2. To stop rotation press the "IN" Limit Switch.
3. If the "IN" Safety Switch is activated, the Winch will stop.

To reverse Rotation see "Wiring to Power" on page 11

Remote/Local Switch

**Remote**-Used if connecting to an external Control.

**Local**-For operating with Winch with the OUT/OFF/IN switch

OUT/OFF/IN Switch

**OUT**-To operate the Winch letting Strap out.

**OFF**-Will not allow any operation.

**IN**-To operate the Winch pulling Strap in


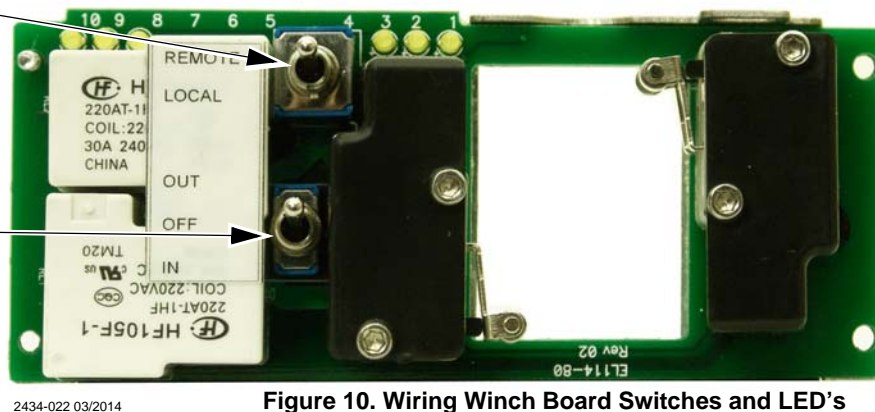


Figure 10. Wiring Winch Board Switches and LED's

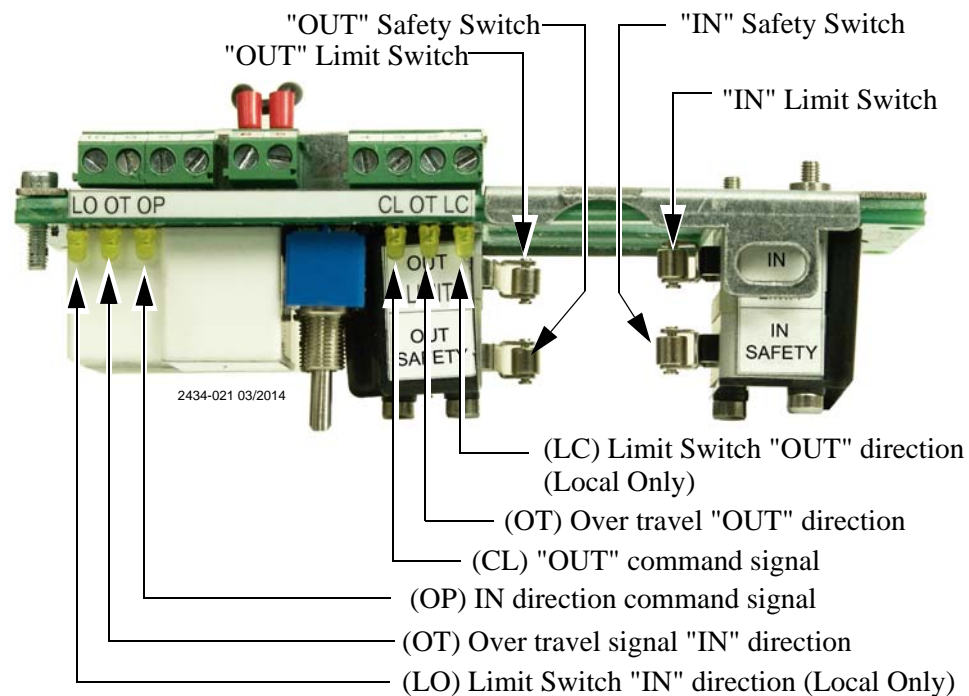

## Setting Travel Limits

### "Out" Limit

1. Set the Local/Remote Switch to Local.
2. Use the "Out" switch to let out the desired length of Strap. (If needed, Pull up on the Spring Clip and move the "Out" Brass Nut to gain enough travel.
3. With the Strap in the desired location, move the "Out" Brass Nut out until it activates the "Out" Limit Switch. (The "LO" LED will illuminate)

**Note: If the "OUT" Safety Switch is activated the Winch will stop operation.** (The "OT" LED will illuminate)


4. Snap the Spring Clip back into the slot in the Brass Nut.

"Out" Spring Clip

"In" Spring Clip

"Out" Brass Nut

"IN" Brass Nut

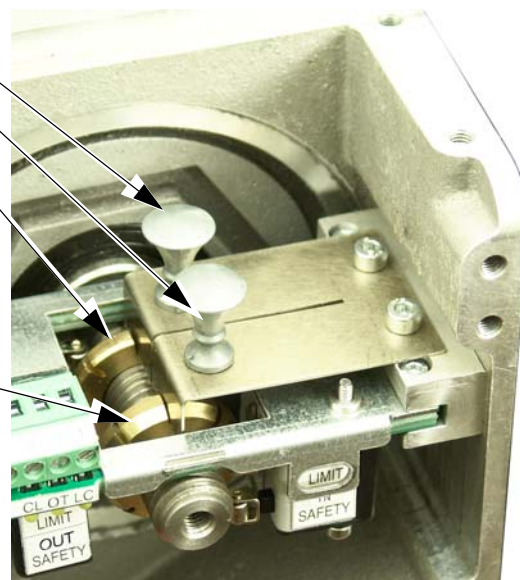

2434-023 03/2014

### "IN" limit


1. Use the "IN" Switch to Retract the Strap to the desired length and adjust the "IN" Brass Nut until it depresses the "IN" Limit Switch. (The "LC" LED will illuminate.

**Note: If the "IN" Safety Switch is activated the Winch will stop operation.** (The "CL" LED will illuminate)

2. Snap the Spring Clip back into the slot in the Brass Nut.


"Local" position

OUT/OFF/IN Switch

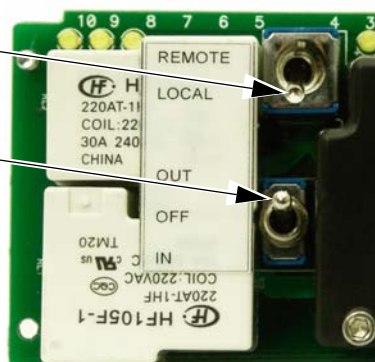

2434-024 03/2014

Figure 11. Setting Travel Limits

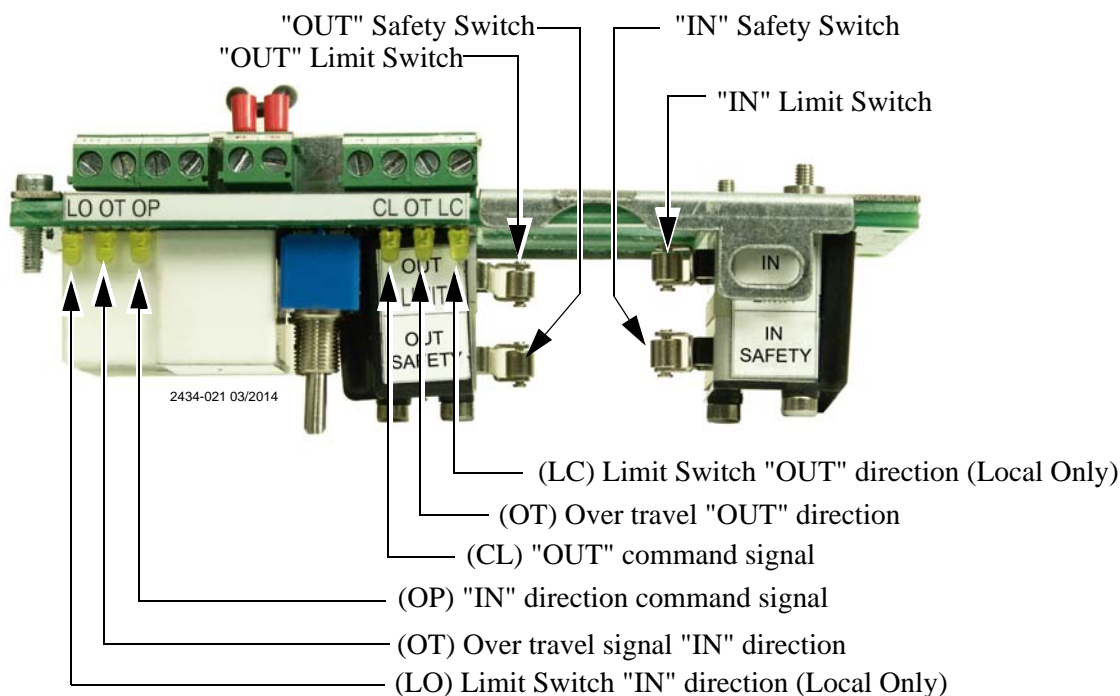


2434-021 03/2014

## Maintenance

### Strap Replacement

1. Remove the old Strap as shown below.

1.) Remove 10 x 45  
Socket Head Screw

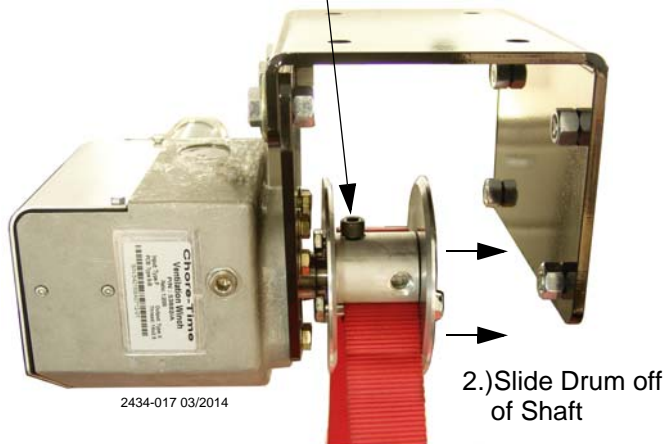

3.) Remove #10 Nuts  
(54840)



4.) Remove old Strap


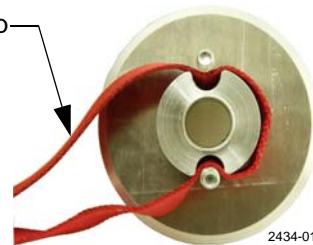


Figure 12. Removing Strap

2. Route new Strap, re-assemble, and re-attach Drum.

1.) Put new Strap on

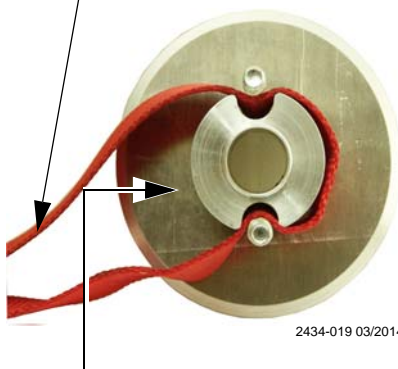

Do not Cover Holes  
with Strap

3.) Re-install #10 Nuts  
(54840)



4.) Slide Drum on and Re-install  
10 x 45 Socket Head Screw



Figure 13. Attaching new Strap

### Oil Recommendation

Use: Mobil Glycoil 30, Shell-Tivela 220, Texaco-Synoil, SG-XP220, Esso-S220, Telesia Oil 150, BP-Energol SG -XP 220 Synthetic Oil.

Wall Mount Model shown

Motor Key Supplied with Motor

Ceiling Mount Bracket

2434-020b 03/2014

2434-020b 03/2014

2434-UZUC U3/2U14



			54421-1 Wall Mount	54421-2 Ceiling Mount
Item	Description	Qty.	Part No.	
1	Strap Winch	1	53882	53882
2	Motor .33H 1-60/50-220/230 BHD	1	54985	54985
3	Wall Mount Bracket	1	54418	--
	Ceiling Mount Bracket	1	--	54419
4	1/2-13 x 1 HH5 Bolt	3	4415-1	4415-1
5	1/2-13 HX Lock Nut	3	8917	8917
6	3/8 x 3" Lag Bolt	4	54428	54428
7	3/8-16 x 3/4" HH5 Bolt	6	2182	2182
8	Strap Winch Gear Case Bracket (In Strap Winch Assembly 53882)	1	54420	54420
9	Cord	1	4999-119	4999-119
10	M10 x 45 Socket Head Screw	1	54841	54841

			54421-1 Wall Mount	54421-2 Ceiling Mount
Item	Description	Qty.	Part No.	
11	M10 x 80 Hex Grade Bolt	2	54839	54839
12	Prevailing Torque M10 Nut	2	54840	54840
13	Drum Disc	2	54837	54837
14	Winch Drum Base	1	54838	54838
15	Winch Strap	1	54919	54919
16	Spring Lever Assembly	1	54866	54866
17	Strap Winch Circuit Board	1	54836	54836
18	3/8 x .875 x .079 Flat Washer	4	546	546
19	PCB Support Rail	1	55700	55700
20	M4 x 8 Soc. Hd. Screw	2	55699	55699
*Included in 54842 Drum Assembly				

## Kits

### Winch with Motor (54979)


Description	Qty	Part No.
Ventilation Strap Winch	1	53882
230V, 50/60HZ C Face Motor	1	54985
Motor Mount Hardware Kit	1	54921

### Wall Mount Kit (54426)

Description	Qty	Part No.
Wall Mount Bracket	1	54418
1/2-13x1 Bolt	3	4415-1
1/2-13 Hx Lock Nut	3	8917
3/8 x 3" Lag Bolt	4	54428

### Ceiling Mount Kit (54425)

Description	Qty	Part No.
Ceiling Mount Bracket	1	54419
1/2-13x1 Bolt	3	4415-1
1/2-13 Hx Lock Nut	3	8917
3/8 x 3" Lag Bolt	4	54428

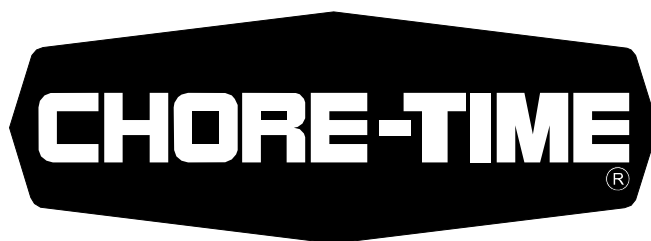

**MADE TO WORK.**

**BUILT TO LAST.®**

### **Revisions to this Manual**

<b>Page No.</b>	<b>Description of Change</b>
16,17	Added PCB Rail and 55699 Socket Hd. Screw to Parts List

**Contact your nearby Chore-Time distributor or representative for additional parts and information.**

Chore-Time Group  
A division of CTB, Inc.  
PO Box 2000  
Milford, Indiana 46542-2000 USA  
Phone (574) 658-4101 Fax (877) 730-8825  
E-mail: [www.choretimepoultry.com](http://www.choretimepoultry.com)  
Internet: [poultry@choretime.com](mailto:poultry@choretime.com)