



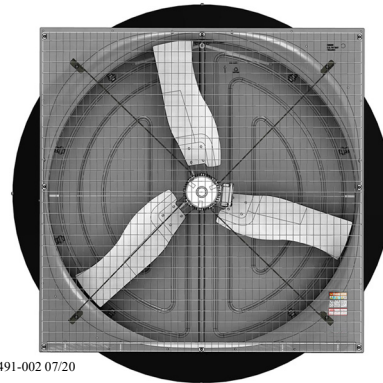

57" Assembled & Unassembled Direct Drive Endura[®] Fan

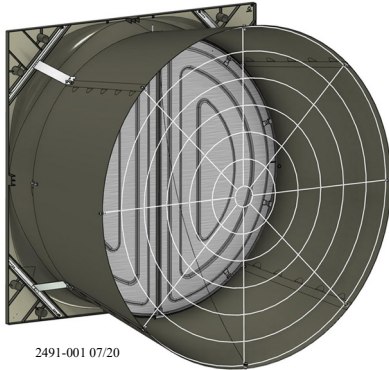

2491-001 07/20

2491-002 07/20

Fan Part No. 56555-X

Fan	Bess Lab Test*	Phase	Voltage	Hz	Full Speed RPM
56555-1	20084	1	230	60	630
56555-2	20085	3	230	60	630
56555-2	20086	3	230	50	630

*Bess Lab test data available at <http://bess.illinois.edu/type.asp>



Operating static pressure should be less than 0.25 inches water column [62 Pa].

The Fan Inlet and exhaust must be kept clear of obstructions. Failure to keep the Fan airflow path clear of obstructions could cause loss of Fan performance and Fan damage.

Contents

Topic	Page
Safety Information	3
DANGER: Electrical Hazard	3
DANGER: Rotating Fan Blade	3
Limited Warranty	3
Unassembled Fan Component Part Numbers	4
Assembled Fan Component Part Numbers	5
Tools Needed and Supplies	6
VFD Cross Reference Part Numbers	6
Endura® DD Fan New Installation Planning	7
Installation	8
Inspecting the Shroud	8
Assembly Jig for Unassembled Fans	8
Install Motor Supports	9
Blade Installation	9
Shroud and Shroud Components Installation	10
Bottom Shelf Installation	12
Attaching the Fan to the Wall	12
Keeping Fan Shroud edges straight	13
Attaching the Fan Shroud to the Wall	13
Cone Assembly	14
Installing the Orifice Frame	15
Cone Installation	15
Door Assembly and Installation	17
Grill Installation	18
Check Blade Tip Clearance	19
Door Spring Installation	19
Caulking	20
Fan Drive (VFD) Mounting	20
Screen Installation	21
Control Signal Wiring	22
Drive Parameters	22
Test Fan for proper operation	23
Maintenance	23
Parts Numbers (Itemized)	24
Part Numbers (Itemized) continued	26

Safety Information

Carefully read all safety messages in this manual and on your equipment safety signs. Follow recommended precautions and safe operating practices. Keep safety signs in good condition. Replace missing or damaged safety signs.

DANGER: Electrical Hazard

Disconnect electrical power before inspecting or servicing equipment. Ground all electrical equipment for safety. All electrical wiring must be done by a qualified electrician in accordance with local and national electric codes. Ground all non-current carrying metal parts to guard against electrical shock. With the exception of motor overload protection, electrical disconnects and over current protection are not supplied with the equipment.



DANGER: Rotating Fan Blade

Keep Hands away. Disconnect power before servicing. Fan may start automatically. Do not operate the Fan without the screens in place. Disregard to these things will cause serious injury including death.



Limited Warranty

Chore-Time Group, a division of CTB, Inc. ("Chore-Time") warrants new CHORE-TIME Endura® Fans manufactured by Chore-Time to be free from defects in material or workmanship under normal usage and conditions, for One (1) year from the date of installation by the original purchaser ("Warranty"). Chore-Time provides for an extension of the aforementioned Warranty period ("Extended Warranty Period") with respect to certain Product parts ("Component Part") as set forth in the table below. If such a defect is determined by Chore-Time to exist within the applicable period, Chore-Time will, at its option, (a) repair the Product or Component Part free of charge, F.O.B. the factory of manufacture or (b) replace the Product or Component Part free of charge, F.O.B. the factory of manufacture. This Warranty is not transferable, and applies only to the original purchaser of the Product.

Component Part	Extended Warranty Period
Endura® Fan Housing and Cones (Including Composite Shrouds, Composite Doors and HDPE Cone Panels)	Five (5) Years

CONDITIONS AND LIMITATIONS

THIS WARRANTY CONSTITUTES CHORE-TIME'S ENTIRE AND SOLE WARRANTY AND CHORE-TIME EXPRESSLY DISCLAIMS ANY AND ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, EXPRESS AND IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES AS TO MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES. CHORE-TIME shall not be liable for any direct, indirect, incidental, consequential or special damages which any purchaser may suffer or claim to suffer as a result of any defect in the Product. Consequential or Special Damages as used herein include, but are not limited to, lost or damaged products or goods, costs of transportation, lost sales, lost orders, lost income, increased overhead, labor and incidental costs, and operational inefficiencies. *Some jurisdictions prohibit limitations on implied warranties and/or the exclusion or limitation of such damages, so these limitations and exclusions may not apply to you. This warranty gives the original purchaser specific legal rights. You may also have other rights based upon your specific jurisdiction.*


Compliance with federal, state and local rules which apply to the location, installation and use of the Product are the responsibility of the original purchaser, and CHORE-TIME shall not be liable for any damages which may result from non-compliance with such rules.

The following circumstances shall render this Warranty void:

- Modifications made to the Product not specifically delineated in the Product manual.
- Product not installed and/or operated in accordance with the instructions published by the CHORE-TIME.
- All components of the Product are not original equipment supplied by CHORE-TIME.
- Product was not purchased from and/or installed by a CHORE-TIME authorized distributor or certified representative.
- Product experienced malfunction or failure resulting from misuse, abuse, mismanagement, negligence, alteration, accident, or lack of proper maintenance, or from lightning strikes, electrical power surges or interruption of electricity.
- Product experienced corrosion, material deterioration and/or equipment malfunction caused by or consistent with the application of chemicals, minerals, sediments or other foreign elements.
- Product was used for any purpose other than for the care of poultry and livestock.


The Warranty and Extended Warranty may only be modified in writing by an officer of CHORE-TIME. CHORE-TIME shall have no obligation or responsibility for any representations or warranties made by or on behalf of any distributor, dealer, agent or certified representative.

Unassembled Fan Component Part Numbers

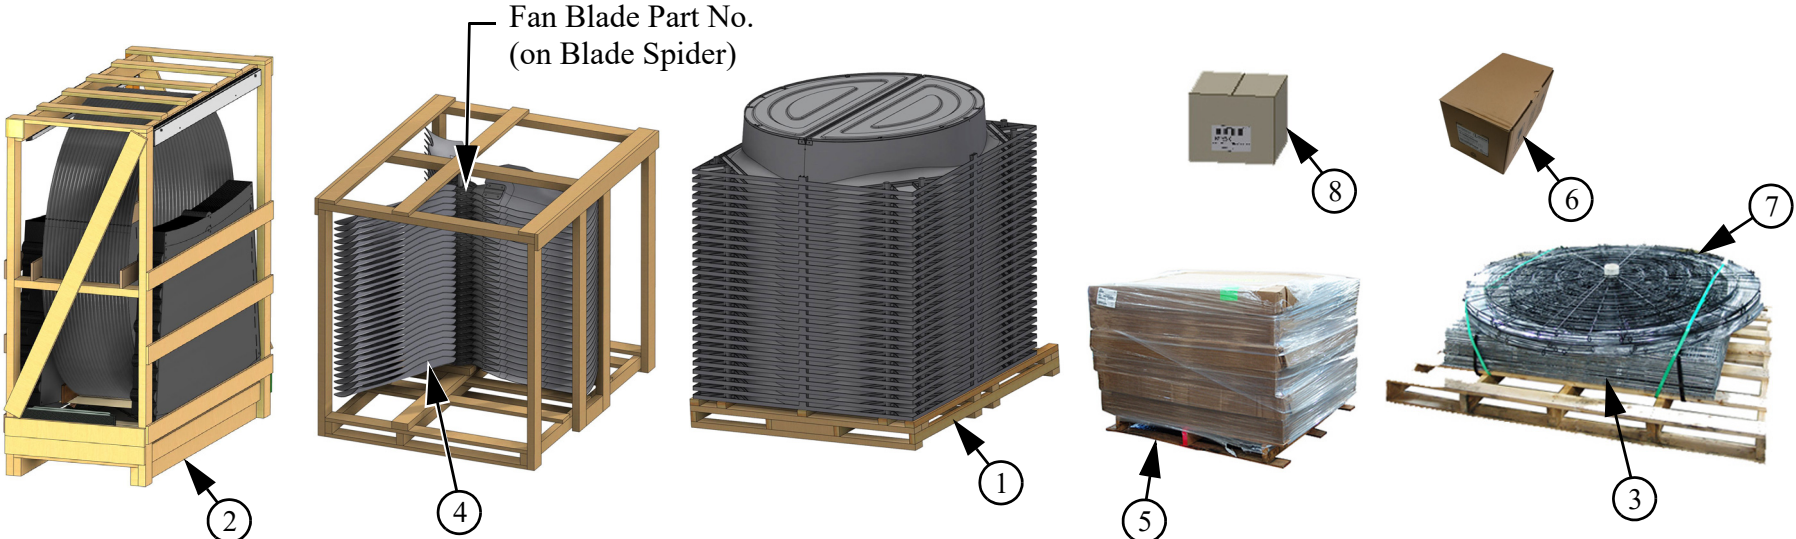

Unassembled 57" DD Fan Kit Part Numbers										
Fan Kit Part Number		56555-1U	56555-2U	56555-3U	56555-1SU	56555-2SU	56555-3SU	56555-1TU	56555-2TU	56555-3TU
Phase		1	3	3	1	3	3	1	3	3
Voltage		230	230	380-480	230	230	380-480	230	230	380-480
Cone Grill Spacing		6" [152mm]	6" [152mm]	6" [152mm]	6" [152mm]	6" [152mm]	6" [152mm]	3" [76mm]	3" [76mm]	3" [76mm]
Fan Blade Material		Galv.	Galv.	Galv.	SS	SS	SS	Galv.	Galv.	Galv.
Item	Description	Component Part No.								
1	57" Fan Shroud and Door Package	53580-XX	53580-XX	53580-XX	53580-XX	53580-XX	53580-XX	53580-XX	53580-XX	53580-XX
2	57" DD Fan Component Pack	56559-XX	56559-XX	56559-XX	56559-XX	56559-XX	56559-XX	56559-XX	56559-XX	56559-XX
3	59 Square 1.25x2 Wire Screen	56540	56540	56540	56540	56540	56540	56540	56540	56540
4	57" Fan Blade	56494-XX	56494-XX	56494-XX	54530-XX	54530-XX	54530-XX	56494-XX	56494-XX	56494-XX
5	Motor	56501	56501	56704	56501	56501	56704	56501	56501	56704
6	Programmed VFD	56541-1-1	56541-2-1	56541-3-2	56541-1-1	56541-2-1	56541-3-2	56541-1-1	56541-2-1	56541-3-2
7	57" Fan Cone Grill	53129	53129	53129	53129	53129	53129	55783	55783	55783
8	57" DD Fan Hardware Package	56557-1XX	56557-1XX	56557-3XX	56577-1SXX	56577-1SXX	56577-3SXX	56577-1XX	56557-1XX	56557-3XX
XX=part packaged quantity										

Assembled Fan Component Part Numbers

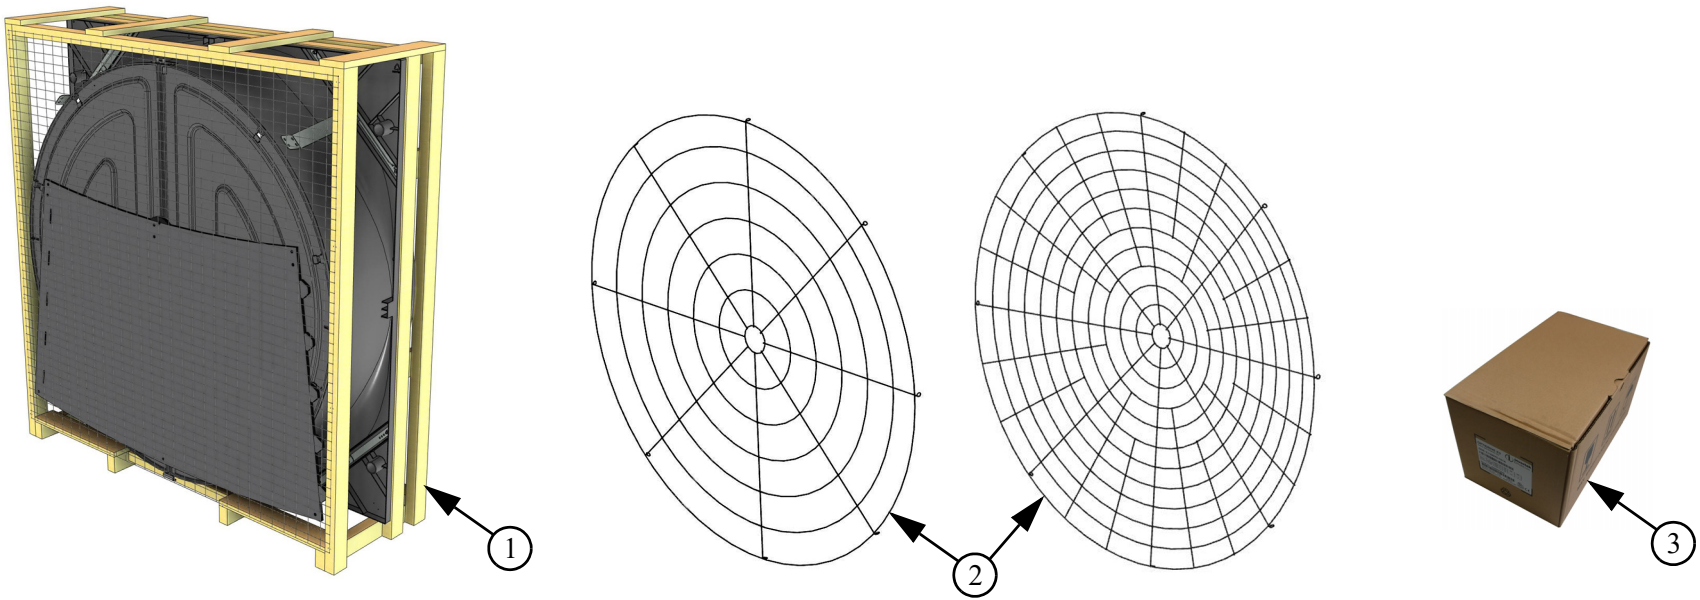

Assembled 57" DD Fan Kit Part Numbers										
Fan Kit Part Number	56555-1	56555-2	56555-3	56555-1S	56555-2S	56555-3S	56555-1T	56555-2T	56555-3T	
Phase	1	3	3	1	3	3	1	3	3	
Voltage	230	230	380-480	230	230	380-480	230	230	380-480	
Cone Grill Ring Spacing	6" [152mm]	6" [152mm]	6" [152mm]	6" [152mm]	6" [152mm]	6" [152mm]	3" [76mm]	3" [76mm]	3" [76mm]	
Fan Blade Material	Galv.	Galv.	Galv.	SS	SS	SS	Galv.	Galv.	Galv.	
Item	Description	Component Part No.								
1	57" DD Fan Sub-Assembly	56555-1P	56555-1P	56555-3P	56555-1PS	56555-1PS	56555-3PS	56555-1P	56555-1P	56555-3P
2	57" Fan Cone Grill	53129	53129	53129	53129	53129	53129	55783	55783	55783
3	Programmed VFD	56541-1-1	56541-2-1	56541-3-2	56541-1-1	56541-2-1	56541-3-2	56541-1-1	56541-2-1	56541-3-2

Tools Needed and Supplies


- Ratchet or Impact Wrench
- Phillips Screwdriver
- Drill
- 3/16" Drill Bit
- Expansion Clamp (See “Keeping Fan Shroud edges straight” on page 13)
- 3/8" Socket
- 1/2" Socket or Wrench
- Side Cutters
- Caulking

VFD Cross Reference Part Numbers

Chore-Time Part Number	Invertek Model Number
56541-1-X	ODE-3-120070-101A
56541-2-X	ODE-3-120070-301A
56541-3-X	ODE-3-140041-301A

Endura® DD Fan New Installation Planning


Planning the layout of the spacing between Fans is very important. Spacing too close together will cause interference between the discharge Cones. See the Invertek ODE-3 IP66 Outdoor User Guide, (MV2493) at www.choretime.com/documents, Manuals, Ventilation, Fans & Shutters, 57-Inch Endura Fans, MV2493 for additional drive mounting requirements.

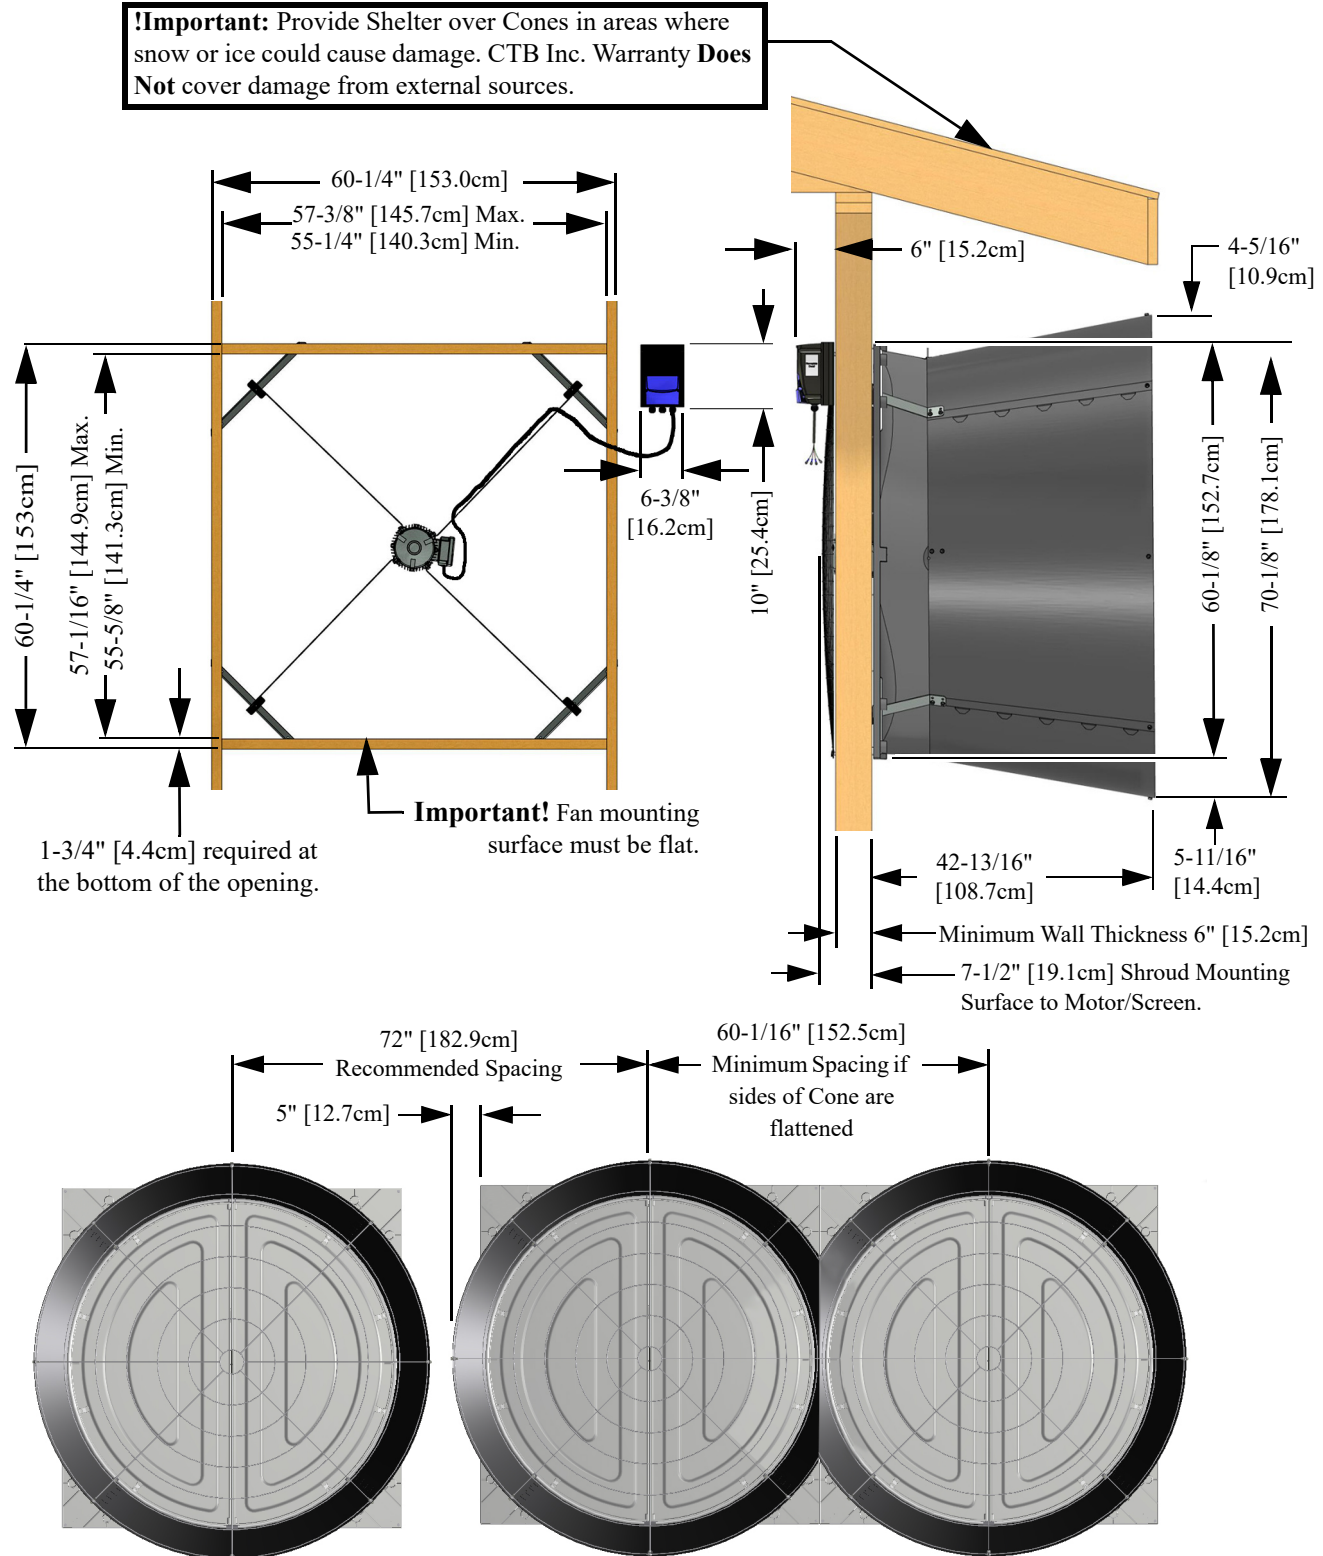


Installation

Inspecting the Shroud



Inspect the Shroud assembly for hardware as received.

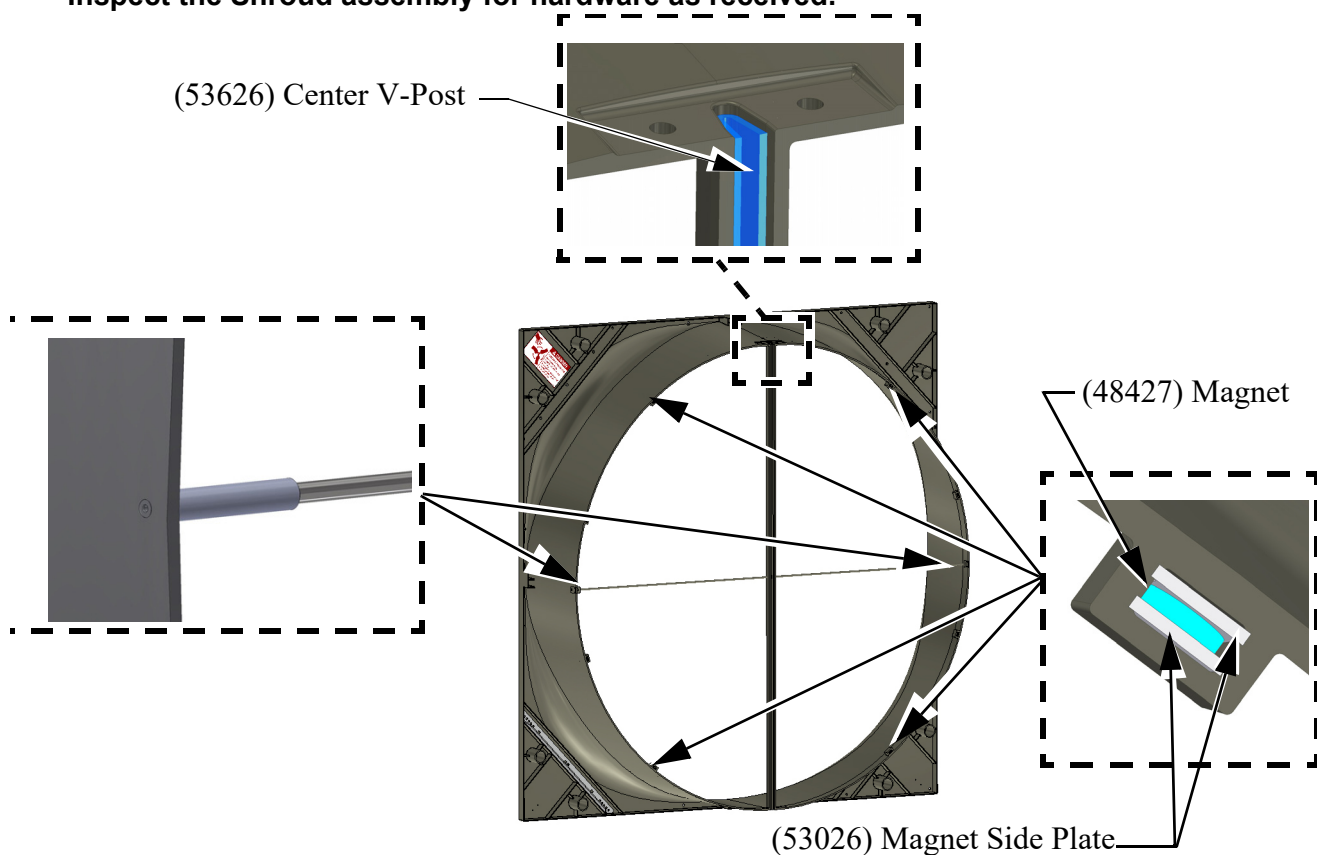

Assembly Jig for Unassembled Fans (For assembled versions skip to page 12)

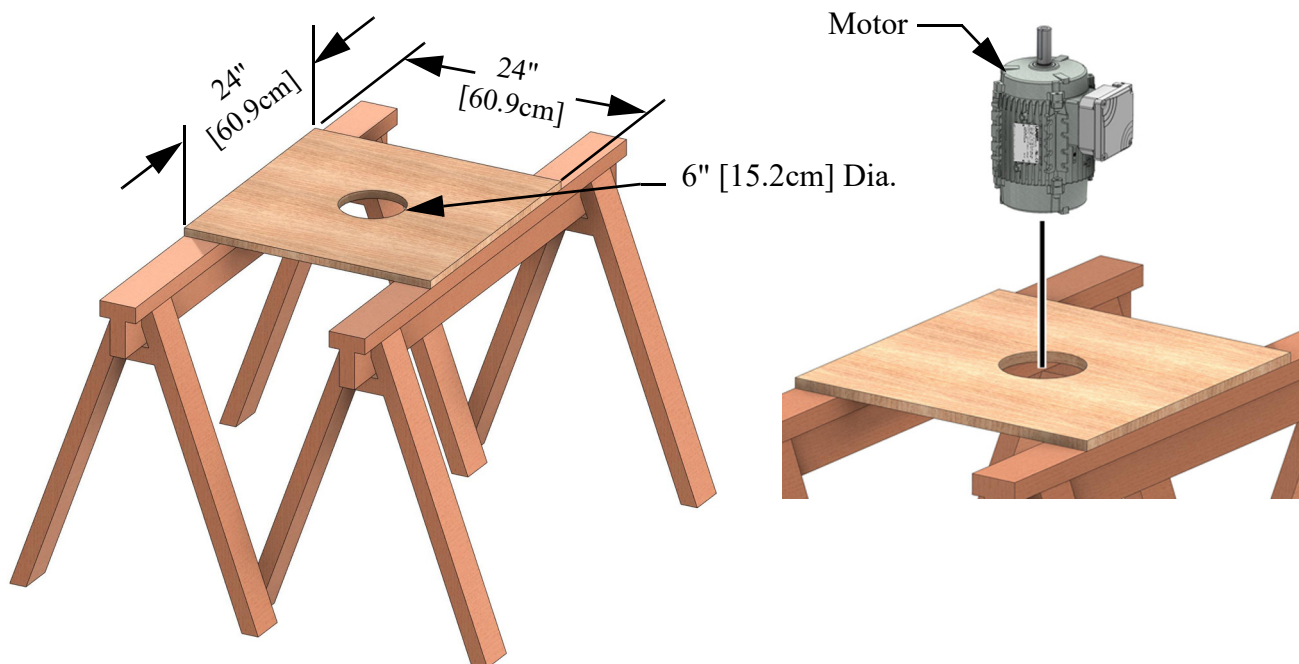

Install Motor Supports

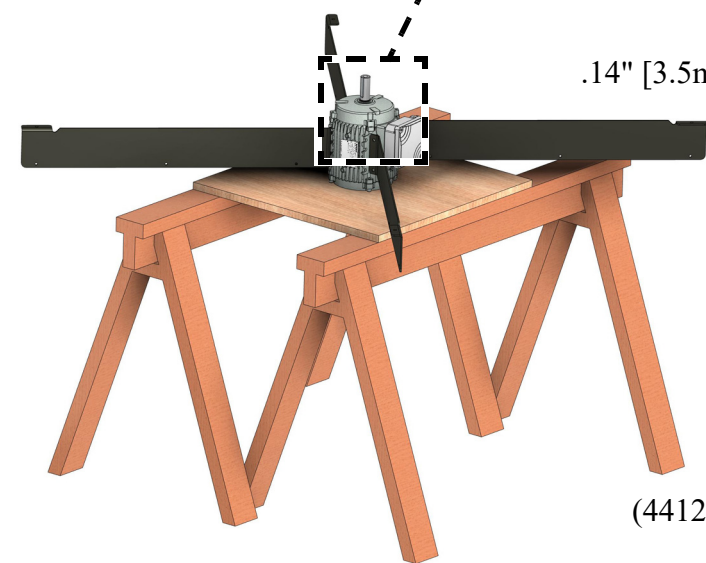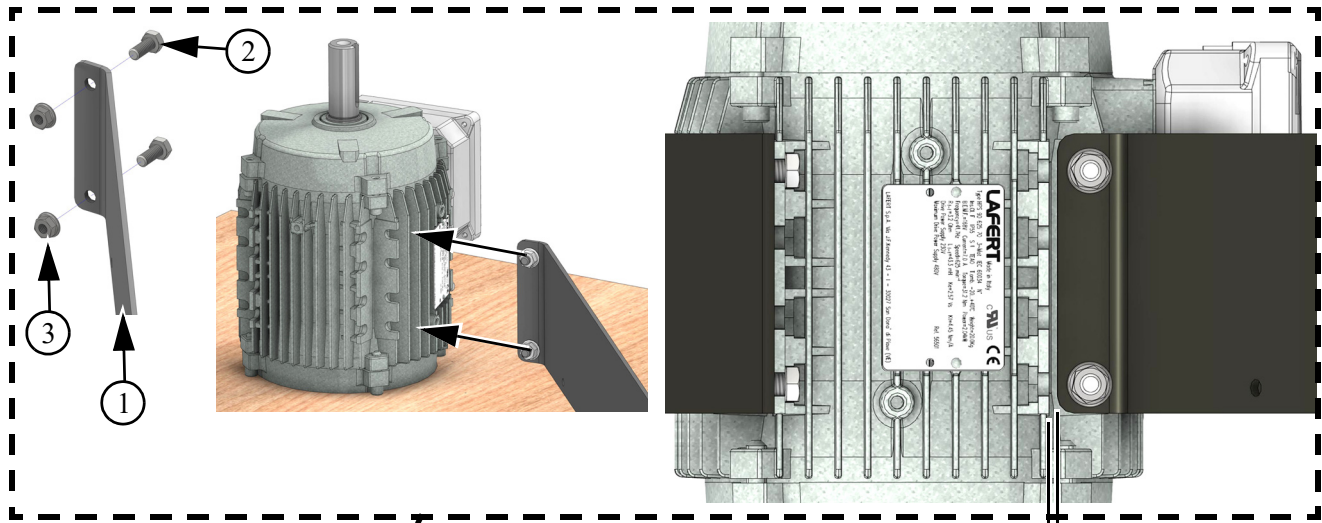


Edges Parallel
.14" [3.5mm] Maximum Gap

Item	Description	Part No.
1	57" DD Fan Motor Support	56502
2	5/16-18 x 3/4 Bolt	4412-11
3	5/16 Flg. Nut	46764




(4412-11) 5/16-18 x 3/4 Bolt (46764) 5/16 Flg. Nut


Blade Installation

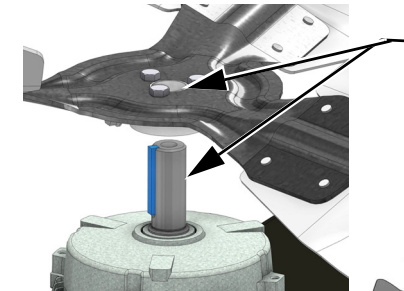

Apply Anti-Seize to the Fan Blade Shaft and the Fan Blade bore before installing Blade.

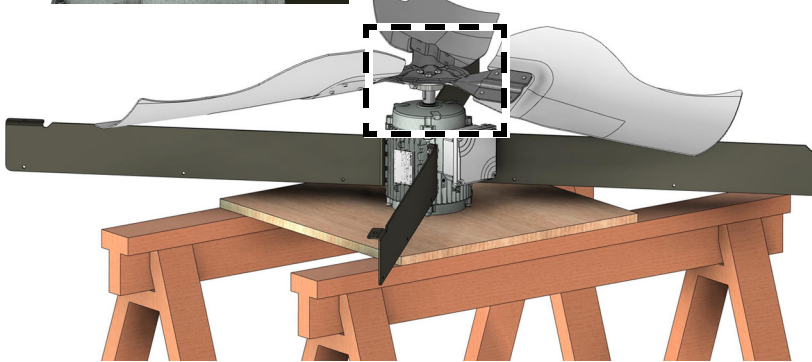

Blade and 1/4" Key flush with end of Motor Shaft.

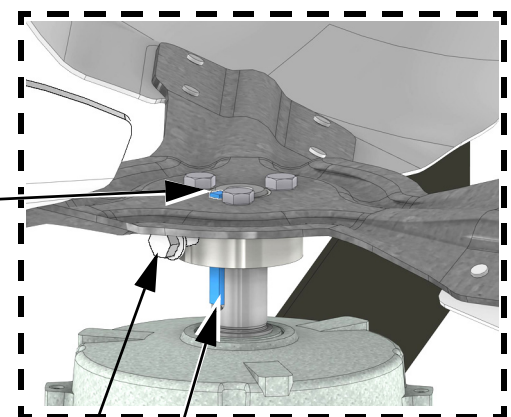


1/4" Key Supplied with Motor


Torque Fan Blade Bolt to 252 ± 8 in lbs. [28.47 ± .9 Nm].

Shroud and Shroud Components Installation

1. Assemble the four corner Bracket assemblies by threading (4412-28) Bolts into the Corner Supports as shown. Each Corner Bracket Assembly is unique. Make sure to use the appropriate Corner Support with the Bolt in the correct hole **as shown**. Line up the Bolts with the Holes in the shroud and Motor Supports and set in place **as shown**.

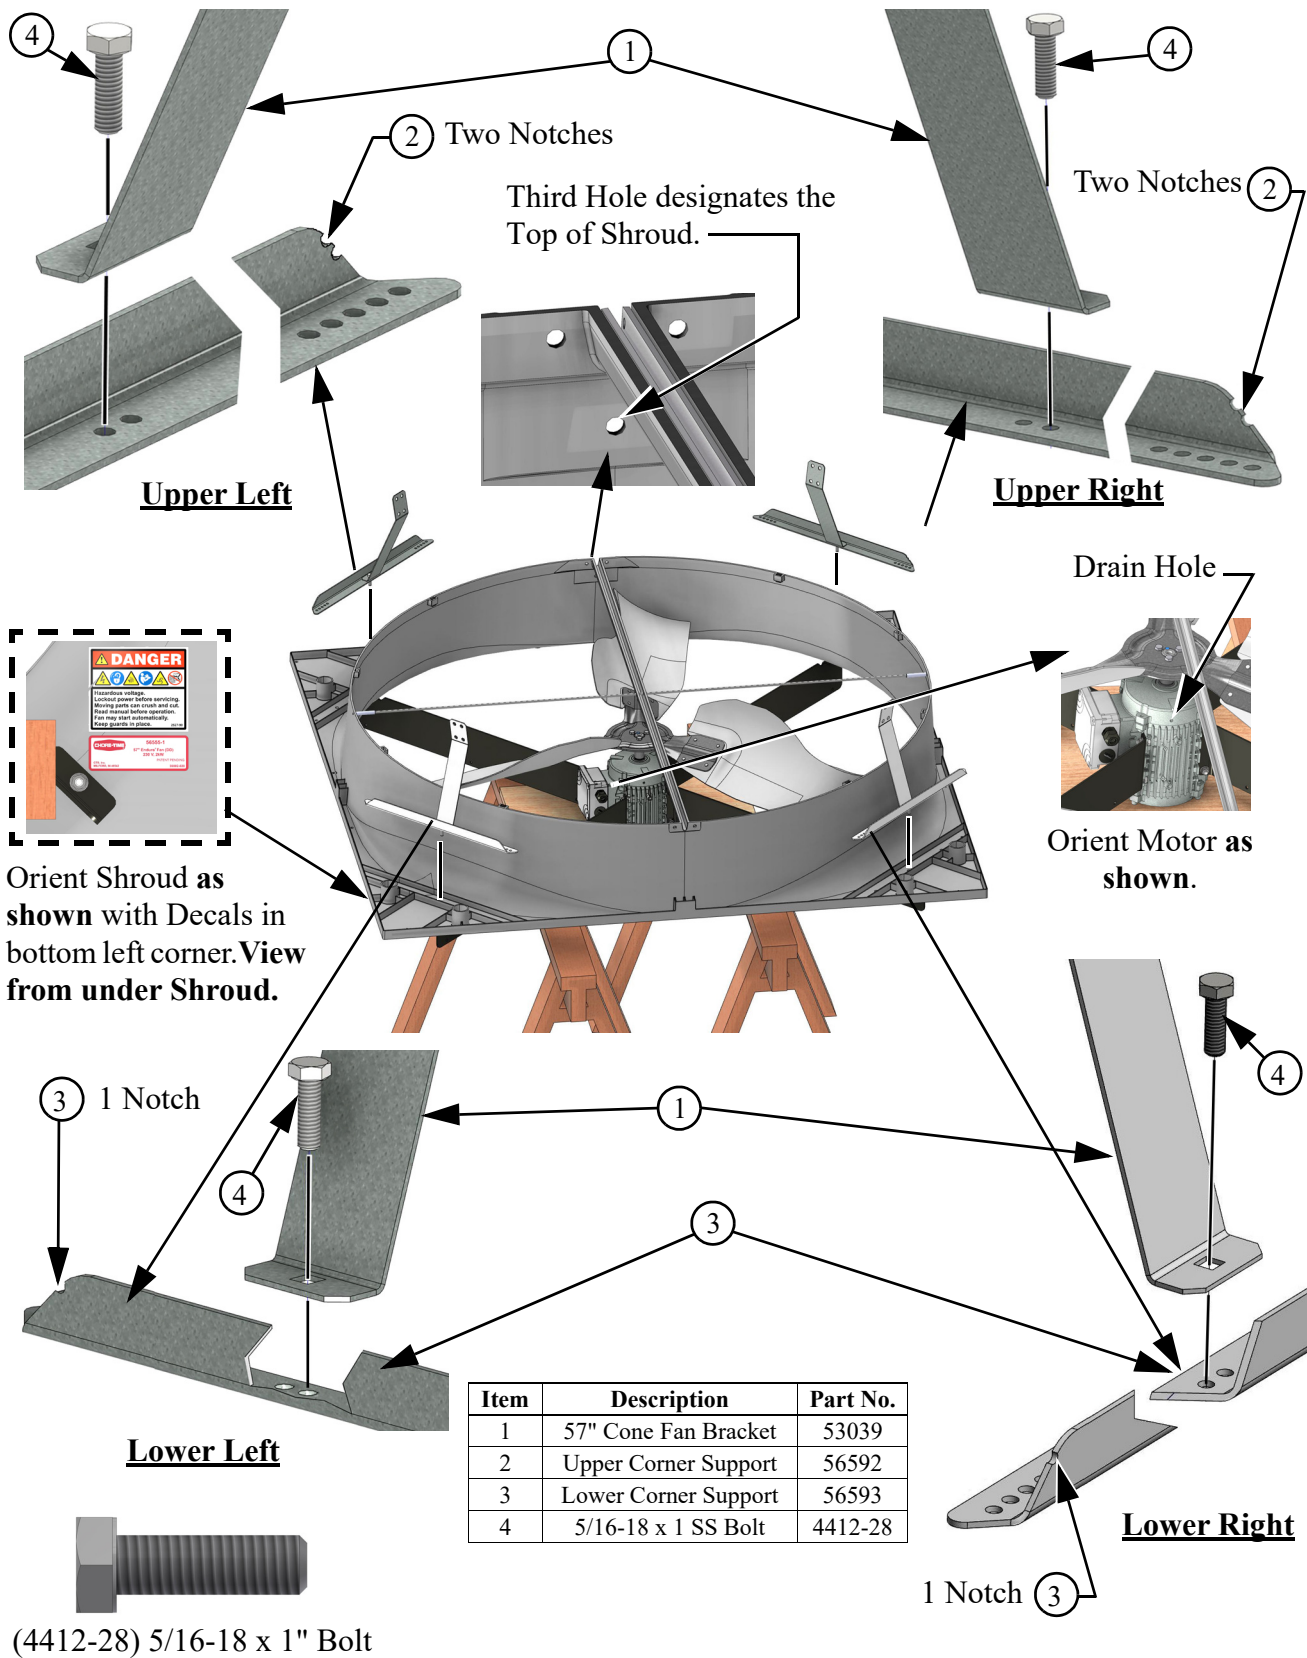

2. Fasten the Cone Supports and Brackets to the Fan Motor Supports with 4 **(46764)** Nuts as shown.

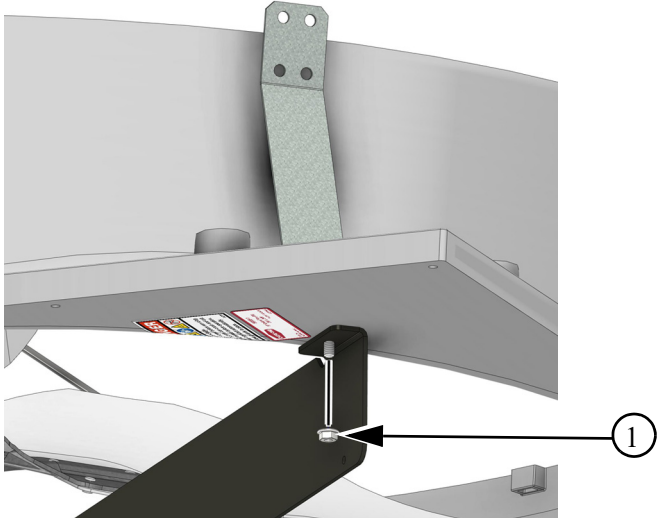


Item	Description	Part No.
1	5/16 Flg. Nut	46764



(46764) 5/16 Flg. Nut

3. Install the Top Pivot Plate Bracket **(53037)**, Bottom Pivot Plate Bracket **(53036)**, Fan Cone Cable **(53399-1)** and Eye-Bolt **(30663)** as shown.

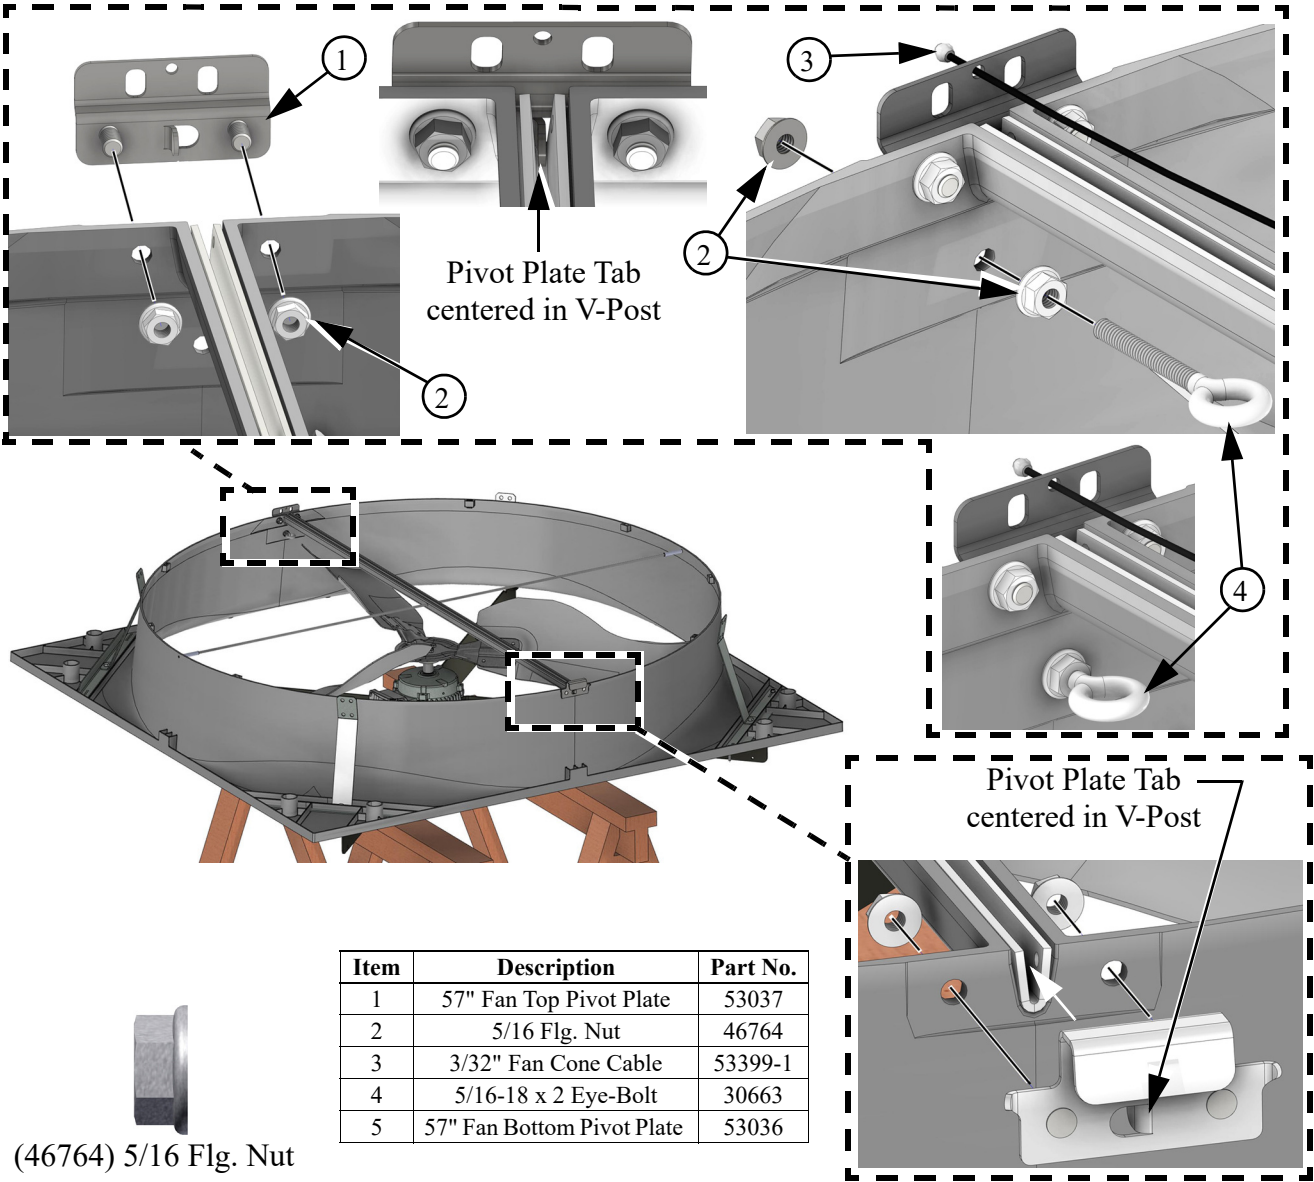


Item	Description	Part No.
1	57" Fan Top Pivot Plate	53037
2	5/16 Flg. Nut	46764
3	3/32" Fan Cone Cable	53399-1
4	5/16-18 x 2 Eye-Bolt	30663
5	57" Fan Bottom Pivot Plate	53036




(46764) 5/16 Flg. Nut

Bottom Shelf Installation


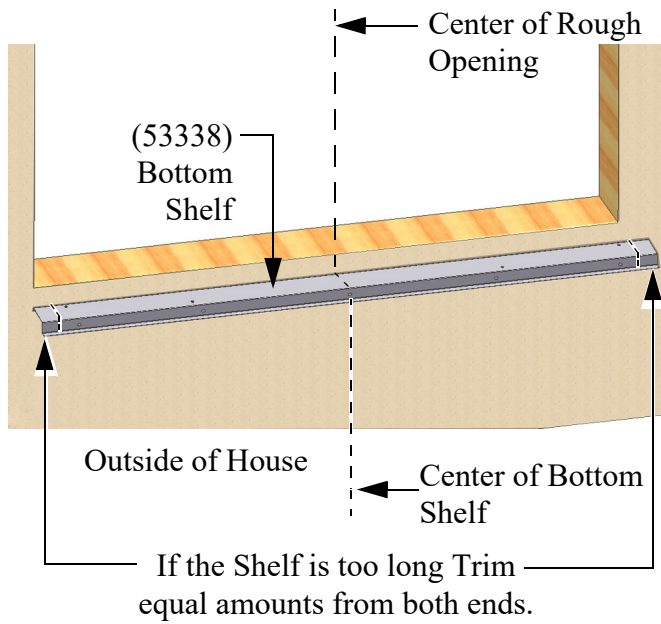


① (41561) 1/4 x 1-1/2 Lag Screw

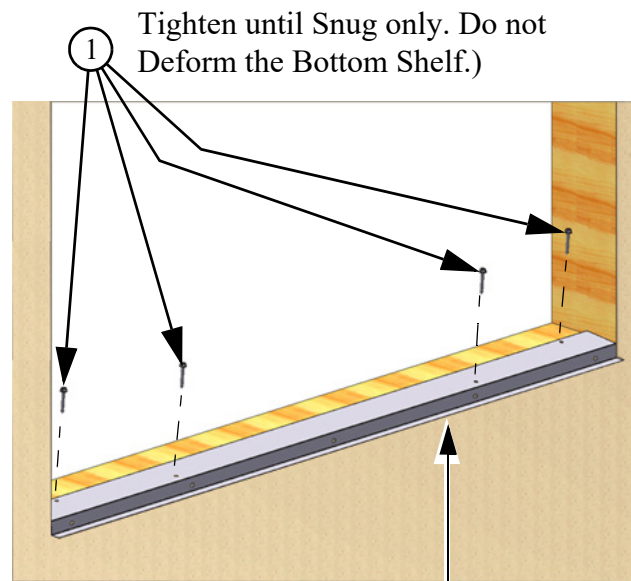


This Flange must be straight after installation!

Attaching the Fan to the Wall

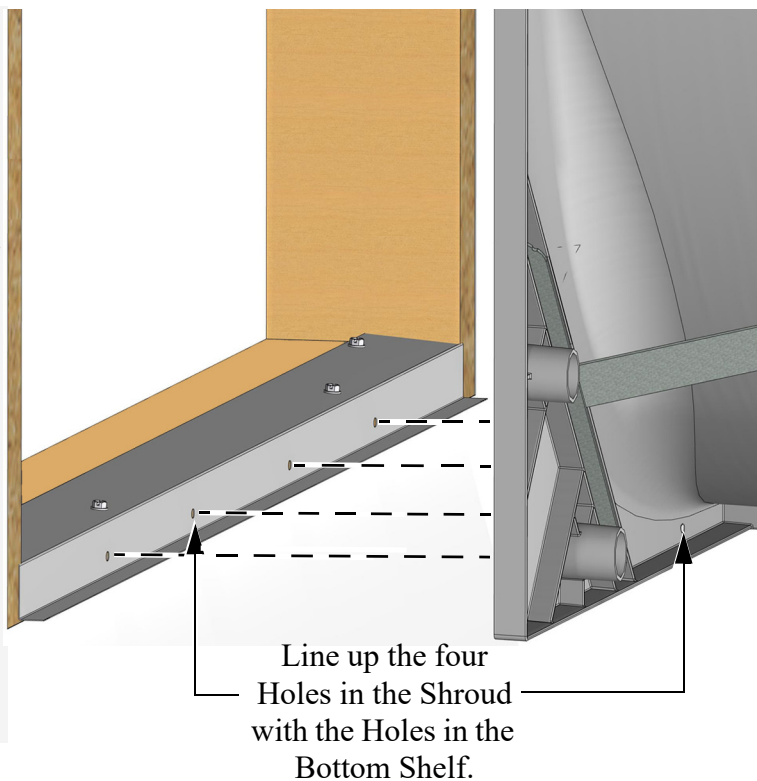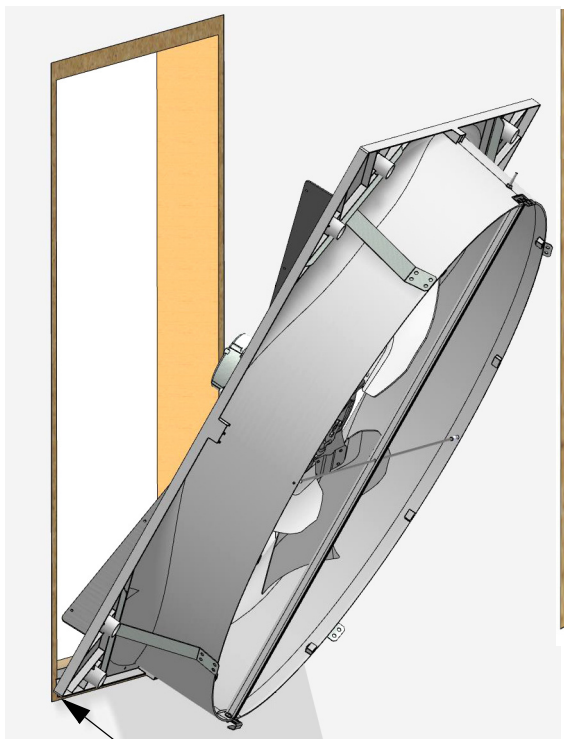

Keeping Fan Shroud edges straight



It is important when attaching the Fan to the Wall to keep edges of Shroud straight.

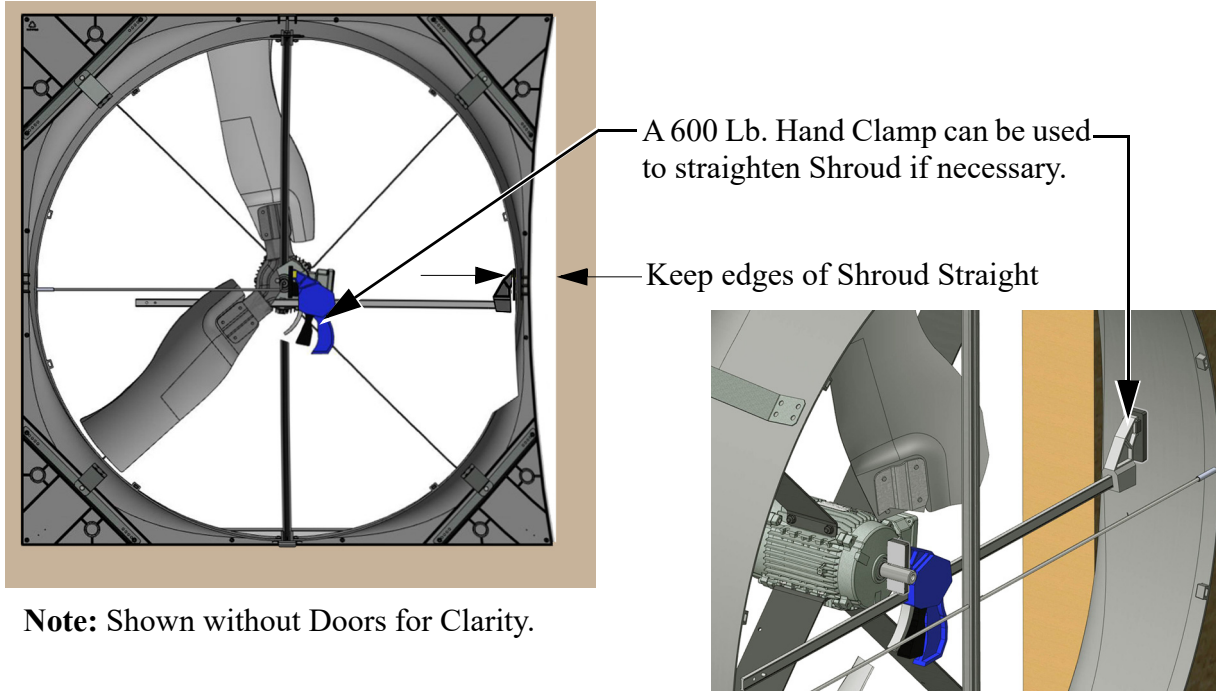

Attaching the Fan Shroud to the Wall


1. Pre-drill holes to 3/16" [4.8 mm] to avoid splitting lumber. If holes do not line up with the lumber it may be necessary to put Screws through Shroud.
2. **Attach the Fan to the Wall with 1/4 x 1-1/2" Lag Screws (41561) as shown. Attach with a total of 20 Lag Screws.**

Important! Be sure sides of Shroud are straight, and the wall mounting surface is flat. Bowed sides or an uneven mounting surface can cause the fan blade to hit the orifice, or excessive gaps between the Hyflo® doors and the shroud.

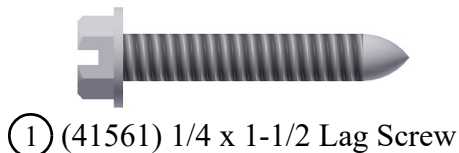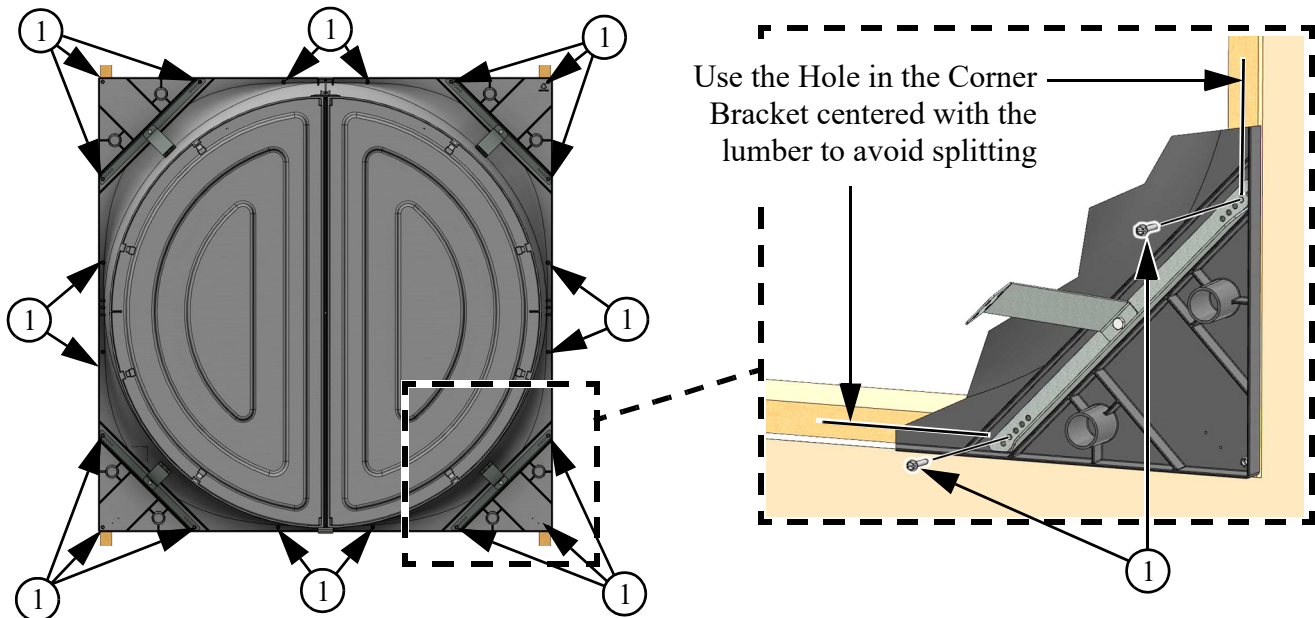

Cone Assembly


Assemble Cone Panels as shown below.

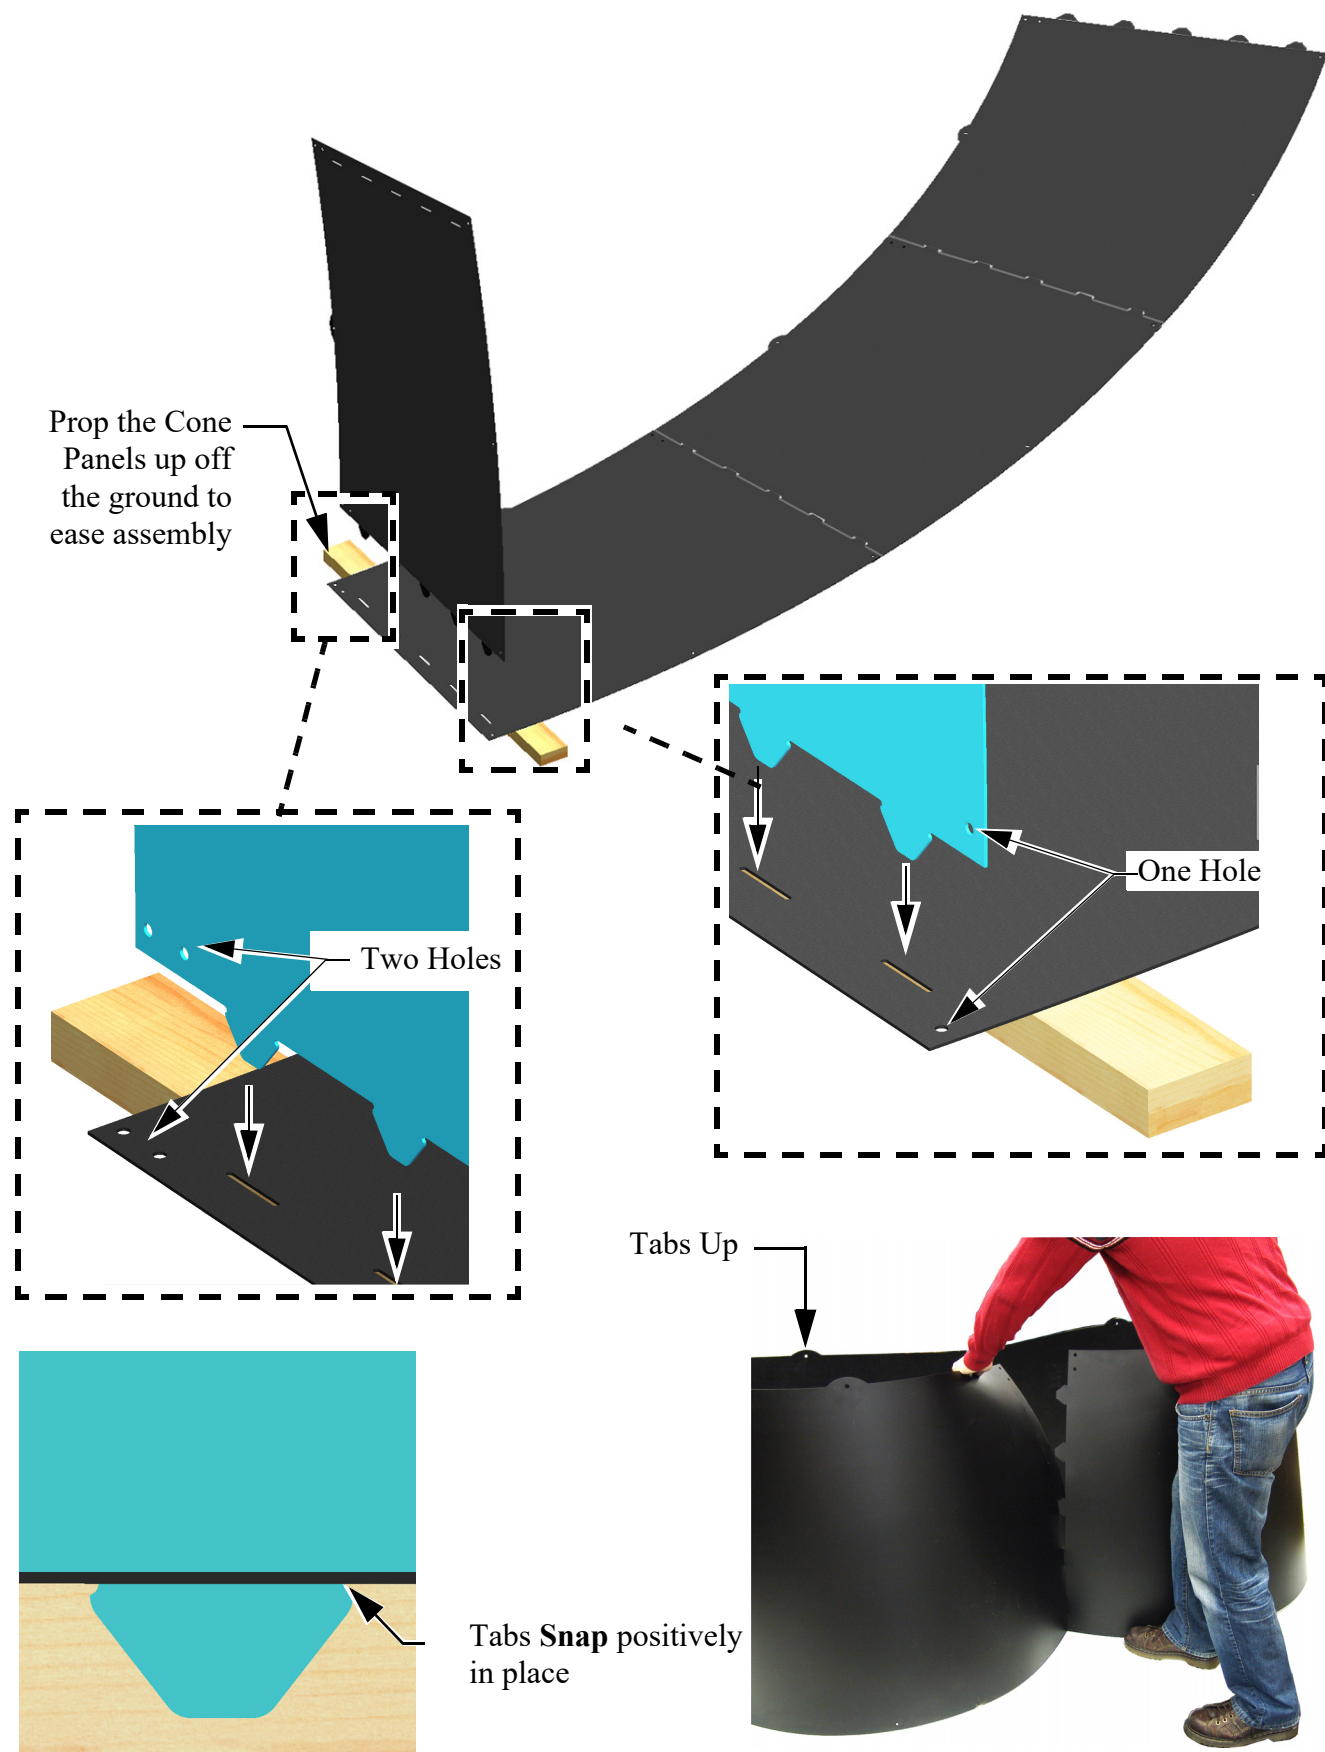

Installing the Orifice Frame


Rounded Tab on the Cone

Important! Line up the Seam in the Orifice Frame with one of the rounded Tabs on the Cone.

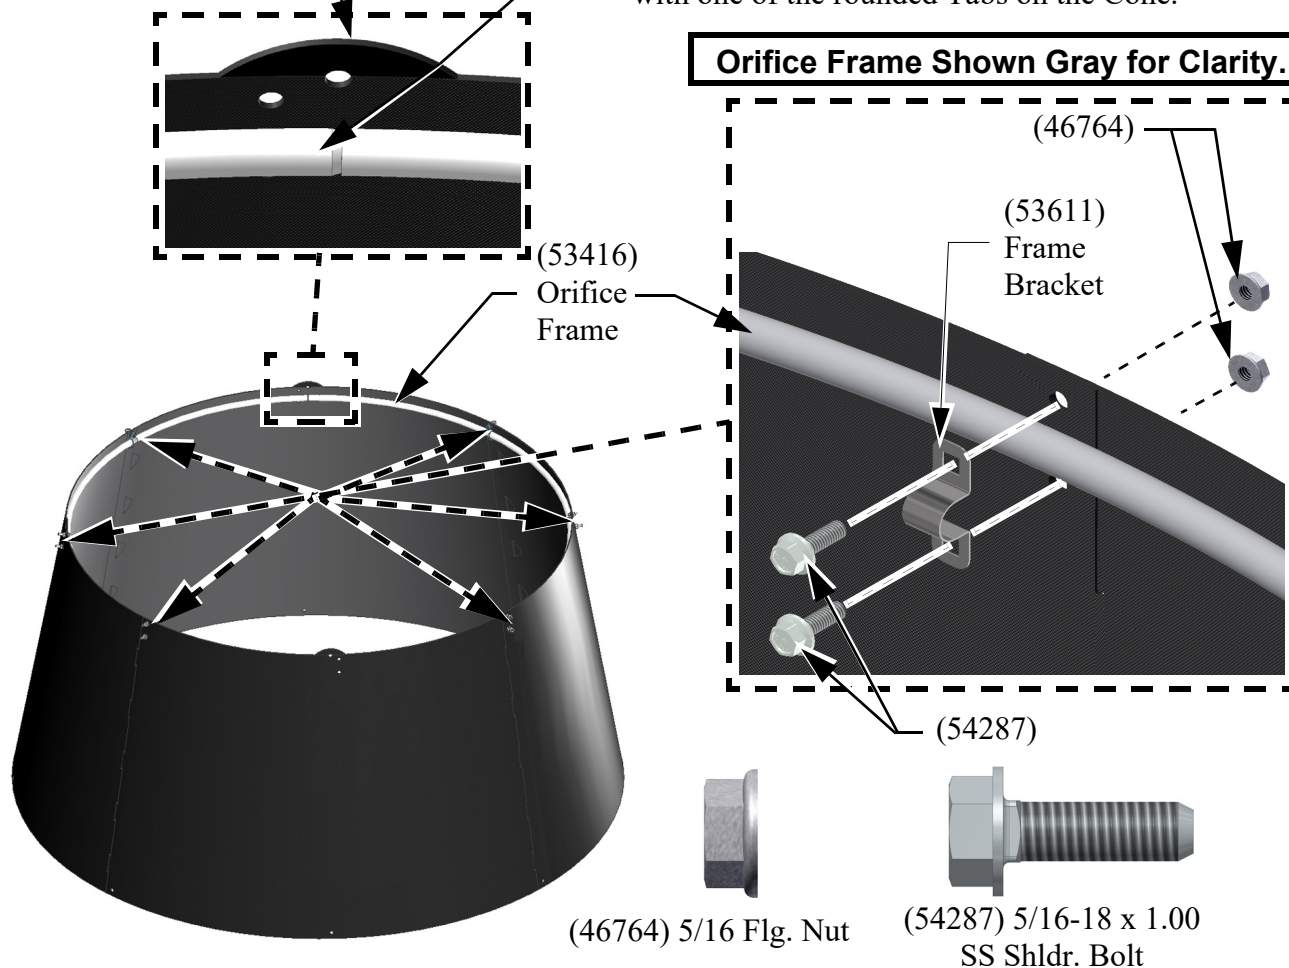


Cone Installation

Hang the Cone on the Eye-Bolt extruding from the top of the Shroud using the hole in the Cone as shown.

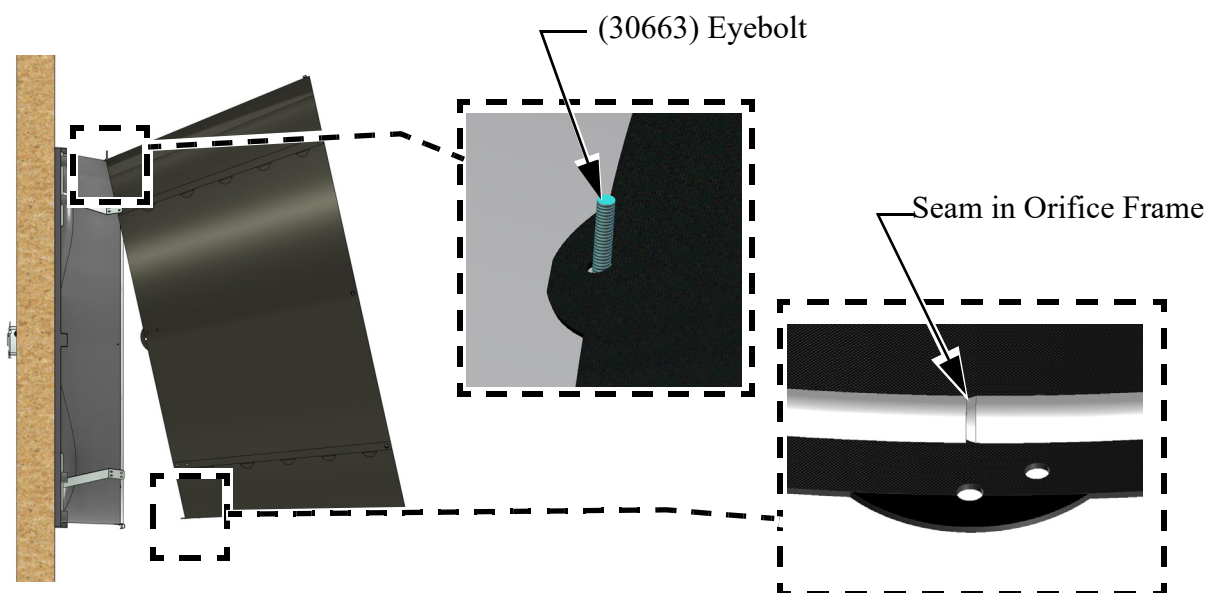


Attach the cone to the Shroud as shown below.

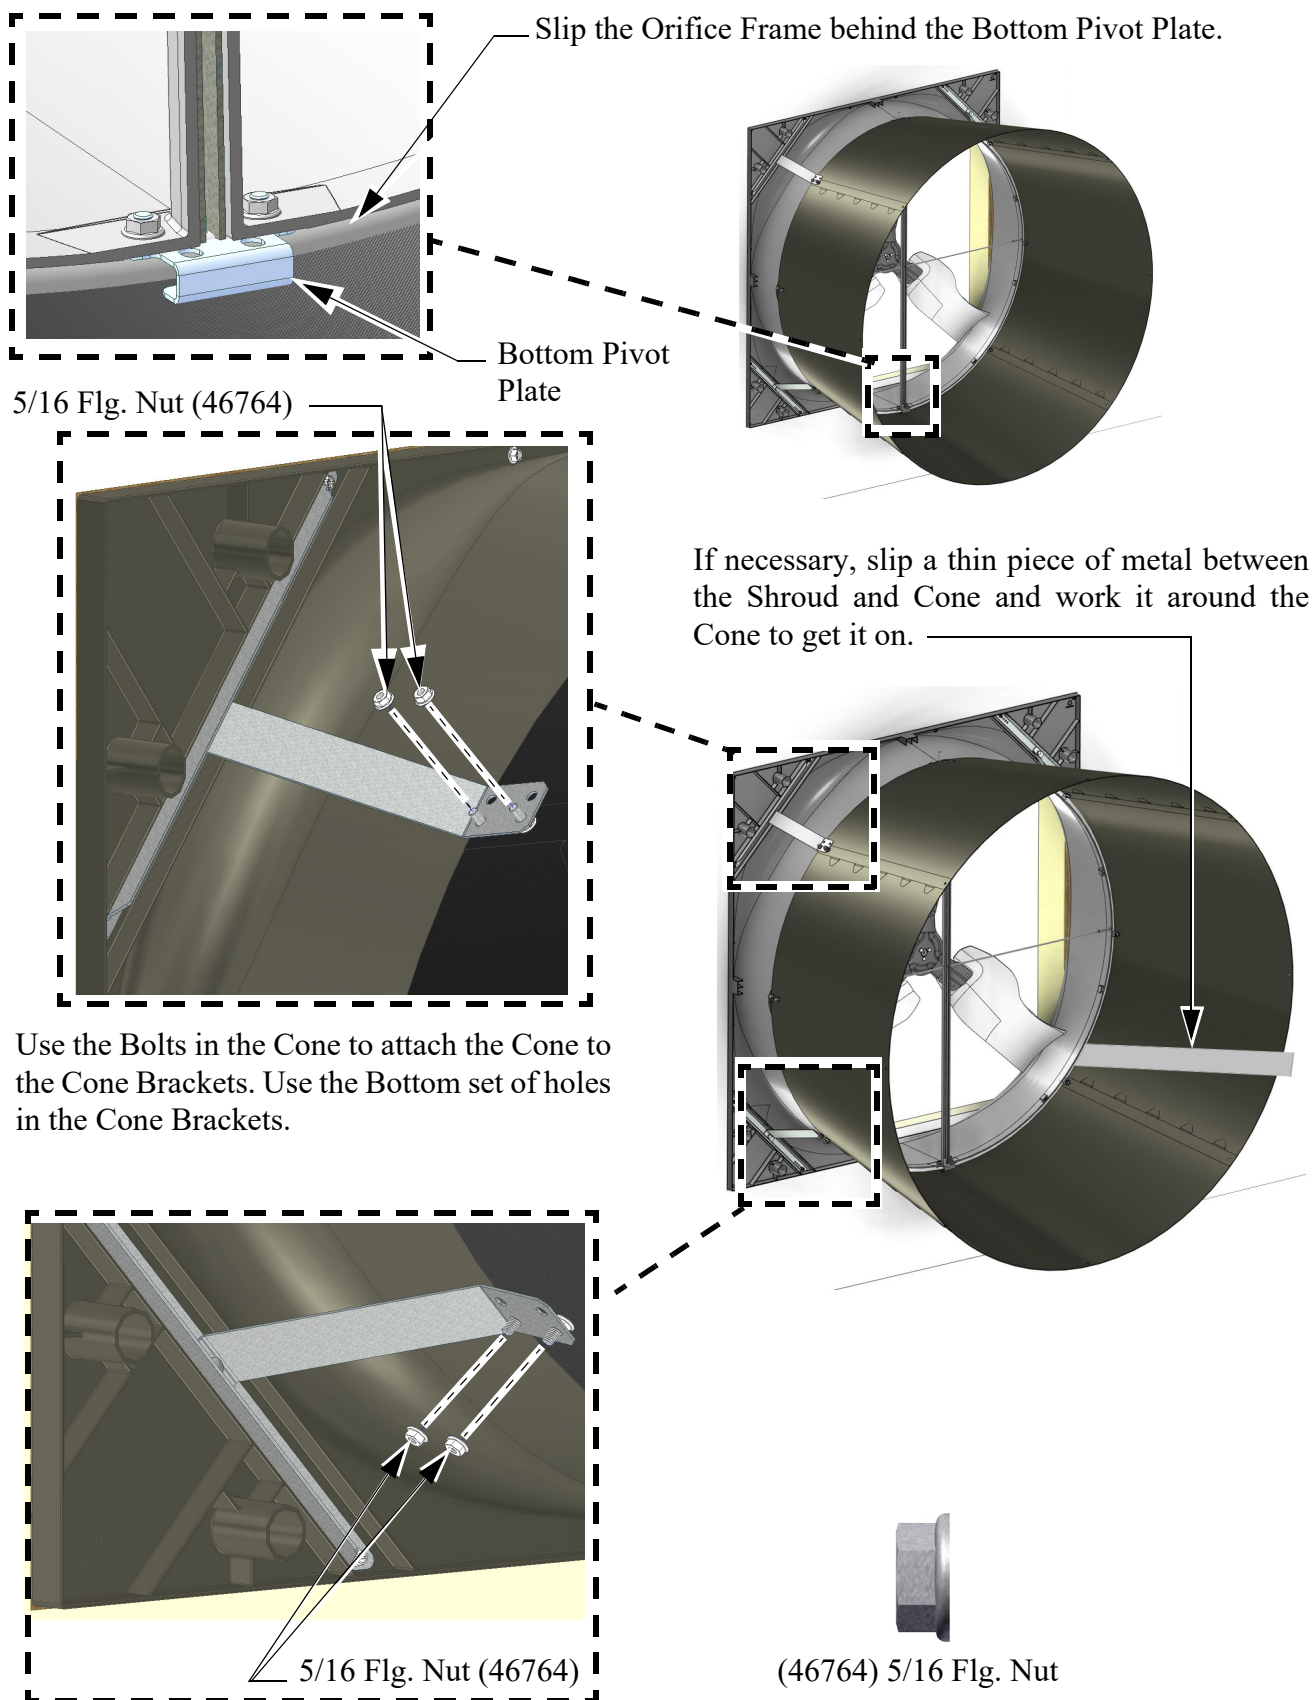


Door Assembly and Installation


Insert Door Pins in both Doors as shown.
Push Pins in until they bottom out.

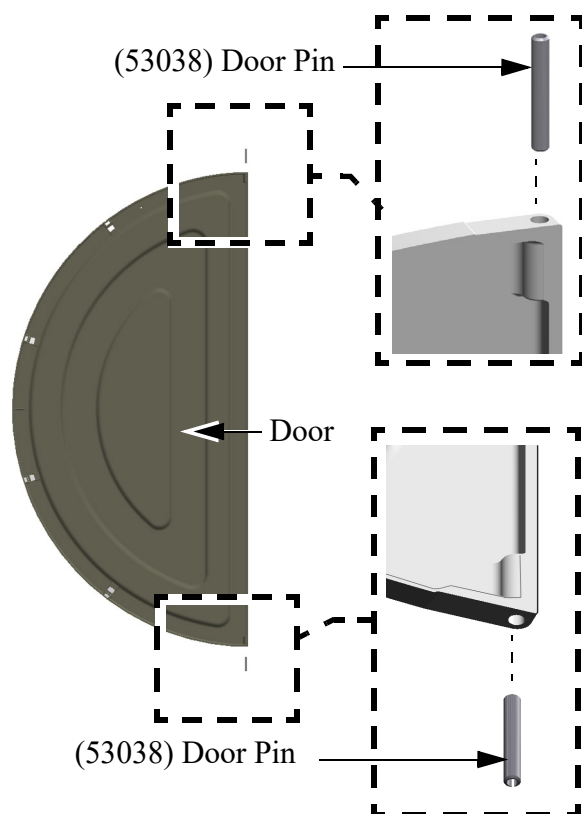


Doors are Left and Right specific.

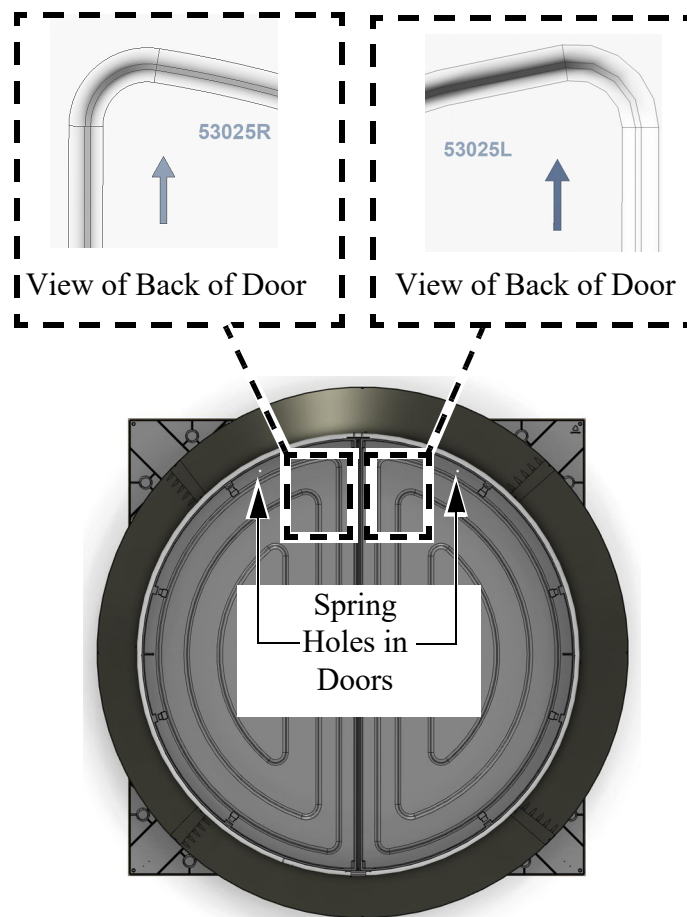

Insert Door Pins into Bottom Pivot Plate.

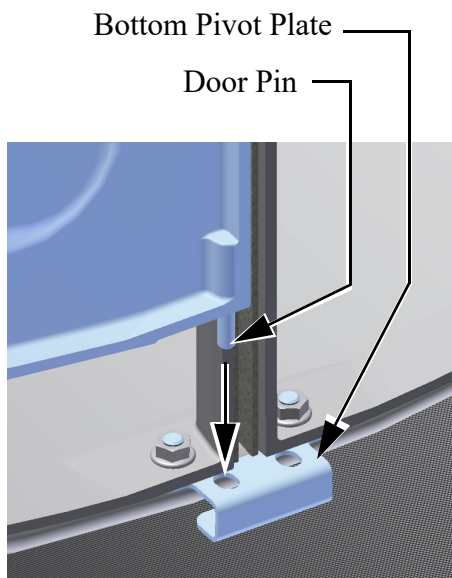


Grab the Door in the Center, Bow the Door outward, and insert the Top Door Pin into the Top Pivot Bracket as shown. **Do not Overbow the Doors!**

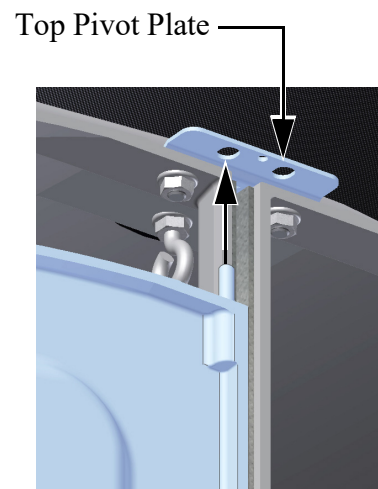


Grill Installation


Install the Fan Cone Grill (as shown). Attach the end of the Door Stop Cable to the bottom Grill Leg **as shown**.

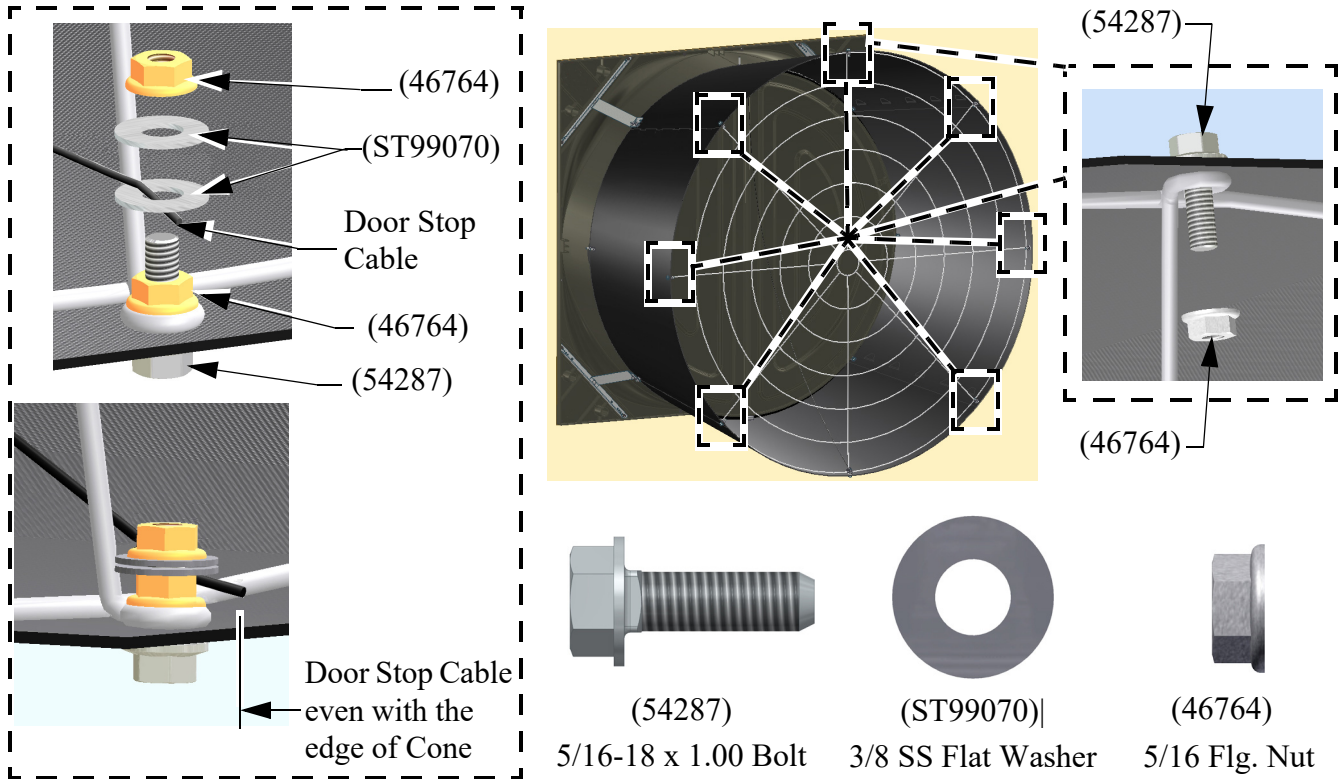


If it is desired to Mount Fans at the minimum spacing cutting the Grills is required **as shown**.

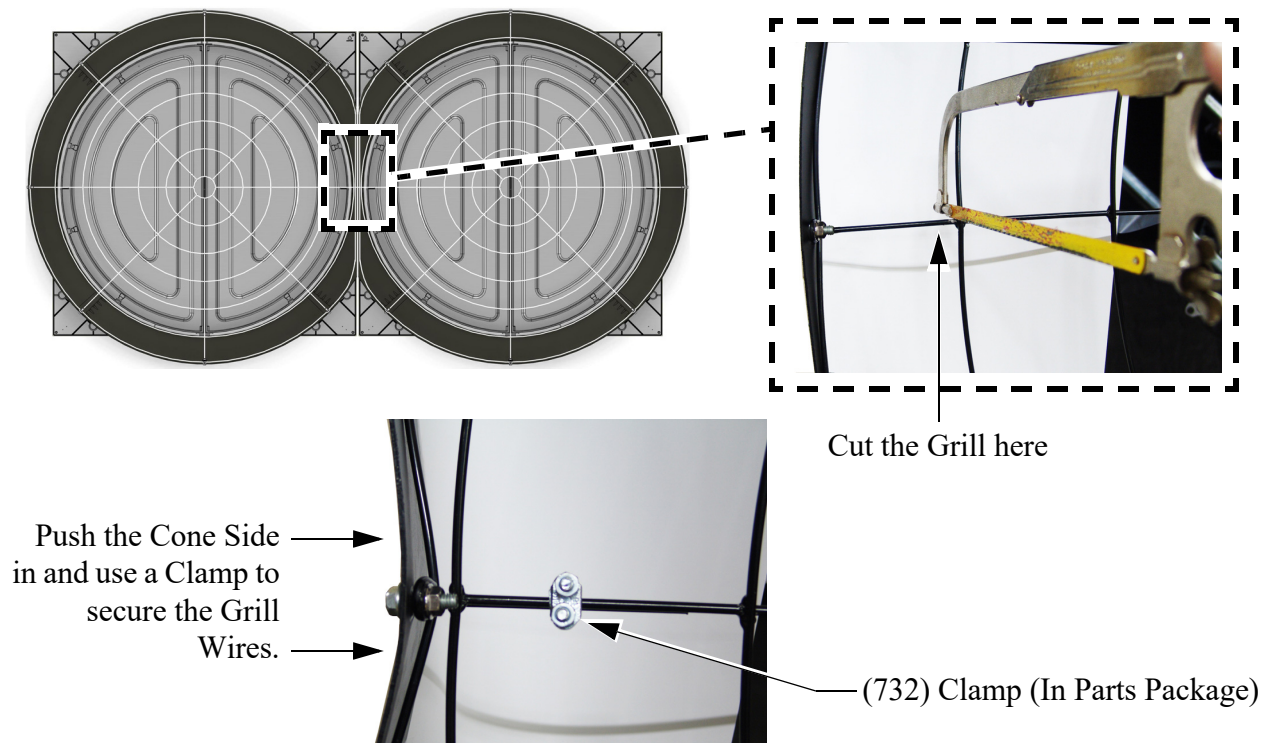

Check Blade Tip Clearance




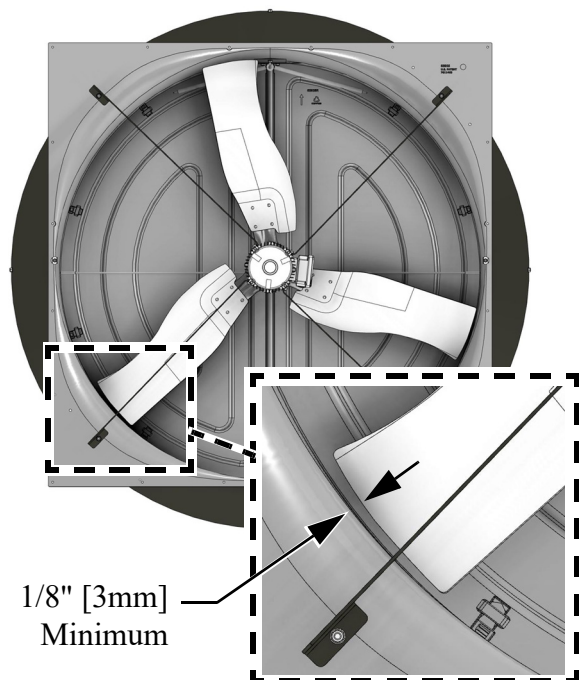


Spin the Blade by hand and check that there is minimum of 1/8" [3 mm] Clearance from the Shroud all the way around orifice.

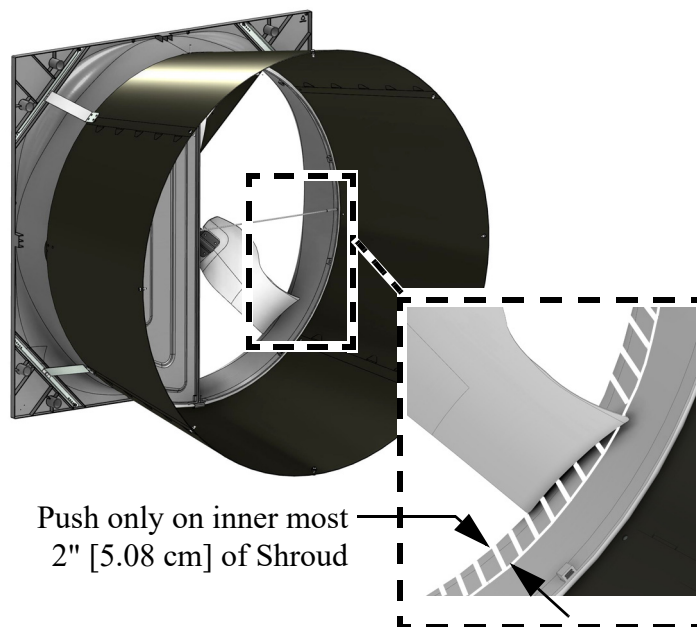

If Clearance is insufficient, check that the mounting surface is flat, and that the sides of the Shroud are straight. To Gain more Tip Clearance, remove the Lag Screws from the side with inadequate clearance, push out on the Shroud orifice. **(Push only on the inner most 2" [5.08 cm] of the Shroud or damage could occur)** Re-install Lag Screws in new holes.

Door Spring Installation

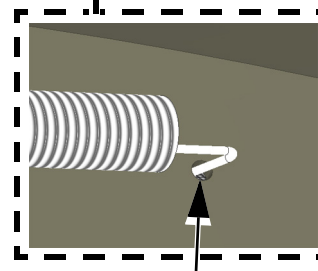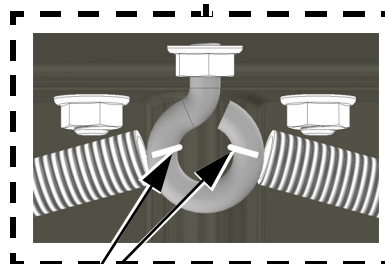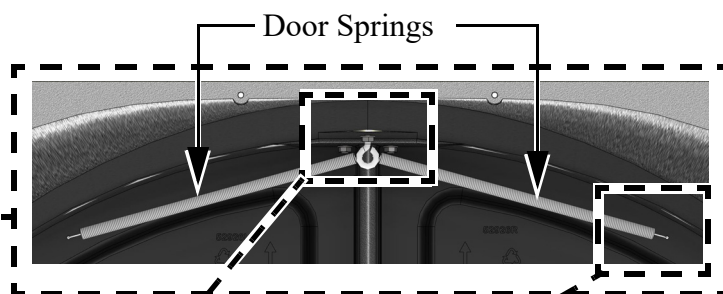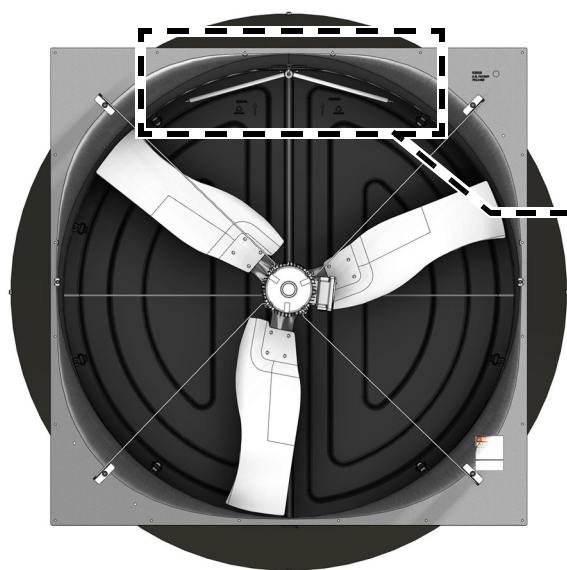


Rounded end of Springs attached to Eyehook

Elongated end of Spring
attached to Door Hole


Caulking

Caulk both Ends of the Bottom Shelf to fill any gaps between the Shroud and the Framed opening.

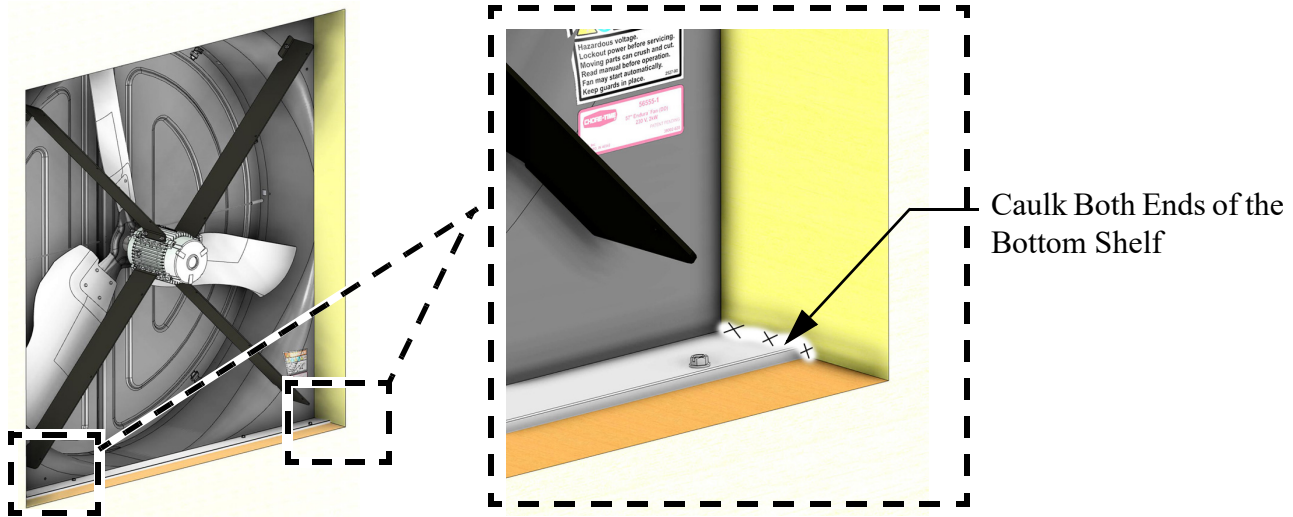



Fan Drive (VFD) Mounting

Select a location next to the Fan to install the Fan Drive. See the Invertek VFD Quick Start Guide (MV2492) that comes with the drive, or online at [www.choretime.com/documents, Manuals, Ventilation, Fans & Shutters, 57" Endura Fans, MV2492](http://www.choretime.com/documents, Manuals, Ventilation, Fans & Shutters, 57). See the Invertek User Manual (MV2493) at www.choretime.com/documents, Manuals, Ventilation, Fans & Shutters, 57-Inch Endura Fans, MV2493 for mounting details and general wiring instructions.

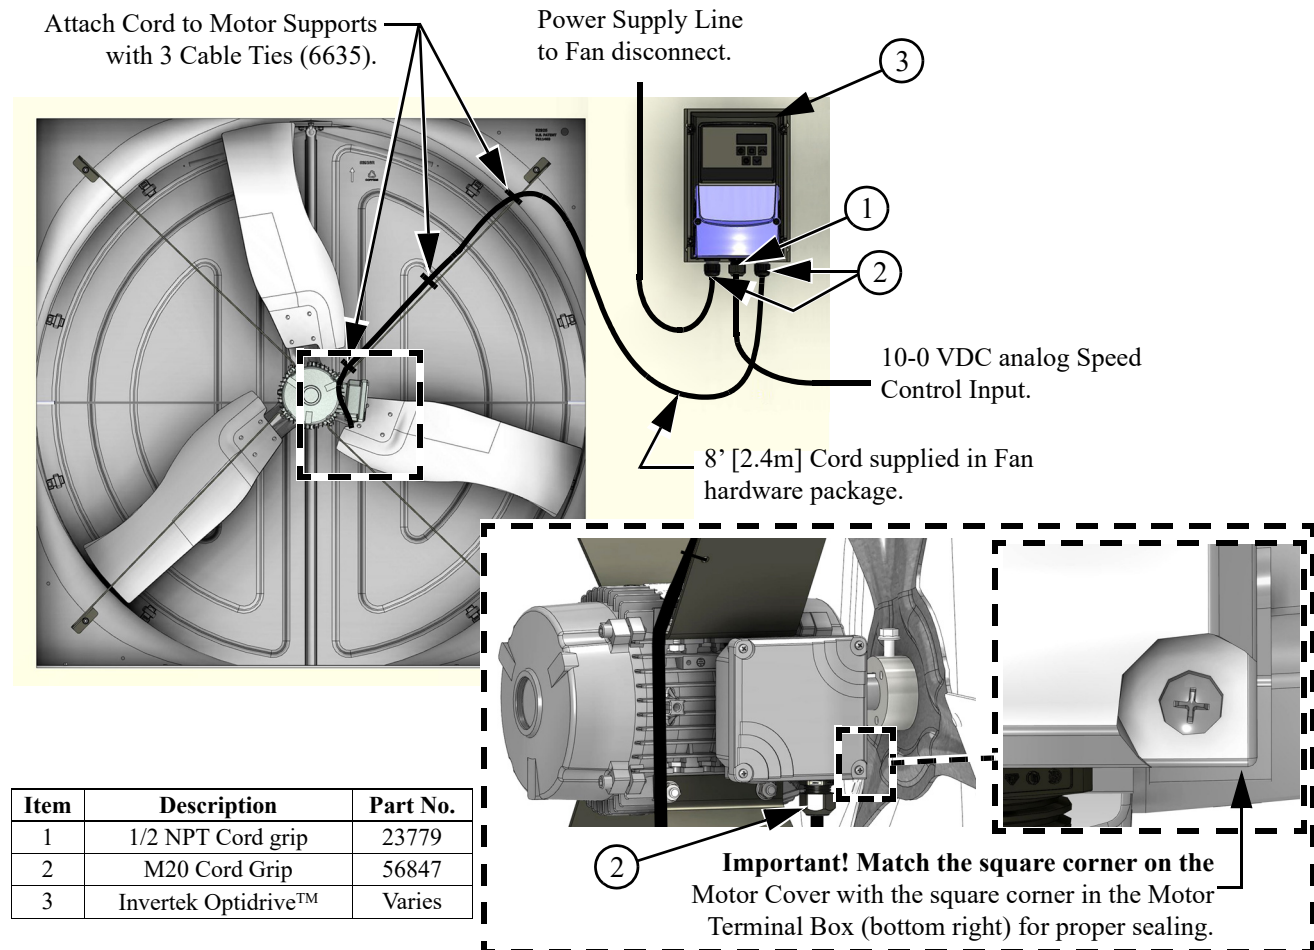



Screen Installation

Center Screen on the wall opening and fasten with 8 Screen Clip Washers (56671) and (41561) Lag Screws as shown. **Note: Some bowing of the Screen because of contact with power unit is normal.**

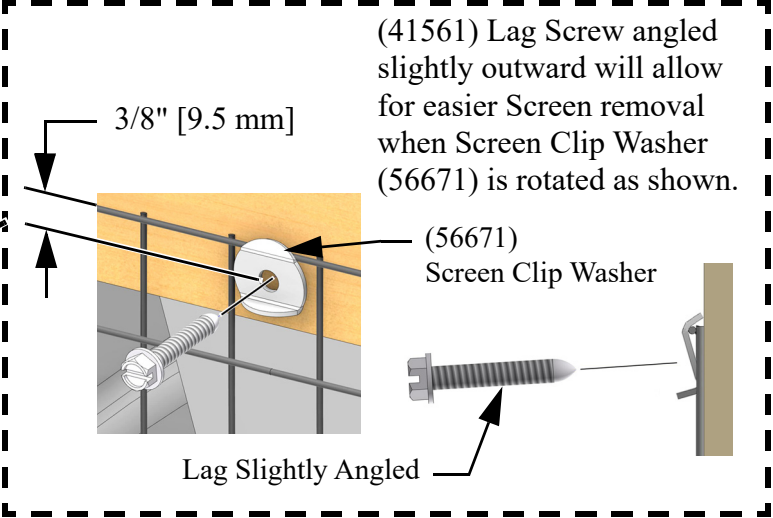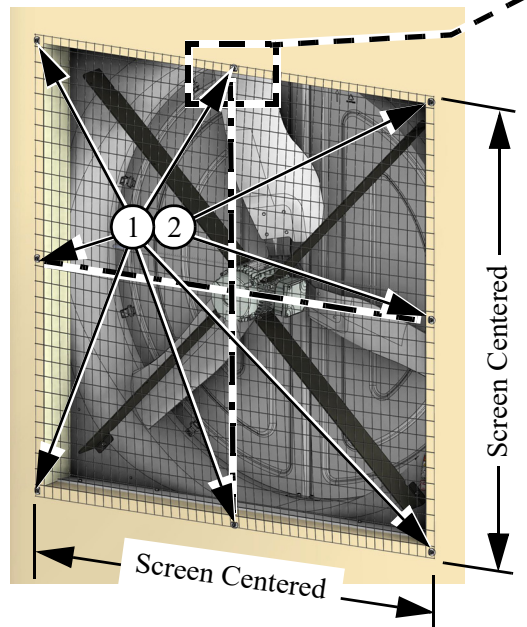

Item	Description	Part No.
1	1/4-10 x1.5 Lag Screw	41561
2	Screen Clip Washer	56671
3	59" Square Screen	56540

Loosen Lag Screw and Rotate Screen Clip Washer for easy Screen removal

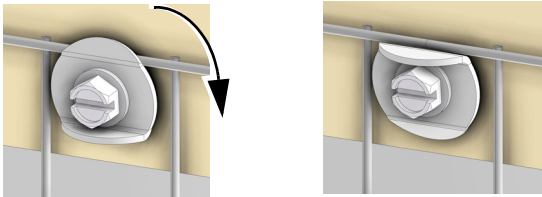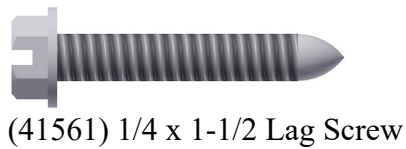


Control Signal Wiring

See the Invertek Quick Start Guide that comes packaged with the VFD for VFD wiring instructions. Further information is also available in the Invertek ODE-3 IP66 Outdoor User Guide (MV2493). It can be viewed online at [www.choretime.com/documents,Manuals,Ventilation,Fans & Shutters, 57-Inch Endura Fans, MV2493](http://www.choretime.com/documents,Manuals,Ventilation,Fans&Shutters,57-InchEnduraFans,MV2493). For variable speed fan control connect the 10-0 vdc analog signal from the main control to VFD terminals 6 (positive) and 7. The Fan will run full speed with an analog signal of 0 vdc and slow down to a stop as the signal is increased to 10 vdc.

For optional Fan Backup Control, in case of main control failure, connect a backup relay to terminals 1 and 4. The Fan will run full speed when the backup relay contacts are closed.

The jumper from terminals 1 to 2 is required for Fan operation.

Backup Box Relay (Optional)

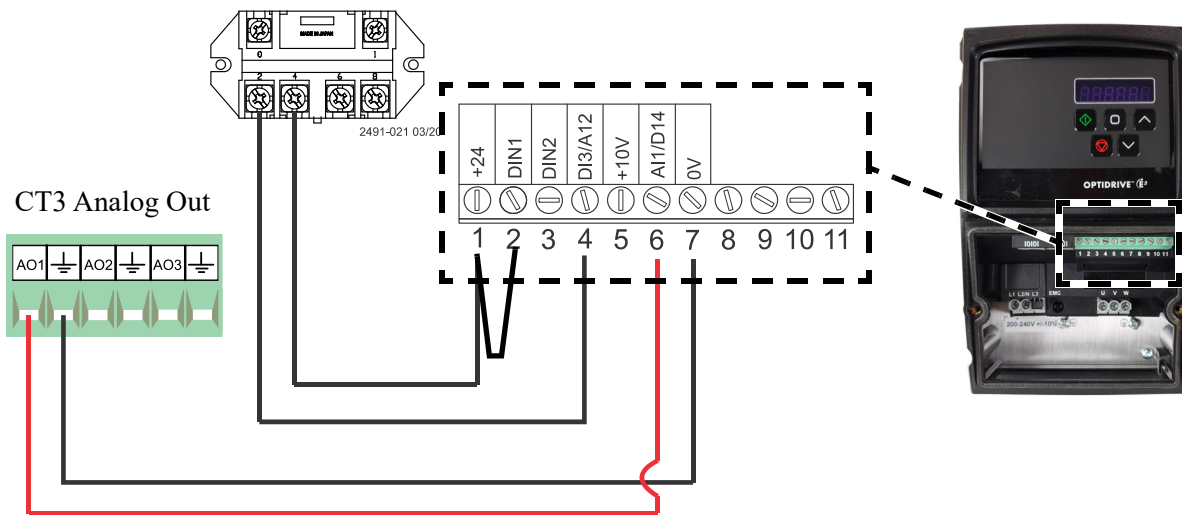

Drive Parameters

The Drives come pre-programmed with parameters for operation with the corresponding 57" Direct Drive Endura Fans. The following parameter have been changed from the drive default values:

No.	Defaults	Description	Parameter Sets*	
			-1	-2
P-01	60	Maximum Frequency/Speed Limit (rpm)	630	630
P-03	5	Acceleration Ramp Time (sec)	3	3
P-04	5	Deceleration Ramp Time (sec)	30	30
P-05	0	Stop Mode Select	4	4
P-06	0	Energy Optimiser	1	1
P-07	230	Motor Rated Voltage	170	303
P-09	60	Motor Rated Frequency (Hz)	42	42
P-10	0	Motor Rated Speed (rpm)	630	630
P-13	0	Industrial / Fan-Pump Control Mode	2	2
P-14	0	Extended Menu Access Code	201	201
P-16	U 0-10	Analog input 1 Format	U10-0	U10-0
P-30	Edge-r	Terminal Mode Restart Function	Auto-5	Auto-5
P-33	0	Spin Start Enable	1	1
P-48	0.0	Standby' Activation Delay Time (sec)	0.1	0.1
P-51	0	Motor Control Mode	2	2
P-54	150	Maximum Current Limit	110	110
P-55	1.40	Motor Stator Resistance	3.4	9.8
P-56	120	Motor Stator d-axis Inductance (Lsd)	25	57
P-57	12.0	Motor Stator q-axis Inductance (Lsq)	26	55.7
P-60	o 0	Thermal Overload Management	o 1	o 1

*Last digits of the 56541 Programmed VFD Part Numbers are the Parameter Set numbers, ie "-2" parameter set is used in the 56541-3-2 VFD

Test Fan for proper operation


Supply power to the VFD and check for proper operation. If the Fan turns in the wrong direction interchange any two wire connections between the drive and the motor to correct the direction of fan blade rotation.

Maintenance

IMPORTANT! Disconnect Power Prior To Maintaining Or Cleaning The Fan. The fan may start automatically causing serious injury or death.


- Service and repair of fans should be done only by a qualified technician.
- Minimize contact of moisture or corrosive chemicals to the surfaces of the fan components to maximize fan life.
- After washing fans, operate fans long enough to remove moisture from all fan surfaces.
- Keep the fan clean for maximum life and best performance.

Parts Numbers (Itemized)


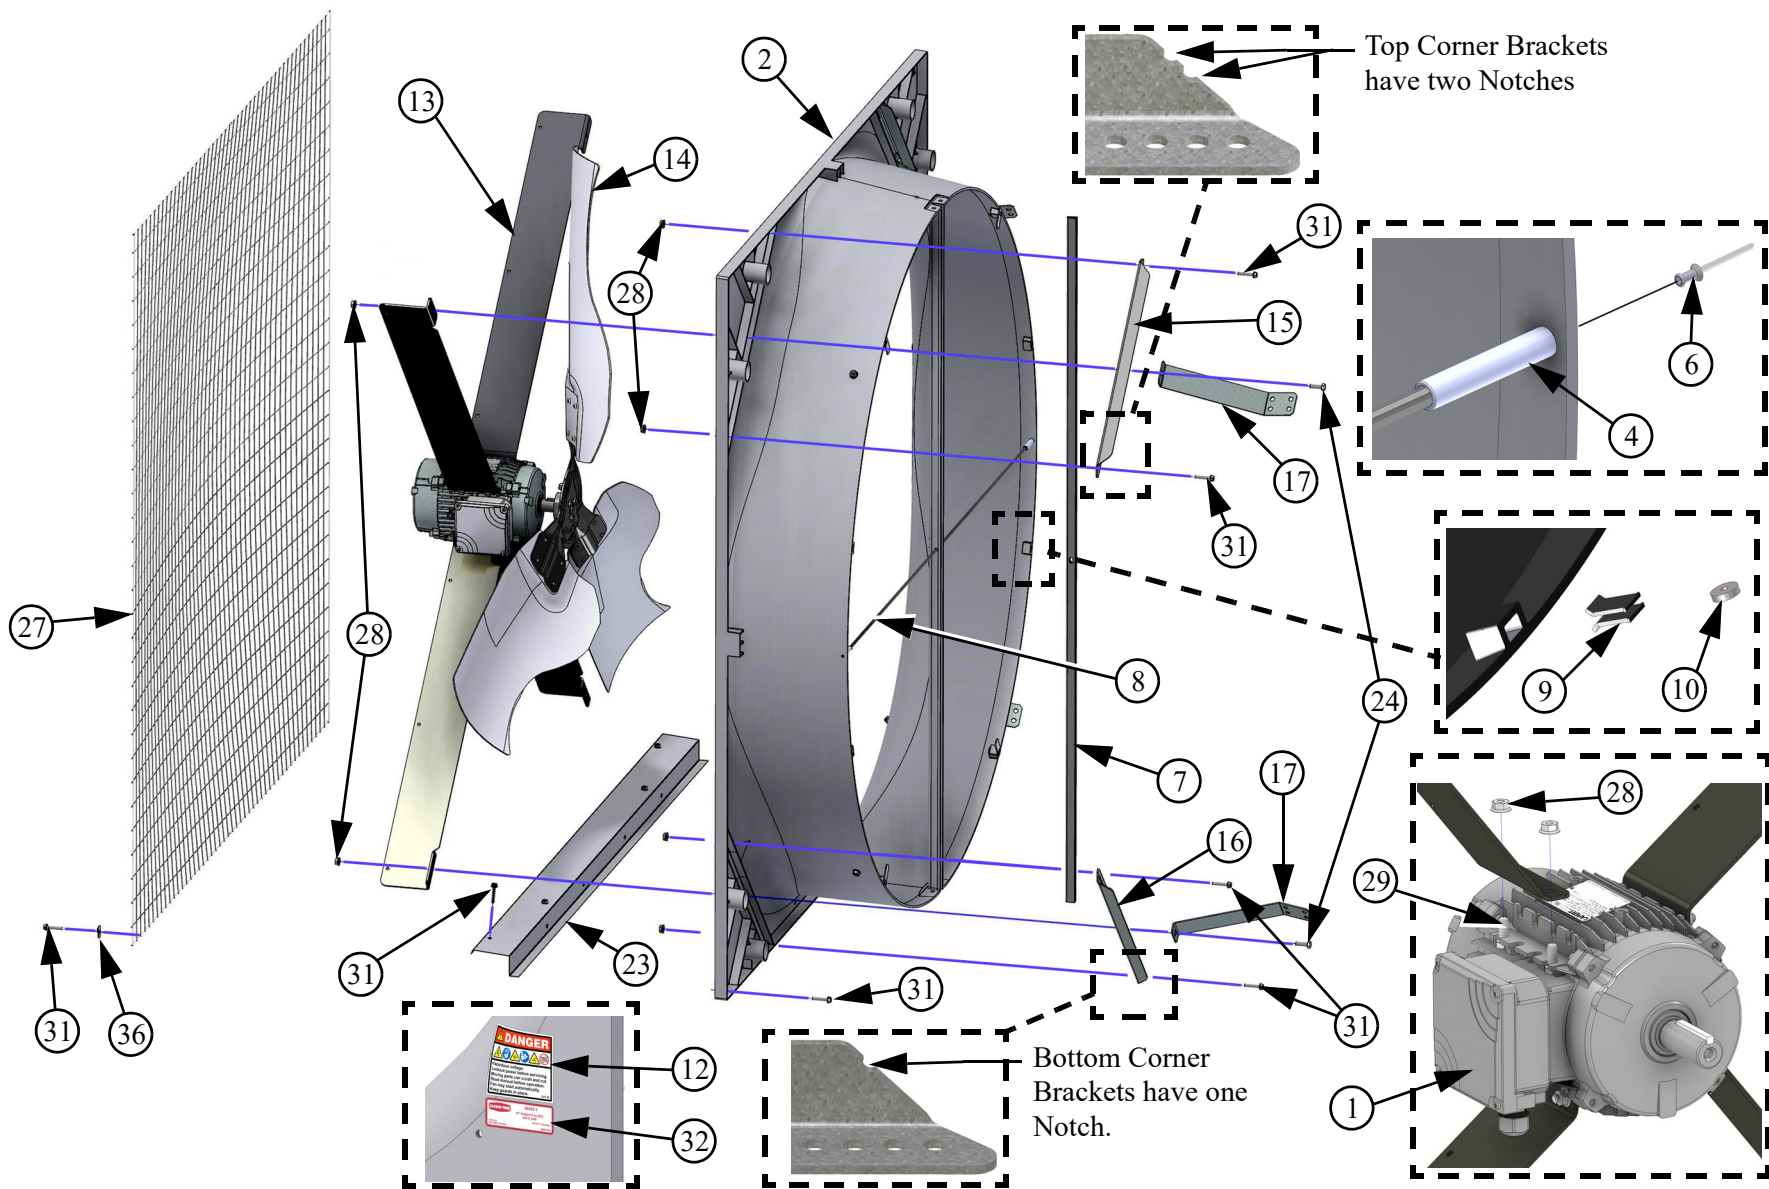



Item	Qty.	Description	Part No.	57" Direct Drive Endura® Fan (56555-X,-XS,-XT) Part Numbers
1	1	Motor, 230V, 7A, 630RPM PMSM	56501	-1,-2,-1S,-2S,-1T,-2T,-1U,-2U,1SU,-2SU,-1TU,-2TU
		Motor, 230V, 7A, 630RPM PMSM	56704	-3,-3S,-3T,-3U,-3SU,-3TU
2*	1	57" Fan Shroud Assembly	52925	All
4*	2	57" Cross Rod Coupler	56339	All
6*	2	Rivet	48936	All
7*	1	57" Fan Center Post Stiffener	53626	All
8*	1	57" Fan Cross Rod	53398	All
9*	8	Magnet Side Plate	53026	All
10*	4	.125 x .50 Magnet	48427	All
12*	1	Fan Danger Decal	2527-90	All
13	4	57" DD Fan Motor Support	56502	All
14	1	57" Galv. Bolted Hub Blade	56494	-1,-2,-3,-2T-3T,-1U,-2U,3U,-1TU,-2TU,-3TU
		57" SS Blade	54530	-1S,-2S,-3S,-1SU,-2SU,-3SU
15	2	Upper Corner 57" DD Fan Support (2 Notches)	56592	All
16	2	Lower Corner 57" DD Fan Support (1 Notch)	56593	All
17	4	Cone Bracket	53039	All
23	1	57" Fan Support Shelf	53338	All
24	4	5-16-18 x 1.00 HH 316SS Bolt	4412-28	All
27	1	59" Square 1.25 x 2 Wire Screen	56540	All
28	51	5/16-18 Hx. Serrated SS Flange Nut	46764	All
29	8	5/16-18 x 3/4 HH SS Bolt	4412-11	All
31	32	10-16 x 1.25 HXWH Lag Screw	41561	All
32	1	57" DD Endura Fan Decal	39002-XXX	All
36	8	Screen Clip	56671	All
* Fan Shroud Assembly (Item 2) includes items 4,6,7,8,9,10, & 12				
***Unassembled Fans have a "U" at the end of the suffix.				

Part Numbers (Itemized) continued

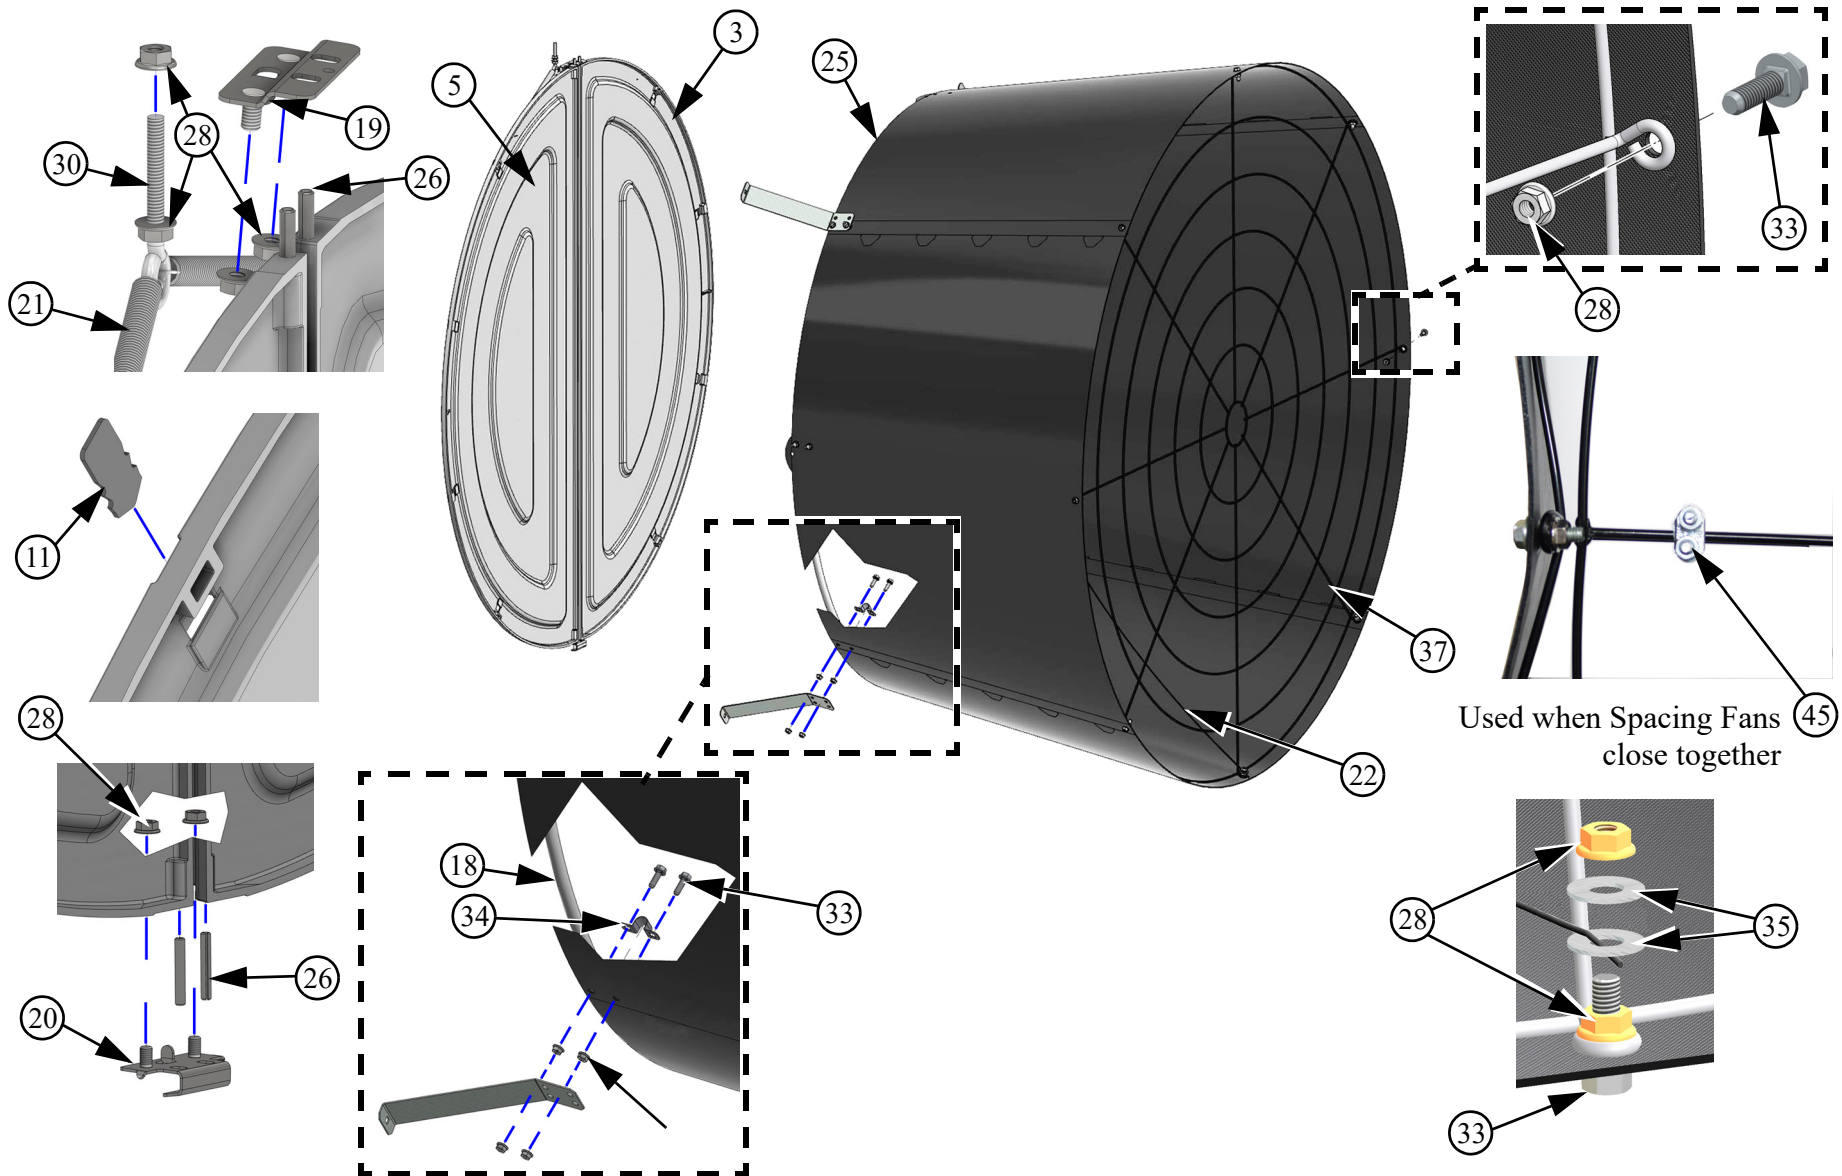

Item	Qty.	Description	Part No.	57" DD Endura® Fan (56555-X, -XS, -XT, -XSU, -XTU) Part Numbers
3**	1	57" Left Hand Fan Door	52926L	All
5**	1	57" Right Hand Fan Door	52926R	All
11**	4	Magnet Striker Plate	53027	All
18	1	57" Fan Orifice Frame	53416	All
19	1	57" Fan Top Pivot Plate	53037	All
20	1	57" Bottom Pivot Plate	53036	All
21	1	.50 OD x 11 x .055 SS Spring	49629	All
22	1	3/32 SS Fan Cone Cable Ass'y.	53399	All
25	4	Cone Panel	53163	All
26	4	1/4 x 1-3/4 420SS Spring Pin	53038	All
30	1	5/16-18 x 2 SS Eye Bolt	30663	All
33	20	5-16-18 x 1 SS HXWH Bolt	54287	All
34	6	57" Fan Orifice Frame Brckt.	53611	All
35	2	3/8 SS Flat Washer	ST99070	All
37	1	70" OD Cone Grill with 3" Spacing	55783	-1T,-2T,-3T,-1TU,-2TU-3TU
		70" Cone Grill with 6" Spacing	53129	-1,-2,-3,-1S,2S,-3S,-1U,-2U,- 3U,-1SU,-2SU,-3SU
38	3	Cable Tie	6635	All
39	2	1/2 NPT Nylon Cord grip	23779	All
40	2	1/2 NPT Galv. Lock Nut	3357	All
41	2	M20 Nylon Cord grip	56847	All
42	1	M20 Nylon Lock Nut	56848	All
43	1	8' Cord Assembly	4999-133	All
44	4	#8 x 1 HH Machine Screw	5998	All
45	2	3/16" Cable Clamp	732	All
**Door Assemblies include Magnet Striker Plates (Item 11)				
*** Unassembled Fans have a "U" at the end of the suffix.				

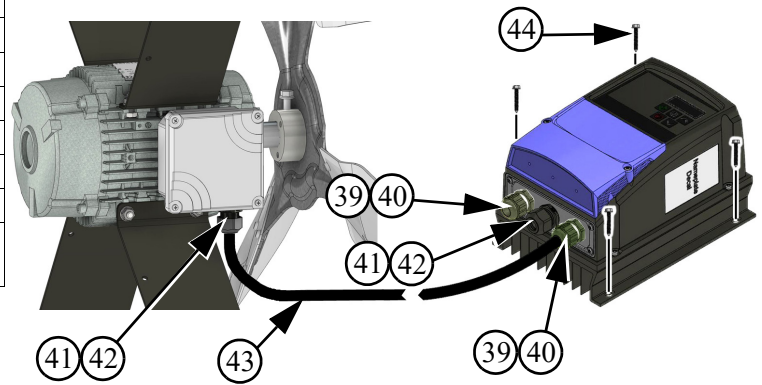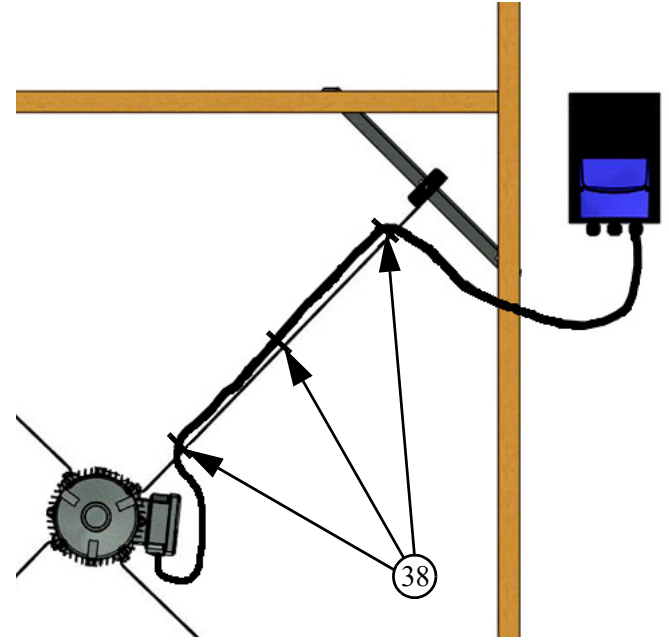

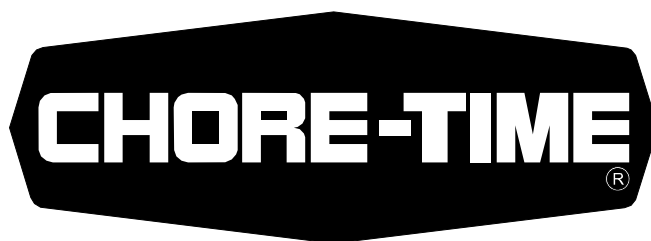

**MADE TO WORK.
BUILT TO LAST.®**

Revisions to this Manual

Page No.	Description of Change	ECO
Various	Added Unassembled Fans	35063

**For additional parts and information, contact your nearest Chore-Time distributor or representative.
Find your nearest distributor at: www.choretime.com/contacts**

CTB, Inc.
PO Box 2000
Milford, Indiana 46542-2000 USA
Phone (574) 658-4101 Fax (877) 730-8825
Email: choretime@choretime.com
Internet: www.choretime.com