



 
Slip Connector & Dome Air Riser Spacing Information

• *IMPORTANT NOTICE* •

Refer to the updated information on this page when laying out and placing the Cage Watering System components.



Pipe Coupler



Dome Air Riser



Slip Connector

Watering System

Chore-Time Cage Cup (8' pipes)

Locate at all pipe joints
not using a Slip Connector.

Not required on this system.

Locate on 48 foot centers
beginning at the 6th pipe joint.

Cup-On-Pipe (8' pipes)

Locate at all pipe joints
not using a Slip Connector
or Dome Air Riser.

Locate on 48 foot centers
beginning at 3rd pipe joint.
Some systems require an
Extension Ass'y with
the Dome Air Riser.

Locate on 48 foot centers
beginning at the 6th pipe joint.

Brood-Grow (10' pipes)

Locate at all pipe joints
not using a Slip Connector.

Not required on this system.

Locate on 60 foot centers
beginning at the 6th pipe joint.

Begin at the Manifold end of the cage row. DO NOT INCLUDE THE CONNECTION AT THE MANIFOLD WHEN COUNTING PIPE JOINTS.

Repeat the pattern specified above for the entire length of the cage row (on each tier).

Effective April 1994

MW1049A

Contact your nearby Chore-Time distributor or representative for additional parts and information.
Chore-Time Equipment, A Division of CTB, Inc.
P.O. Box 2000, Milford, Indiana 46542-2000 U.S.A.

Printed in the U.S.A.