

Power Unit Litter Shield

The Power Unit Litter Shield is a metal covering that helps prevent buildup on the Power Unit/Driver Assemblies.

The Liter Shield also discourages roosting on the Power Units.

Install the Litter Shield according to the following instructions and diagrams.

1. Remove the screw, shown in Figure 1, from each side of the Driver Assembly.

DO NOT DISCARD THESE SCREWS.

2. Using the hardware provided, loosely fasten a Mounting Tab (part no. 34266) to each Shield Side (part no. 34267). See Figure 2.


Note: The Mounting Tabs include weld nuts.


Install the tabs so that they face opposite directions when secured to the Shield Sides.


- 3. Assemble the Shield Sides on the Power Unit. The Mounting Tabs slip into the ears on the gearhead, as shown in Figure 3.
- 4. Secure the Litter Shield to the Driver Assembly using the screws removed in Step 1. See Figure 4.


Fasten the Shield Sides together along the top flange using the hardware supplied.

- 5. Tighten the screws securing the Mounting Tabs.
- Install the power unit suspension components as shown in Figure 4.

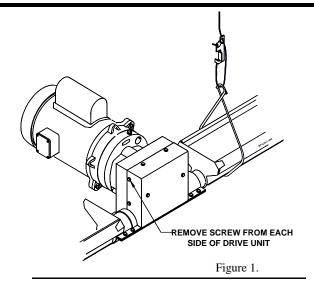

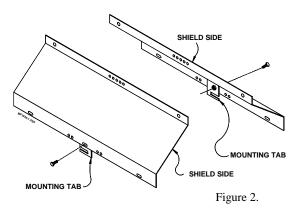

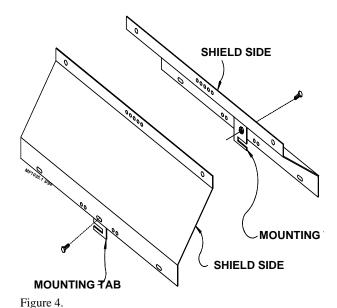

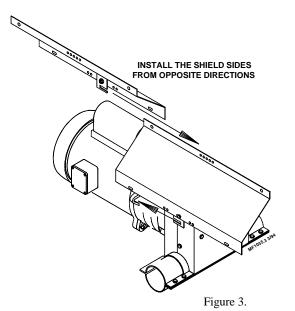

ation.

Contact your nearby Chore-Time distributor or representative for additional parts and information.

Chore-Time Equipment, A Division of CTB, Inc.