



E-Z START® Brood Extension

Part Number 50362


Instruction

Determine which EZ-START® design will be used for installation of brood extension.

Installation to Previous Design will require minor field modification.


Previous Design
Manufactured until 1-2007

Current Design

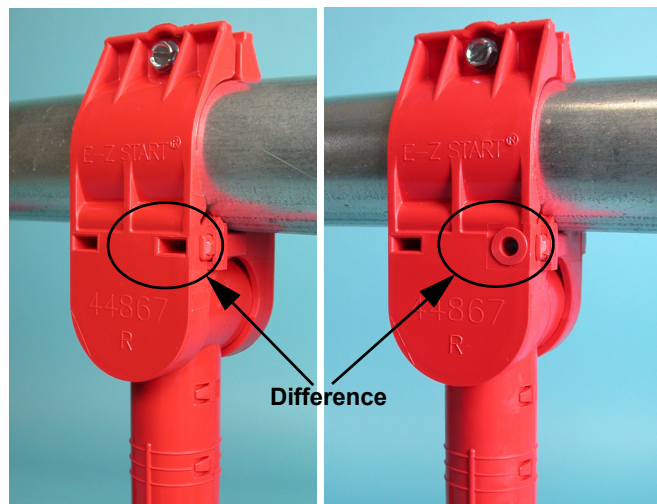

Current design

1. With EZ-START® outlets installed on feeder tubes, make sure the top screw and nut are loosened.
2. Turn feed spout straight down.
3. Install the provided 10-24 x 2.25" [51.15 mm] screw and lock nut. Tighten this screw and lock nut until snug.
4. Tighten the top screw and nut.
5. Install the brood extension onto the feed spout.
6. Adjust brood extension to the desired height with a minimum of 1" [25.4 mm] overlap onto feed spout.

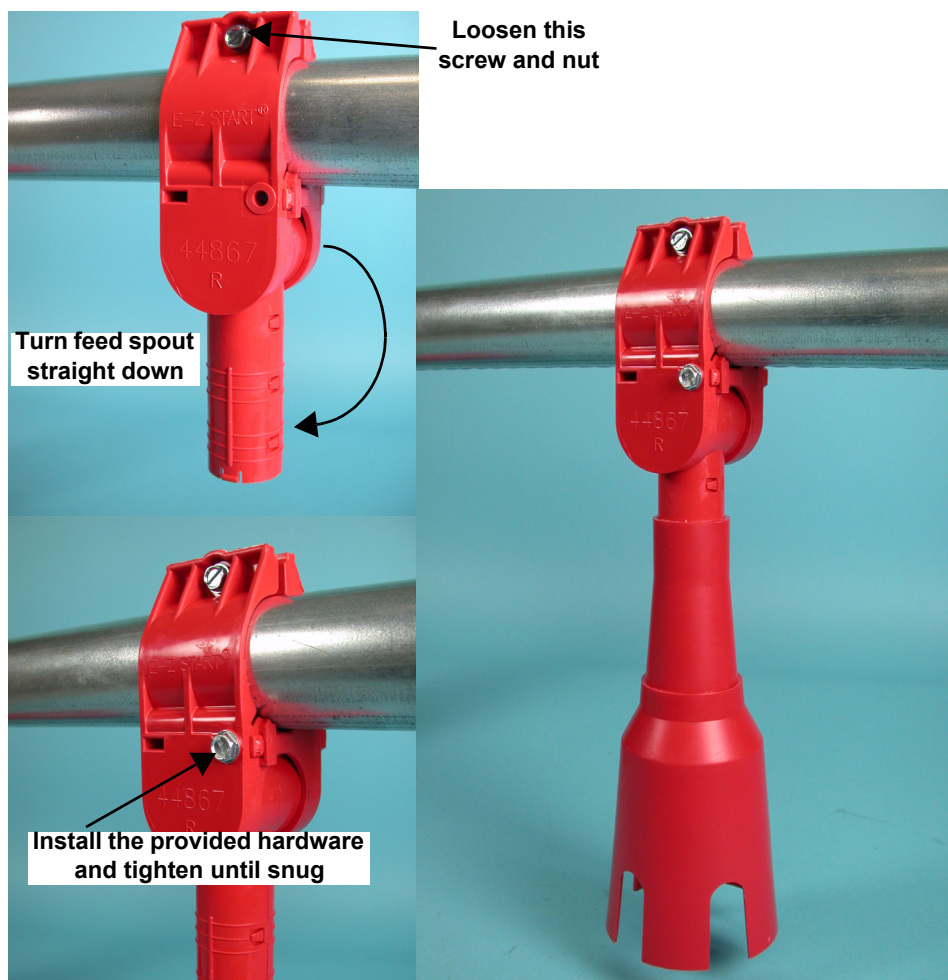

Chore-Time Equipment a Division of CTB Inc.
P.O. Box 2000 • Milford, Indiana 46542-2000 • U.S.A.
Phone (574) 658-4101 • Fax (877) 730-8825

Previous design

1. With EZ-START® outlets installed on feeder tubes, make sure the top screw and nut are loosened.
2. Turn feed spout straight down.
3. Drill $13/64"$ [5.15 mm] hole thru slot as shown.

Make sure to drill through the correct slot and from the correct side. Drilling incorrectly will not allow for proper operation.

4. Install the provided 10-24 x 2.25" [51.15 mm] screw and lock nut. Tighten this screw and lock nut until snug.
5. Tighten the top screw and nut.
6. Install the brood extension onto the feed spout.
7. Adjust brood extension to the desired height with a minimum of 1" [25.4 mm] overlap onto feed spout.

