



## Floor Regulator Hook-Up Instruction

### Part Number 53146


#### Installation

1. Cut the 5/8" [1.59 cm] water supply hose to the proper length before installation to avoid excess hose. When installed the supply hose should be 2 to 3" [5.08 to 7.62 cm] off the floor.
2. Install the barbed adapter to the cut end of the supply hose as shown in detail 1.
3. Connect the supply hose to the water supply using the barbed adapter end of the hose.
4. Connect the supply hose to the water regulator as shown in detail 2. The factory installed adapter on the supply hose must be connected to the water regulator.

#### Note:


**DO NOT over tighten fittings when assembling threaded connections!**

**Use only thread sealant tape or compound approved for ABS plastic on the regulator's threaded fittings. Failure to do so could result in damage to the regulator and void the warranty.**

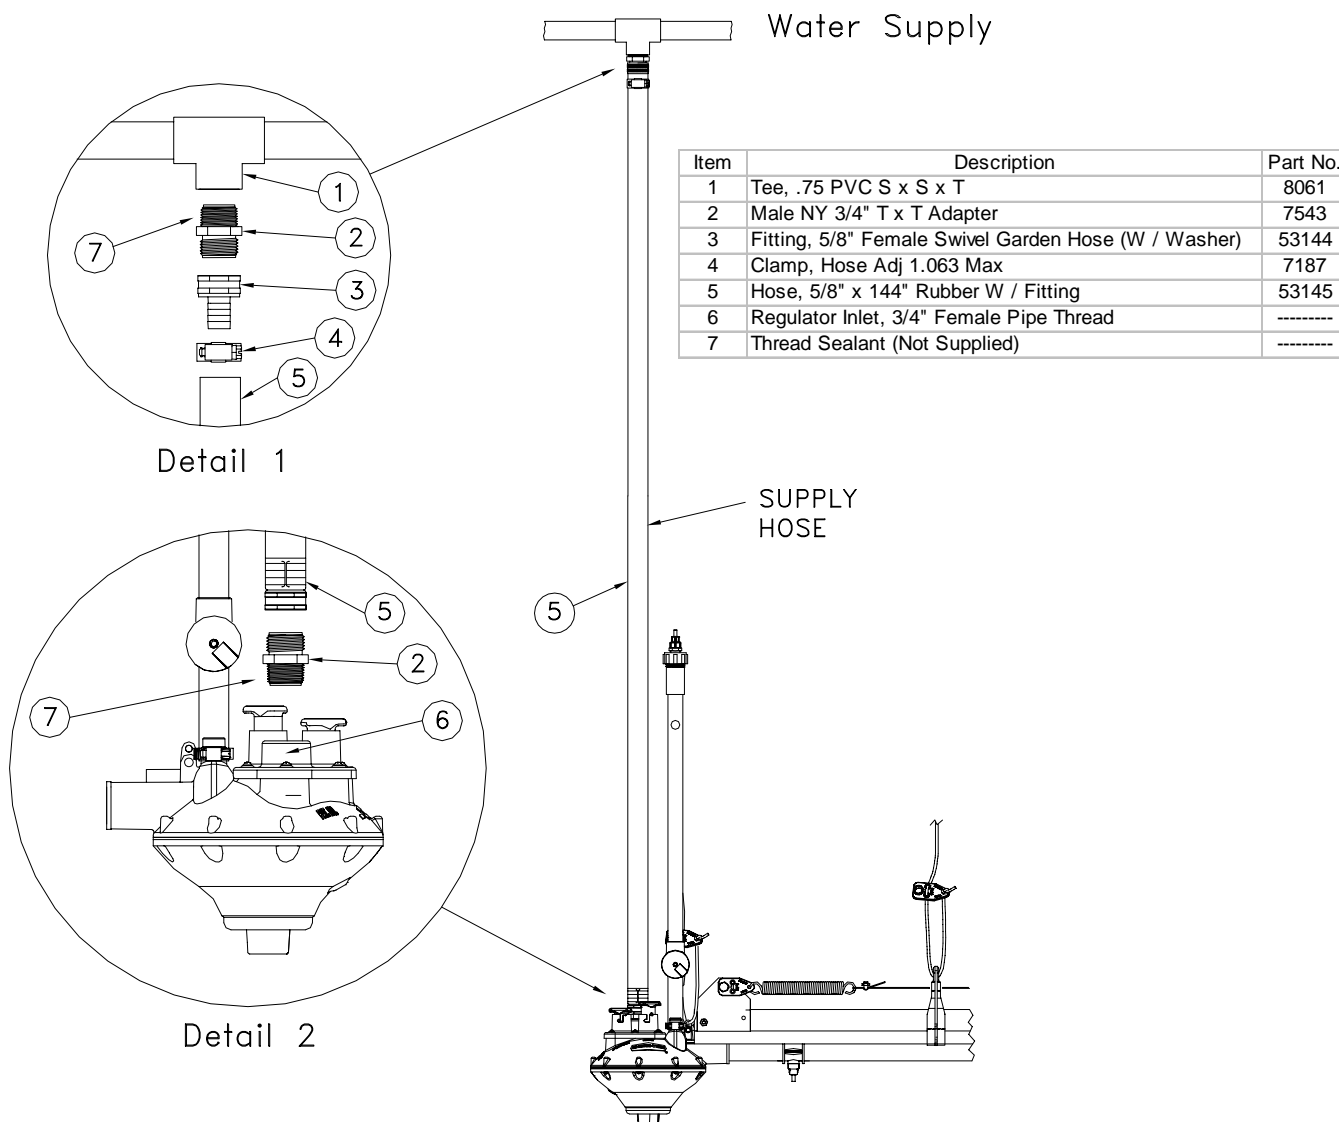

Chore-Time Poultry Production Systems, a Division of CTB, Inc.  
P.O. Box 2000 • Milford, Indiana 46542-2000 • U.S.A.  
Phone (574) 658-4101 • Fax (877) 730-8825

E-Mail: [poultry@choretime.com](mailto:poultry@choretime.com) • Internet: [www.choretimepoultry.com](http://www.choretimepoultry.com)

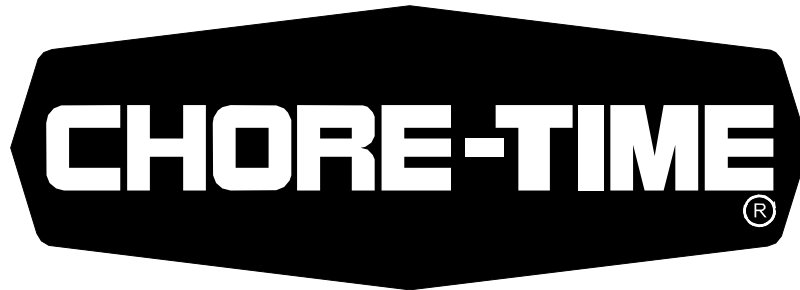

**MADE TO WORK.**

**BUILT TO LAST.®**

Contact your nearby Chore-Time distributor or representative for additional parts and information.

CTB Inc.  
P.O. Box 2000 • Milford, Indiana 46542-2000 • U.S.A.  
Phone (574) 658-4101 • Fax (877) 730-8825  
E-mail: [poultry@choretime.com](mailto:poultry@choretime.com) • Internet: [www.choretimepoultry.com](http://www.choretimepoultry.com)

Printed in the U.S.A.