





Electric Power Lift Wiring Diagram

for 14613 Manual Control

IMPORTANT: FOR GE MOTOR, THE YELLOW AND BLUE MOTOR LEADS MUST BE PULLED OFF OF THE MOTOR TERMINALS, THE TERMINALS CUT OFF OF THE ENDS, AND STRIPPED BEFORE THEY ARE WIRE NUTTED TO THE SWITCH BOX LEADS.

1. Ground all electrical equipment.
2. All wiring must be done by a qualified electrician in accordance with local and national electric codes.

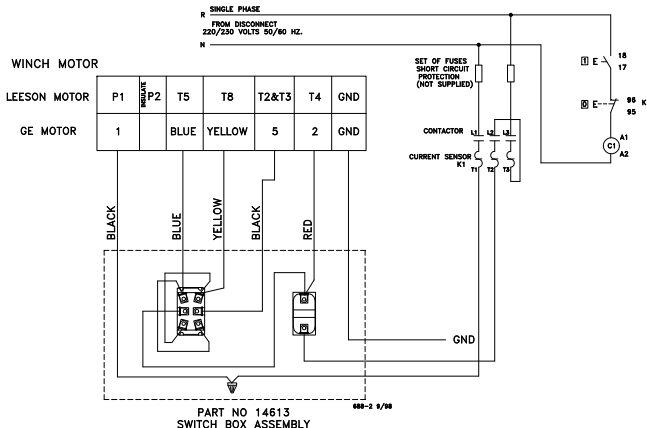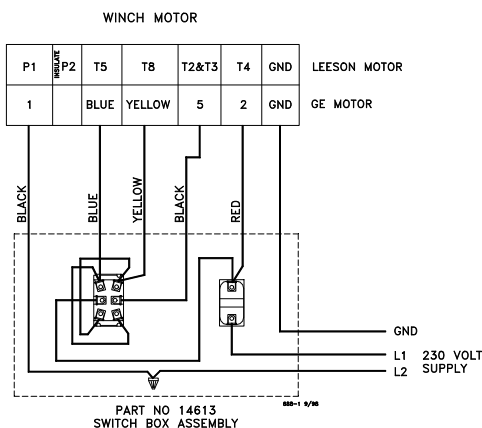

CTB, Inc.

P.O. Box 2000 • Milford, Indiana 46542-2000 • U.S.A.
Phone (219) 658-4101 • E-Mail: ctb@ctbinc.com

MF688C
October 1998

CTB, Inc.

P.O. Box 2000 • Milford, Indiana 46542-2000 • U.S.A.
Phone (219) 658-4101 • E-Mail: ctb@ctbinc.com

MF688C
October 1998