




# Snub Roller Replacement Kit

DC4 - Part Number 40801-1

DC5 - Part Number 40801-2

## Disassembly:


1. Release tension on the Egg Belts by pulling on the egg belts and clamping them in place.
2. From under the collector, remove and discard the metal Snub Roller Scrapers
3. Release tension on both sides of the Snub Roller Shaft and remove the 5/16" hex nuts, 5/16" bolt and spring on the outside only. See **Figure 1**.
4. Remove the Set Collar from the Bearing on the Roller Shaft. See **Figure 1**.
5. Remove the nuts that hold the Access Plate in place and remove the Access Plate. See **Figure 1**.

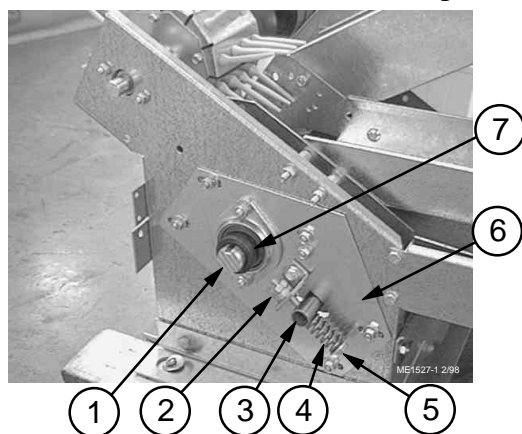

Item	Description
1	Roller Shaft
2	5/16" Hex Nut
3	Snub Roller Shaft
4	Spring
5	5/16" Bolt
6	Access Plate
7	Set Collar

Figure 1. Removing the Access Cover

6. Remove the flat washer and Snub Roller. See **Figure 2**.

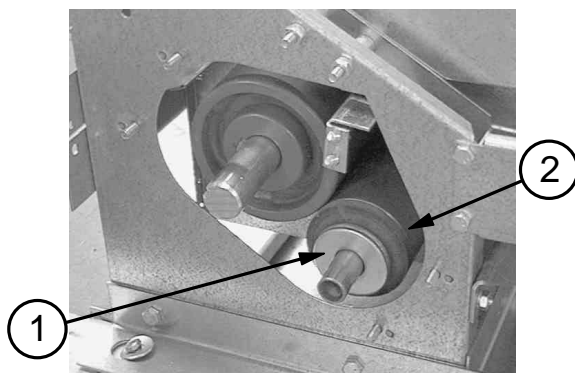

ME1527-2 2/98


Item	Description
1	Flat Washer
2	Snub Roller

Figure 2. Removing the Snub Roller

## Reassembly:

To reassemble the unit, reverse the above procedure using the new Snub Roller and attaching the new plastic Snub Roller Scrapers using the included Hair Pins. See **Figure 3**.

Adjust the tension on the Snub Roller according to the collectors manual.

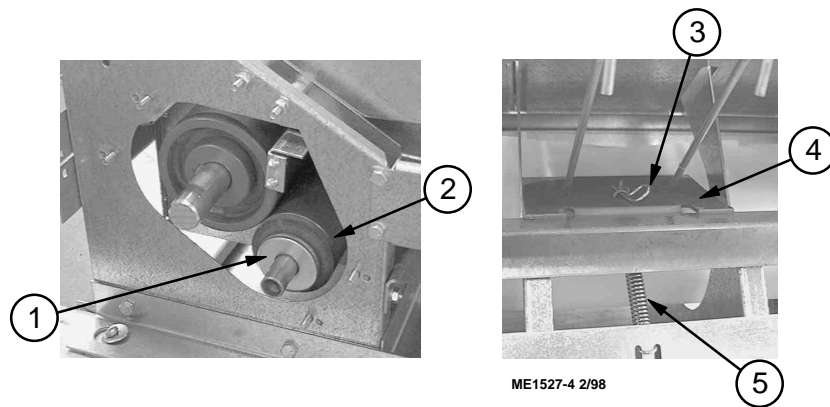

**Figure 3. Unit Reassembly**

Item	Description	Part No.
1	Flat Washer	548
2	Snub Roller DC4 DC5	40500-1 40500-2
3	Hair Pin	13906
4	Scraper	40497
5	Spring	29992