



Cubo[™] SG45 & SG150 Gas Line Instruction

- 1. Install Gas Line as shown in **Figure 1. below**.
 - •Configurations vary slightly between SG45 and SG150. The 55907 Adapter and 55906 Bushing is not required on the SG45.
- 2. Use Gas Pipe Tape (Supplied) on Threaded Connections.
- 3. The Gas Regulator (55897) includes a Vent Limiter and may be installed indoors on the ceiling, near the unit. Ensure that the Vent Limiter is oriented vertically.
- 4. The Gas Regulator (55897) comes with a Red Spring Pre-installed capable of 10-22 in. w.c. It is not pre-set to a certain pressure. If using propane gas, operating pressure should be 12-15 in. w.c. Therefore, adjustment is required. For Natural gas, operating pressure should be 7-9 in. w.c. To achieve this lower pressure the Violet Regulator Spring (56242-1) must be installed in place of the Red Spring supplied in the Regulator. Refer to the Cubo manual for exact gas pressures.

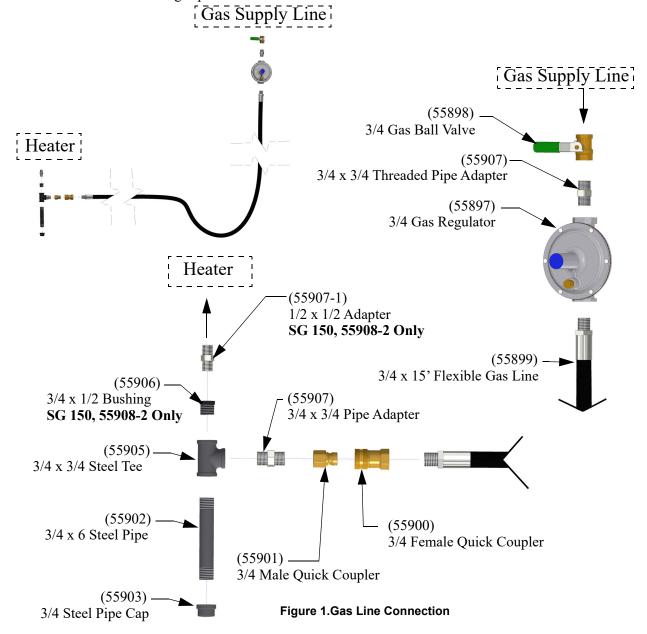

October 2017 MH2458C

Part Numbers

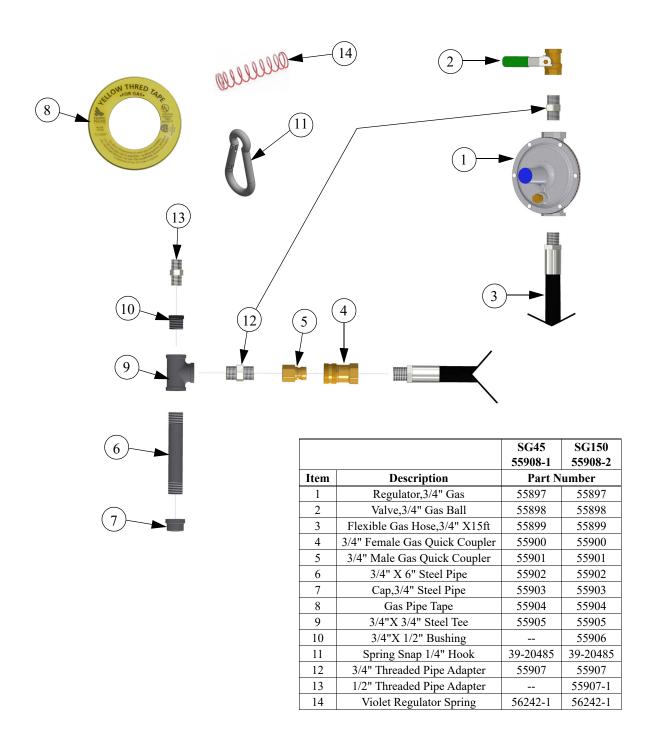

Revisions to this Manual

Page No. Description of Change

ECO

Added 56242-1 Spring

33275

Contact your nearby Chore-Time distributor or representative for additional parts and information. CTB Inc.

P.O. Box 2000 • Milford, Indiana 46542-2000 • U.S.A. Phone (574) 658-4101 • Fax (877) 730-8825
E-Mail: ctb@ctbinc.com • Internet: http://www.ctbinc.com
Printed in the U.S.A.