


Operational Quick Reference Sheet for the Model 100 Digital WEIGH-MATIC Indicator

The Digital WEIGH-MATIC Indicator becomes activated when 12 volt power is supplied.

A brief message will be displayed ("HELLO"). The scale then selects the GROSS weighing mode.

GROSS mode displays the weight change since the unit was last ZERO/BALANCED.

Pressing the ON key during normal system operation starts the self-test.

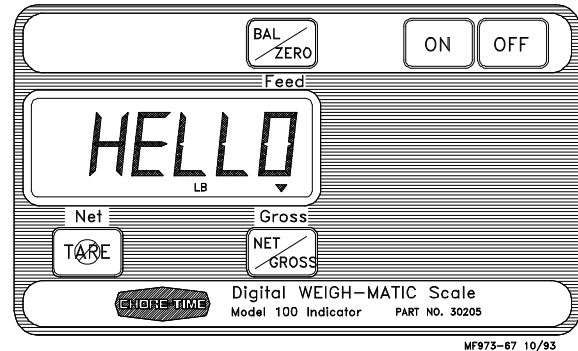

Balancing the Scale (Zero/Balancing)


1. Press the NET/GROSS key and within three seconds,
2. Press the BAL/ZERO key.

An audible tone will sound.

The ZERO/BALANCE will balance off the dead load (such as the bin, feed, auger, etc.)

"ZERO" is displayed to show completion of the step and the scale is then placed in the GROSS mode.

Pressing only the BAL/ZERO key will cause the following message to appear--"TO ZERO/BALANCE PRESS NET/GROSS - THEN ZERO."

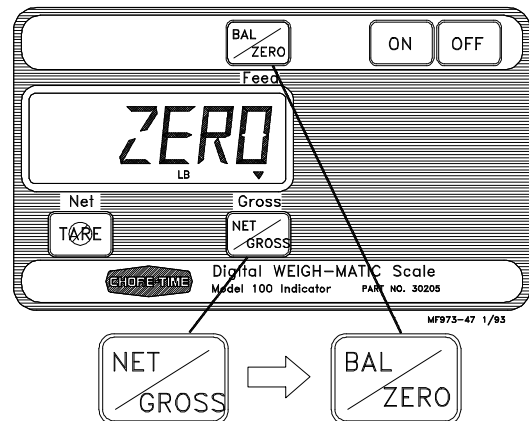


Selecting the GROSS mode

GROSS mode displays the weight change since the unit was last ZERO/BALANCED.

1. Press the NET/GROSS KEY.

Note: A flashing arrow pointing toward the GROSS text just above the NET/GROSS key indicates that the scale is in the GROSS mode.

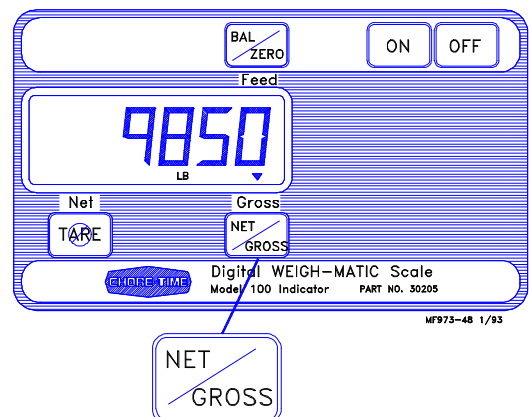


Selecting the NET mode

NET mode displays the weight change after a TARE has been performed. TARE is a temporary zero point.

1. If the scale TARE weight has not been entered, press TARE to display a zero.
- or
2. If in the GROSS mode, press NET/GROSS. The NET/GROSS key is an alternating action key. If the scale is in the GROSS mode, pressing the NET/GROSS key will place it in the NET mode. If the scale is in the NET mode, pressing the NET/GROSS key will place it in the GROSS mode.

If the TARE function has not been previously performed, the unit will stay in the GROSS mode and the following message will scroll across the screen--"FOR NET MODE PRESS TARE."

NOTE: A flashing arrow pointing toward the NET text just above the TARE key indicates that the scale is in the NET mode.

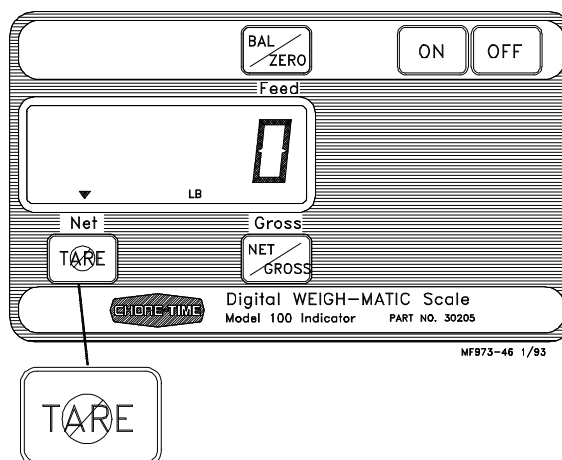

Changing the Display Language

The Model 100 Digital Weigh-Matic Indicators include a multilingual feature built in.

Five languages are available. They include the following; English, Dutch, French, German, and Spanish. Follow the steps, below, to change the language to be displayed by your Indicator.

1. Press and hold the **NET/GROSS** key, then press the **ON** key.
Display: {Langag}
2. Press the **NET/GROSS** key to toggle through the languages available.
Display: {ENGLISH} = English
 {NEDERL} = Dutch
 {FRANCS} = French
 {DEUTSH} = German
 {ESPANL} = Spanish
3. When the desired language is displayed, press the **ON** key.
4. Press and hold the **TARE** key, then press the **ON** key to exit the program.

The display will be in the language selected.

Contact your nearby Chore-Time distributor or representative for additional parts and information.

Chore-Time Equipment, A Division of CTB, Inc.
P.O. Box 2000, Milford, Indiana 46542-2000 U.S.A.
Phone: 219-658-4101

Printed in the U.S.A.