

ULTRAPAN® Nylon Elbow Loop Kit Installation Instructions Part Number 48351

Introduction

The 48351 Nylon Elbow loop Kit is used to make (2) 180 degree turn in an ULTRAPAN System. Also available is a 47951 ULTRAPAN Nylon Elbow kit. This kit contains (1) 90 degree elbow with adapters.




Installation

1. Assemble the Adapters into the Elbow Halves

The lances in the adapter should be facing out.

Elbow Half -

Elbow Half

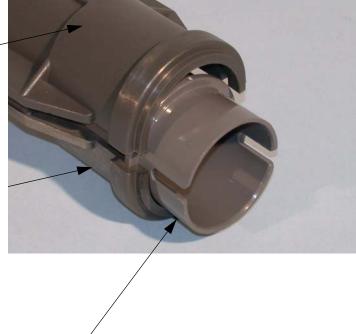

Adapter

May 2003 MF1762A

2. Assemble the Adjustable Clamps to each end as shown.

Adjustable Clamp Band



3. Install the insulator bracket using the elbow strap and two 1/4-20 bolts andnuts.




Insulator bracket with elbow strap. the strap will have to be shaped around the elbow.



4. Slide the steel connecting tube in the adapter,. Note: Steel tube used to join the two elbows together. secure the tube using a adjustable clamp. The tube will make the feeder 9 ft. center to center. see photo at the side.


Adjustable clamp

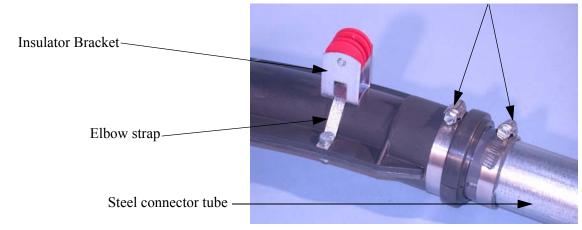

2 MF1762A

Parts Listing

ULTRAPAN Nylon Elbow Kit

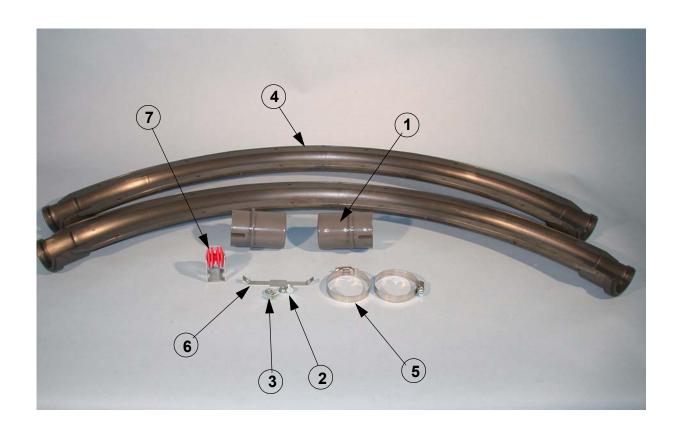

Item	Description	Part No.
1	Molded Elbow Adaptor	46979
2	Adjustable Clamp	8643
3	1/4-20 x .75 HX HD Bolt	1133
3	1/4-20 HX FLG Nut	46460
4	90° Molded Elbow Half	46779
5	Adjustable clamp	8643
6	Elbow strap	48357
7	Insulator Bracket	24060
	5 Foot ext. tube	48358
	Tube adapter (Steel)	28107

ULTRAPAN Loop Kit Part No. 48351

ULTRAPAN elbow kit Part No. 47951



Made to work. Built to last.

Contact your nearby Chore-Time distributor or representative for additional parts and information.

CTB Inc.
P.O. Box 2000 • Milford, Indiana 46542-2000 • U.S.A.
Phone (574) 658-4101 • Fax (877) 730-8825
E-Mail: poultry@choretime.com • Internet: http://www.choretime.com

Printed in the U.S.A.

MF1762A