

**INSTALLATION**

The 4807 Switch is no longer available and has been replaced with the 8005 Switch.


To replace the switch:

1. Move the wire connections from the 4807 Switch to the 8005 Switch as shown in the hook-up chart in Figure 1.



**4807 SWITCH**

Figure 1.

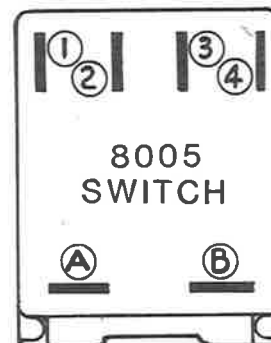

Remove "L" Terminal Wire	→	Hook up to "A" Terminal
Remove "1" Terminal Wire	→	Hook up to "2" Terminal
Remove "2" Terminal Wire	→	Hook up to "3" Terminal
Remove "3" Terminal Wire	→	Hook up to "1" Terminal
Remove "4" Terminal Wire	→	Hook up to "4" Terminal

**NOTE:** NOT ALL WIRE HOOK-UPS SHOWN ARE REQUIRED FOR STATIC MONITOR OR POULTRY TRAINER APPLICATIONS.

2. Remove the 4807 Switch from the mounting panel. (For poultry trainer applications the locating tab must be removed from the mounting hole.)
3. Turn the shaft on the 8005 Switch to the farthest counter-clockwise position and mount in the panel so that the adjustment knob points to "OPEN" on the Static Monitor, or "OFF" on the Poultry Trainer.