CHORE-TIME

Programming the CHORE-TIME 4-Group ULTRAFLO Control

Use the following step-by-step procedure to program the CHORE-TIME ULTRAFLO Control Panel. The programming procdure takes one FUNCTION at a time and leads you through the STEPS required to program the necessary information into that function. After each action taken, check the display to see that it shows what is shown in the DISPLAY column of the programming procedure.

It is easy to program the CHORE-TIME ULTRAFLO Control Panel. The control cannot be damaged by pushing the wrong button. Once a program has been entered into the control, the program will not be affected by pushing any of the buttons unless the **CHANGE** button has been pressed first. Even if you should accidently push the **CHANGE** button and then push another button, only the information in the illuminated function will be changed. That function can be reprogrammed easily. So do not be afraid to try the different buttons to see what they do.

FUNCTION	STEP	DISPLAY
TIME OF DAY	1 Press **TIME OF DAY** key	Time of day
	2 Press **CHANGE** key	Flashing hours Steady minutes
	3 Press ▲/▼ keys to set hours	
	4 Press CHANGE key	Steady hours Flashing minutes
	5 Press ▲/▼ keys to set minutes	
	6 Press **ENTER** key	Correct time
	NOTE: Red dot lit on right side of display indicates P.M.	
RUNNING TIME PER GROUP	1 Press **RUNNING TIME PER GROUP** key	Running time
	2 Press **CHANGE** key	Flashing minutes Steady seconds
	3 Press ▲/▼ keys to set minutes	
	4 Press **CHANGE** key	Steady minutes Flashing seconds
	5 Press ▲/▼ keys to set seconds	
	6 Press **ENTER** key	Correct running time
	Note: To set the running time per group for a stimulation cycle, press RUNNING TIME PER GROUP key, release it, and press arrow up key. Then continue with steps 2 through 6.	
NUMBER OF MEALS UP TO 12 PER DAY	1 Press **NUMBER OF MEALS** key	Number of meals
	2 Press **CHANGE** key	Colon flashes
	3 Press ▲/▼ key(s) to set number of meals	
	4 Press **ENTER** key	Correct no. of meals
MEAL STARTING TIMES	1 Press **MEAL STARTING TIMES** key	Alt. flash meal no. and meal starting time
	2 Press **CHANGE** key	Flashing hours Steady minutes
	3 Press ▲/▼ key(s) to set hours	
	4 Press **CHANGE** key	Steady hours Flashing minutes
	5 Press ▲/▼ key(s) to set minutes	
	6 Press **ENTER** key	Alt. flashing of meal no. and desired start time
	7 Press ▲/▼ key(s) to advance to next meal and follow steps 2 through 6.	

FUNCTION	STEP		DISPLAY
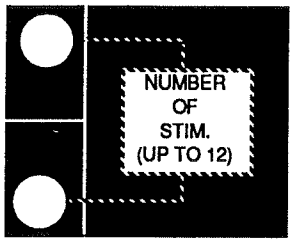			
	1	Press **NUMBER OF STIM.** key	Number of stim cycles
	2	Press **CHANGE** key	No. of stims / flash colon
	3	Press ▲/▼ key(s) to set number of stims	
	4	Press **ENTER** key	Correct no. of stims
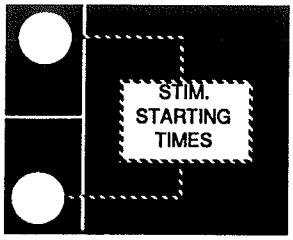	1	Press **STIM. STARTING TIME** key	Alt. flash stim no. and stim starting time
	2	Press **CHANGE** key	Flashing hours Steady minutes
	3	Press ▲/▼ key(s) to set hours	
	4	Press **CHANGE** key	Steady hours Flashing minutes
	5	Press ▲/▼ key(s) to set minutes	
	6	Press **ENTER** key	Alt. flashing of stim no. and desired start time
	7	Press ▲/▼ key(s) to advance to next stim and follow steps 2 through 6.	

Reviewing the Program

To review your program, press the desired function key (press ▲ or ▼ to step through functions IV and VI). To return to **TIME OF DAY** function, press the **TIME OF DAY** key. Once programmed, all keys, except the CHANGE key, may be pressed without affecting your program.

CHORE-TIME

ULTRA FLO®

Contact your nearby Chore-Time distributor or representative for additional parts and information.

Chore-Time Equipment, A Division of CTB, Inc.
P.O. Box 2000, Milford, Indiana 46542-2000 U.S.A.

Printed in the U.S.A.